
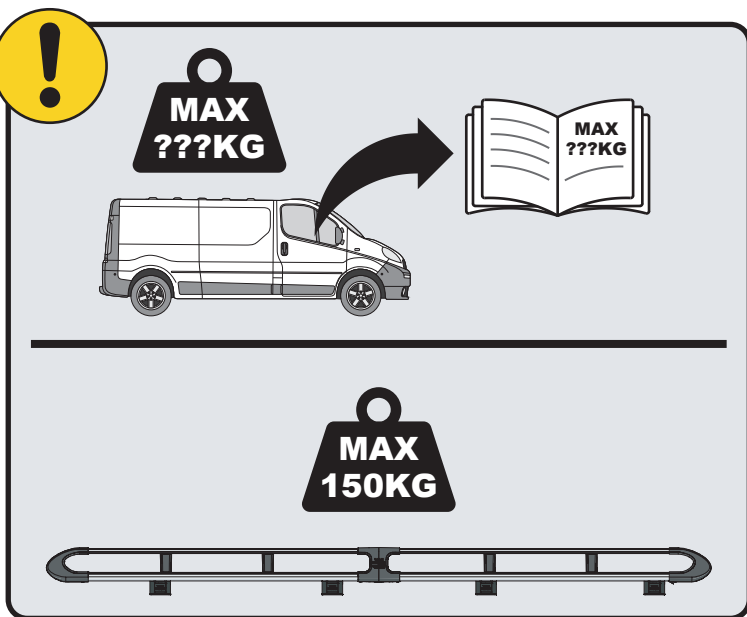


IN8274

ULTI Rack+

2

**VAN
GUARD**

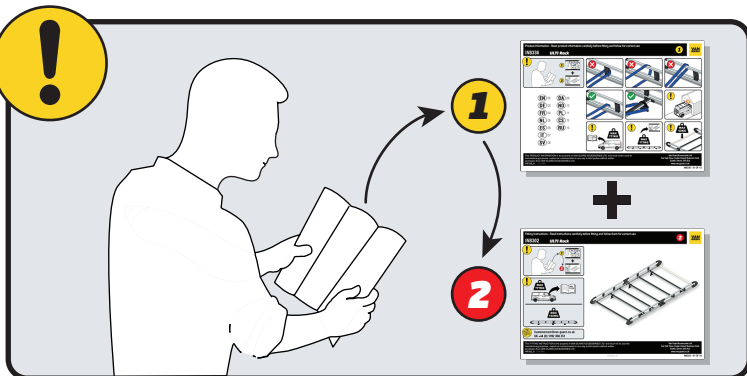



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8274_A (CN:NR)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-203

Nissan Primastar: 2002-2014
Renault Trafic: 2002-2014
Vauxhall Vivaro: 2002-2014


L2H1 (LWB)
Twin Rear Doors

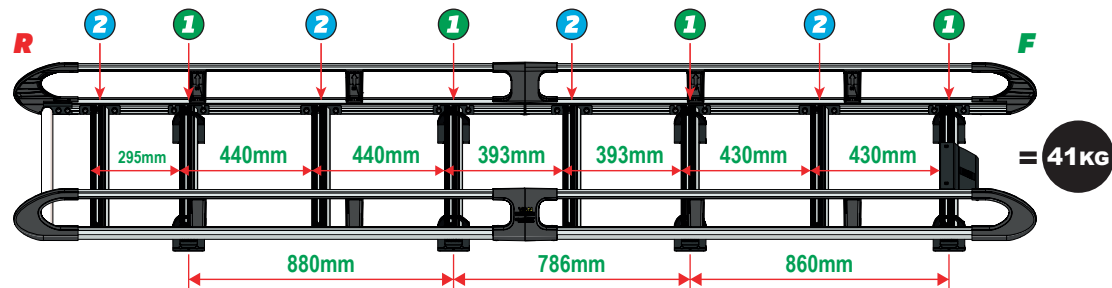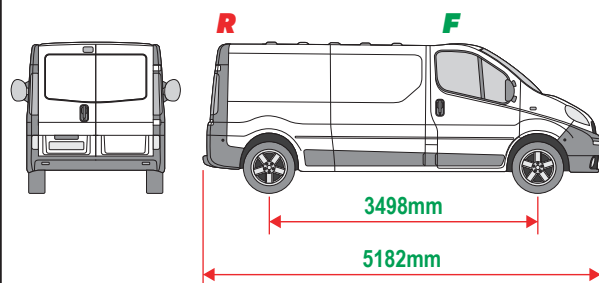



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X1

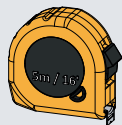


13MM X1

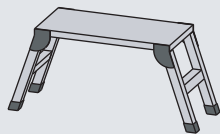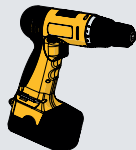


AS3543 X2
(3200 / A)

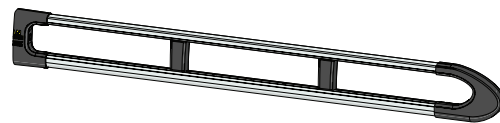


MA6118 X16




FX4241 X36



ME1622 X4




AS3542 X2
(3200 / B)




FX4008 X1




MA6145 X1



ME1623 X4



ME1628 X8
(1554mm)




FX4001 X2
(M8X40)




FX4235 X32
(M5X25)




ME0203 X8




AS3160 X1
(1540mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X8




AS3590 X1

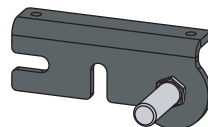


MA6093 X18



FX4239 X36
(M8X20)




ME1620 X4




FX4016 X26
(M6)



AS3591 X1




ME0316 X18




FX4240 X36
(M8)



ME1621 X4



FX4042 X26
(M6X16)



ME0355 X1




FX4017 X16

(M6)




ME0690 X1

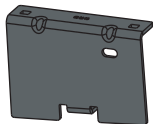


FX4061 X2


(M6X14)




ME0691 X1

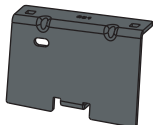

FX4126 X14



ME0692 X6

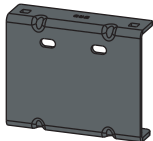


FX4010 X16

(M6)



FX4012 X14

(M6X16)




01

1L



X4

1R



X4



2L





X4

2R



X4


02

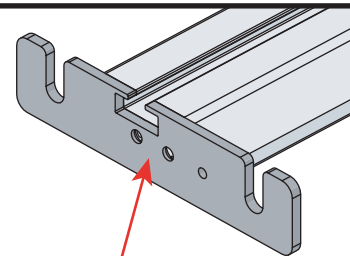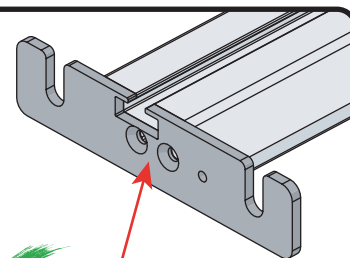


03

01


FX4248

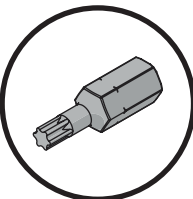

02

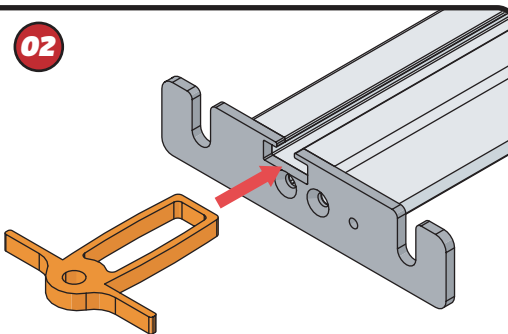


04

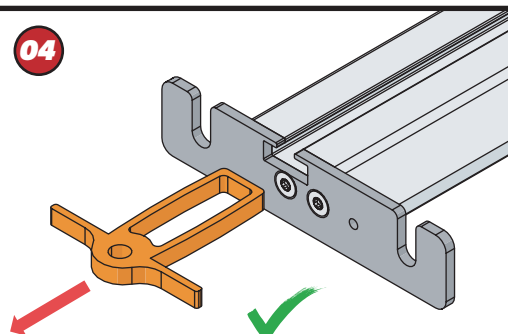

03



11Nm

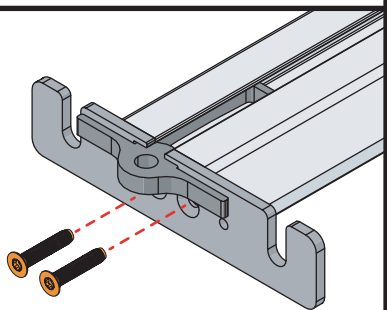


04






1

X4

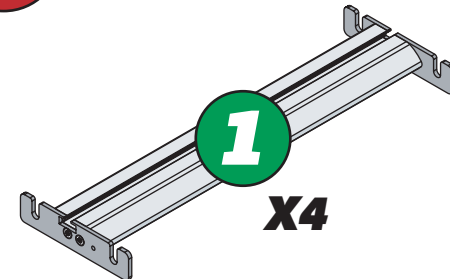


2


X4

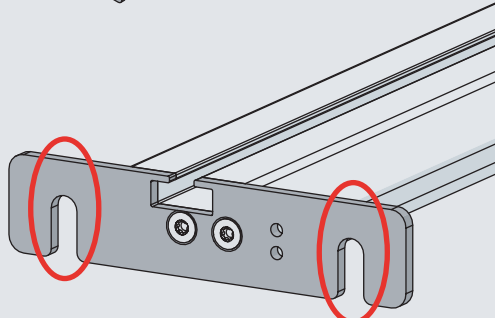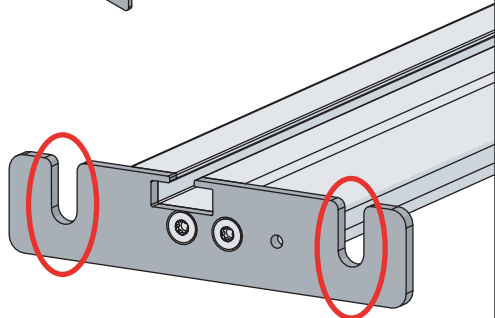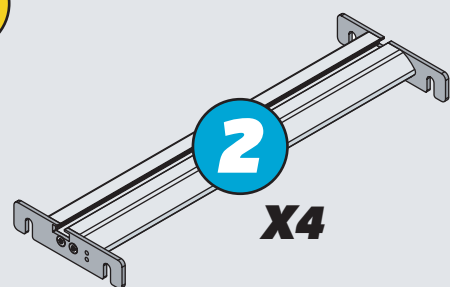


05

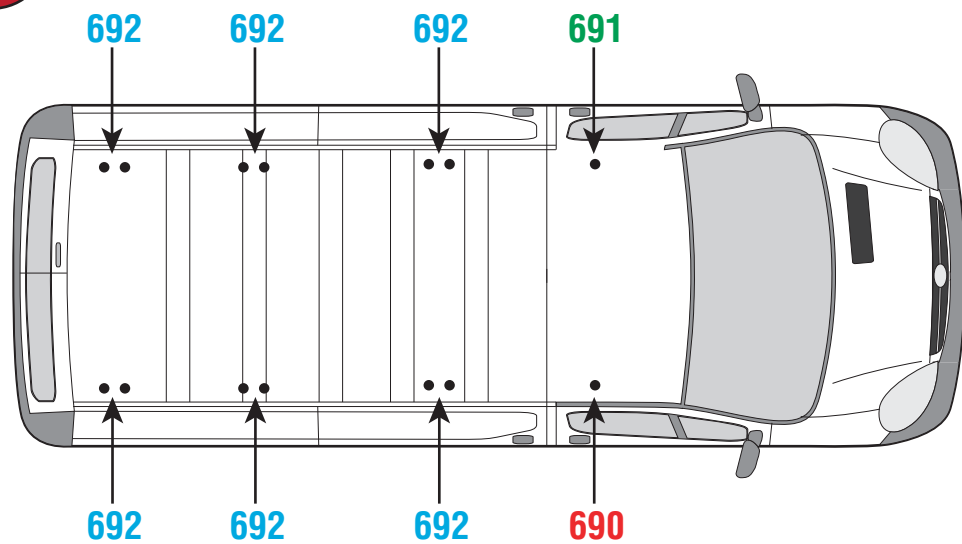


690

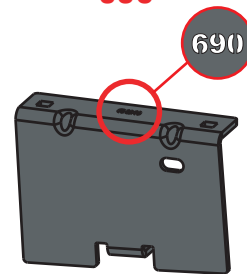


691

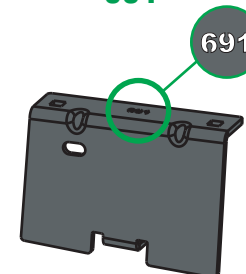


692

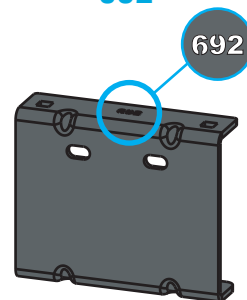


06

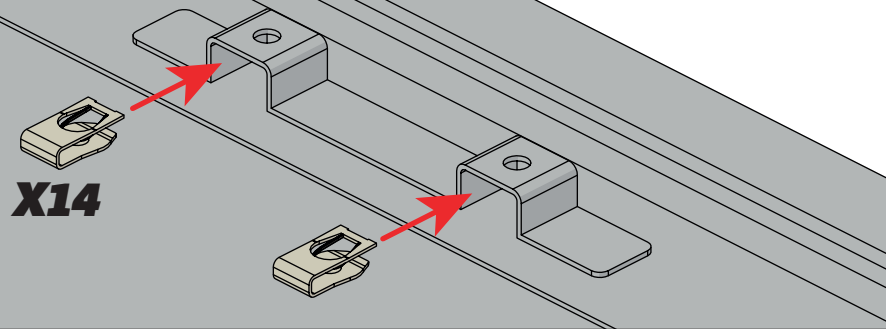


07

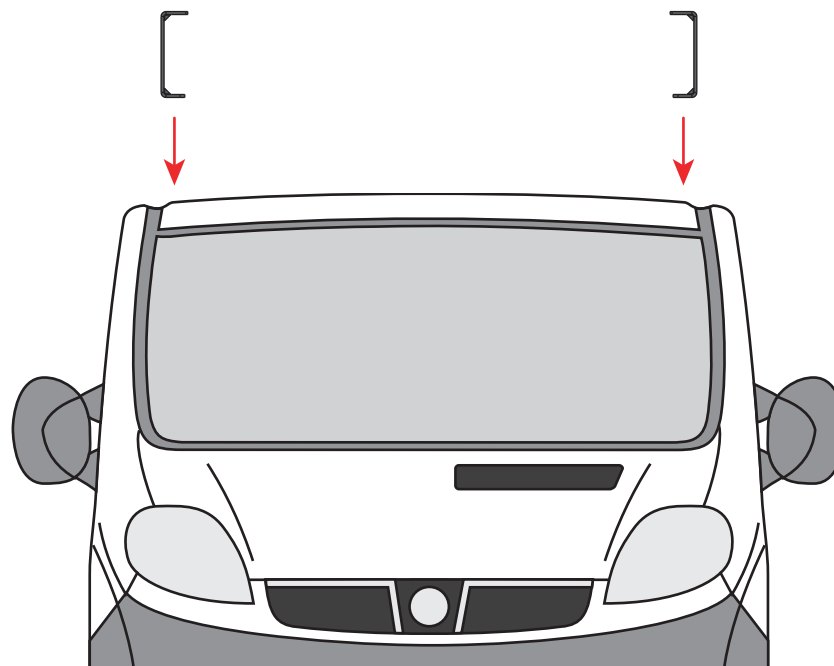


08

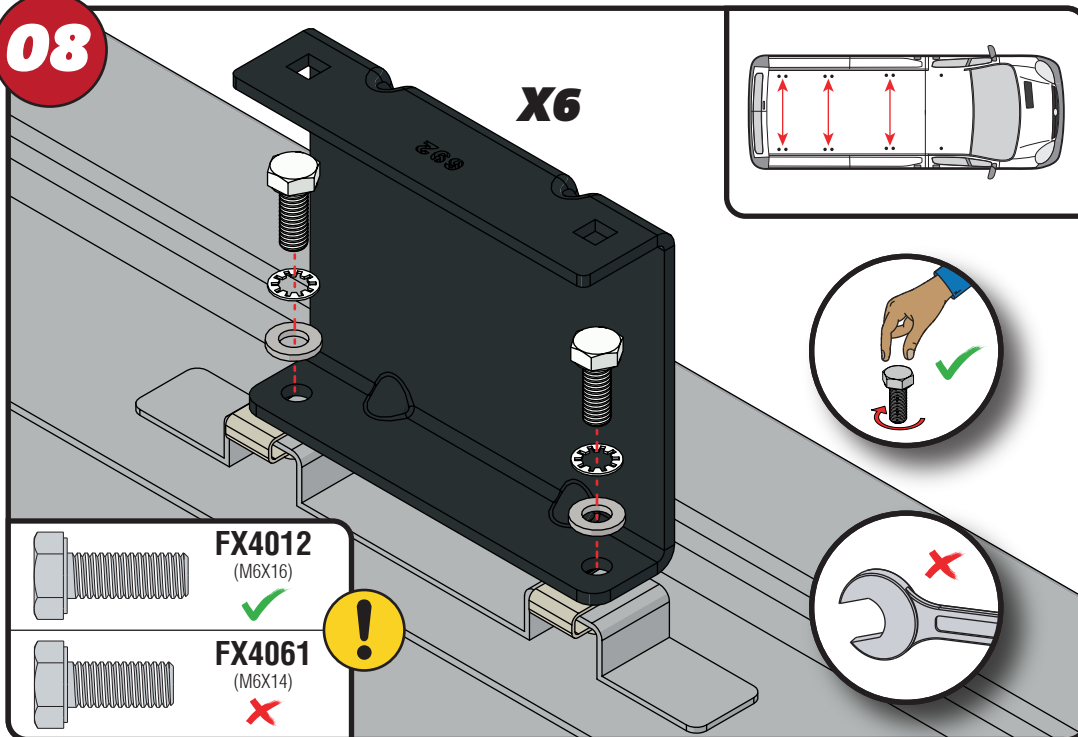


09

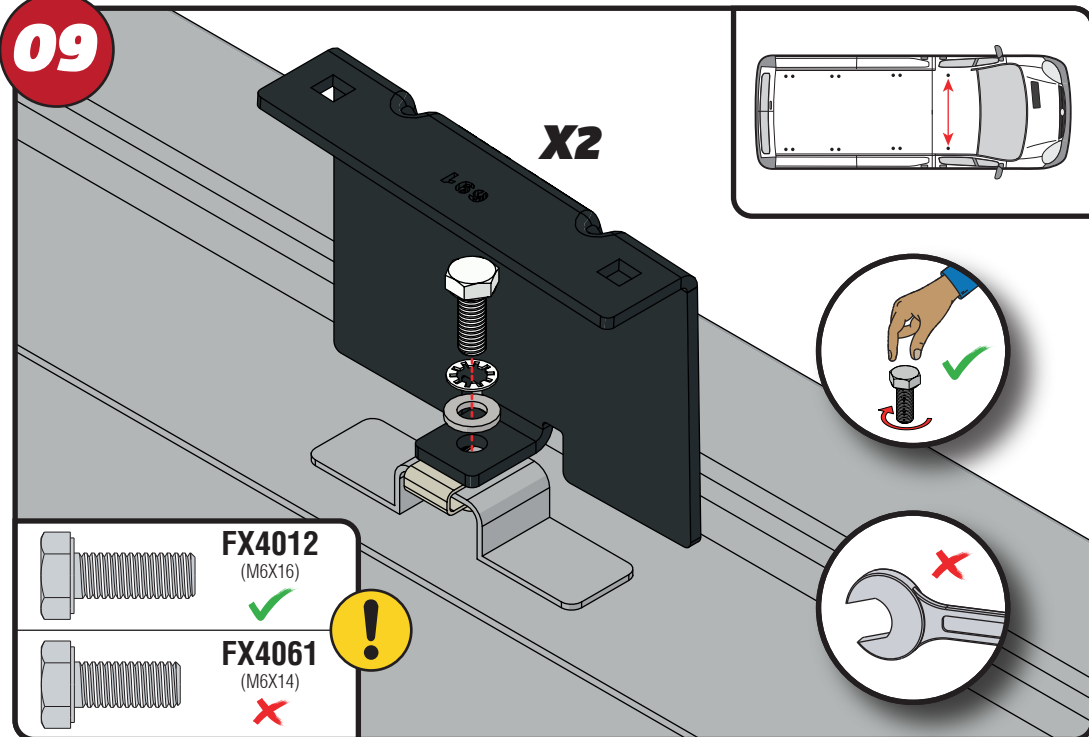


10

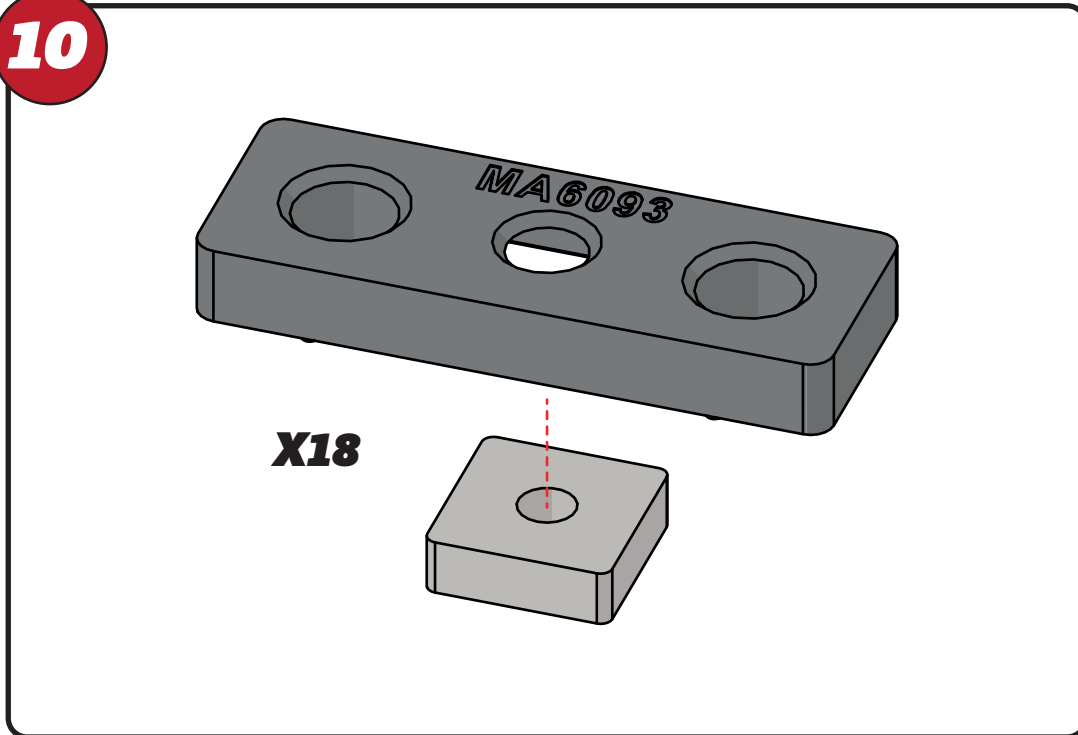


11

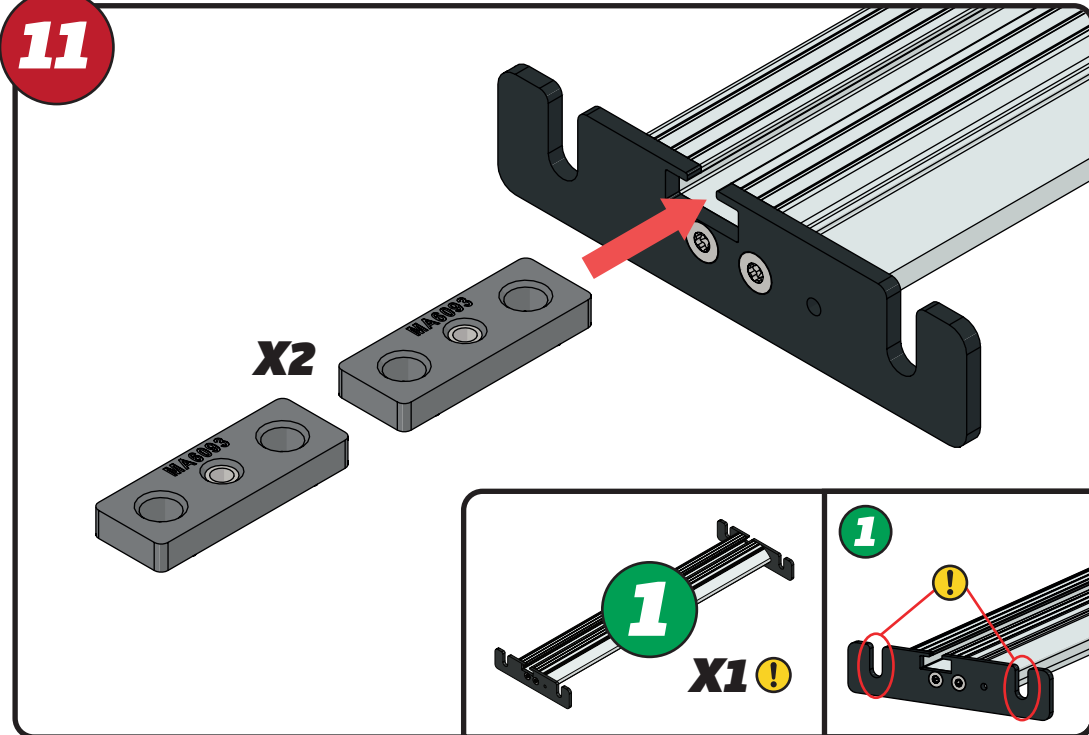


12

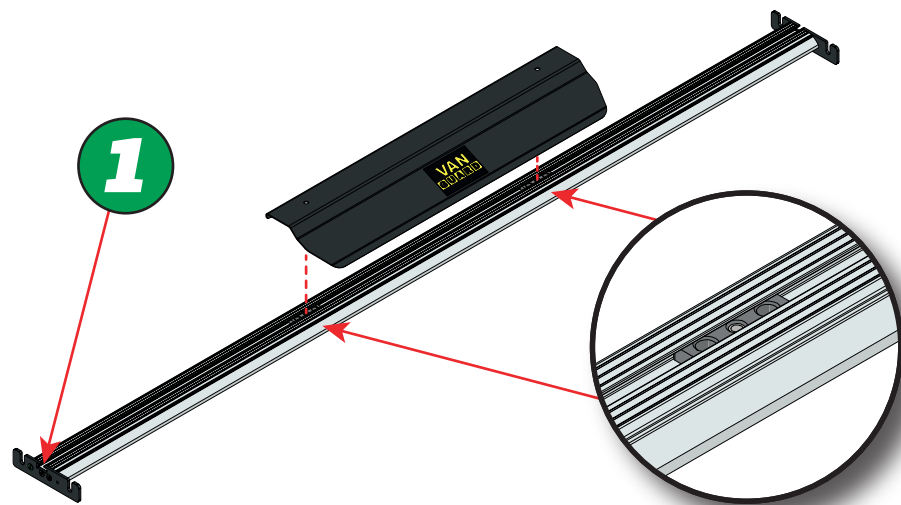

13

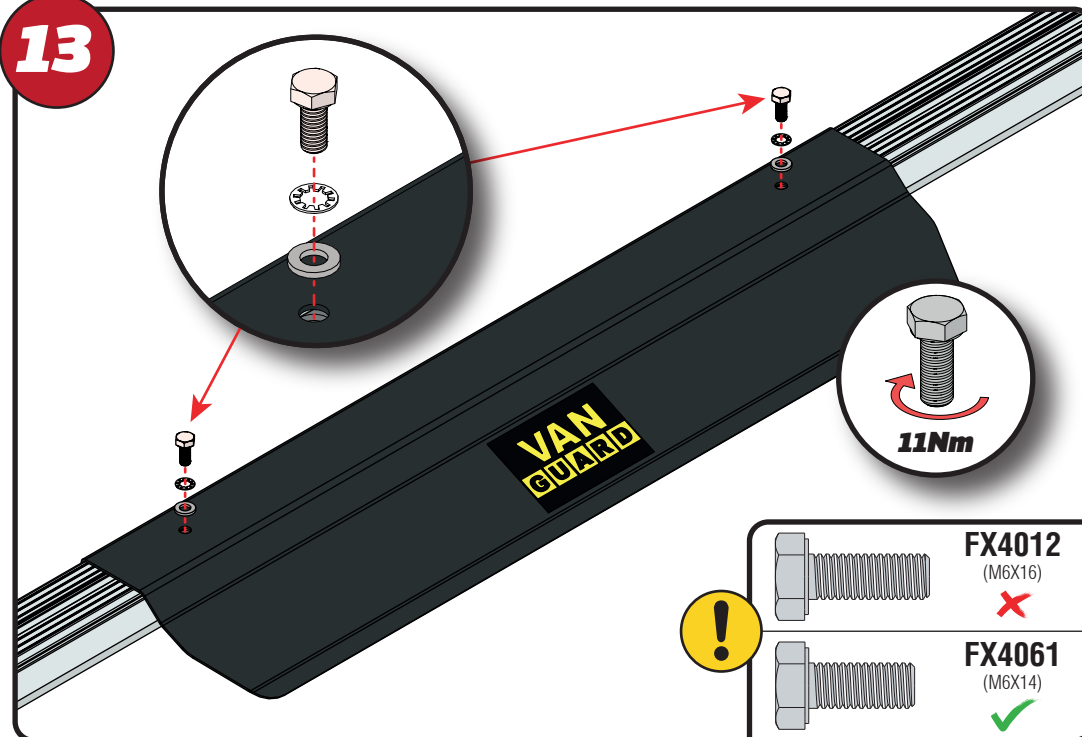


14

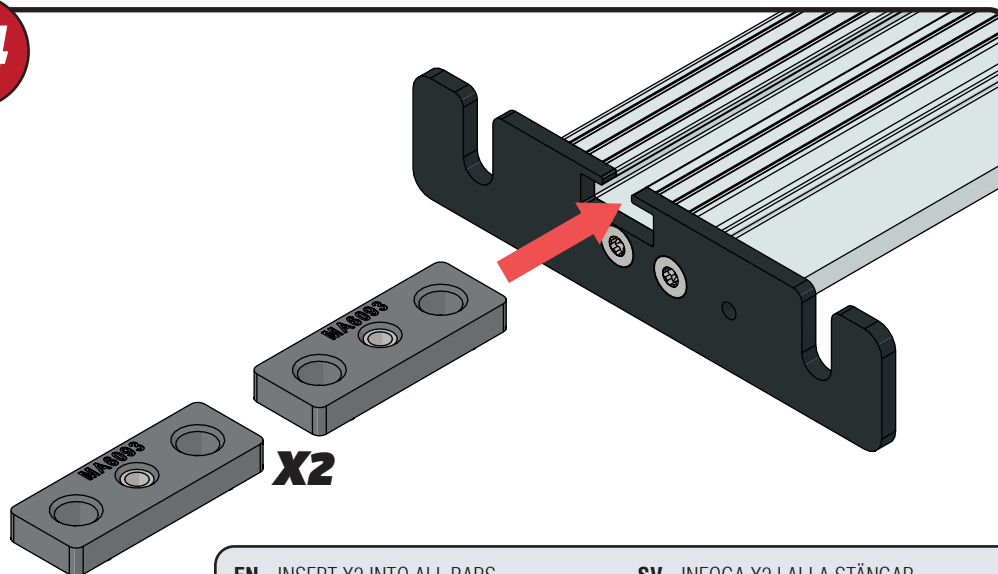


EN - INSERT X2 INTO ALL BARS
 DE - X2 IN ALLE STANGEN EINFÜGEN
 FR - INSÉRER X2 DANS TOUTES LES BARRES
 NL - PLAATS X2 IN ALLE BARS
 ES - INSERTAR X2 EN TODAS LAS BARRAS
 IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
 DA - INDSÆT X2 I ALLE STÆNGER
 NO - SETT X2 INN I ALLE TAKSTENGER
 PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
 CS - VLOŽTE X2 DO VŠECH TYČÍ


15

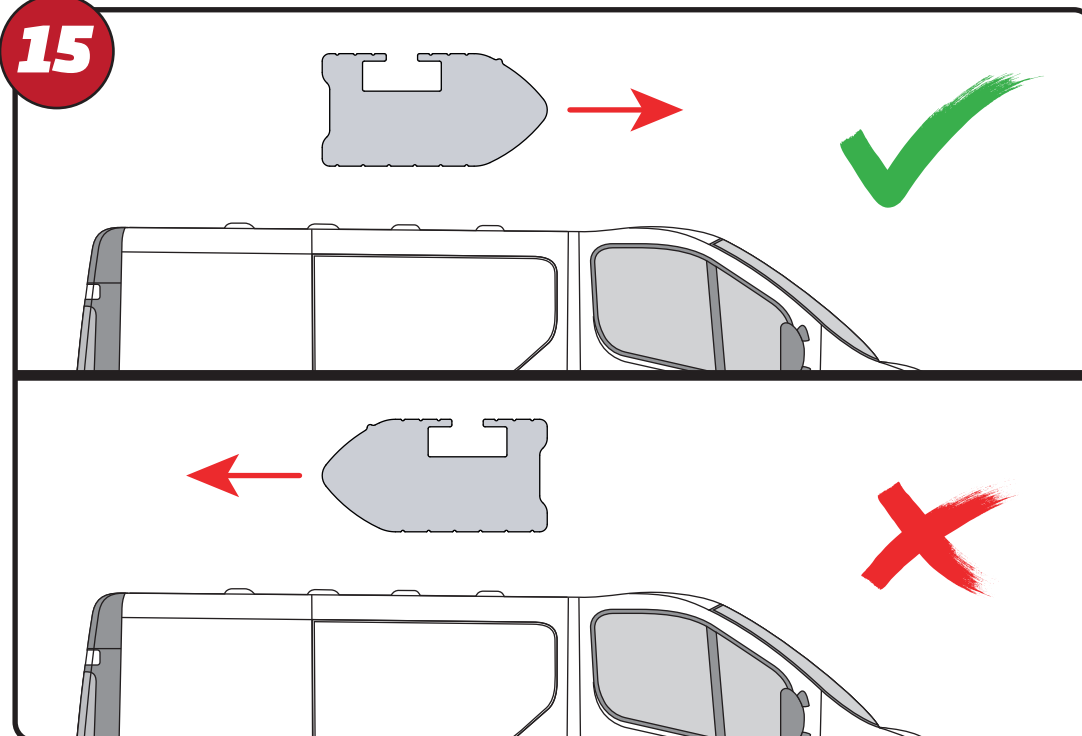


16

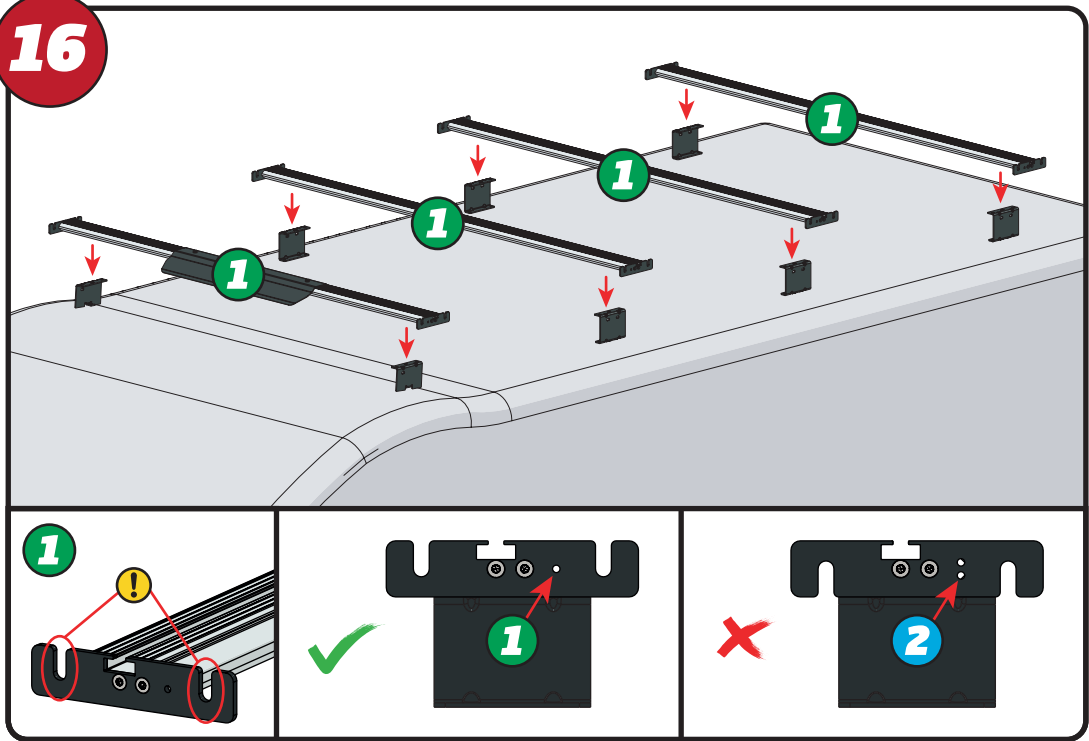


17

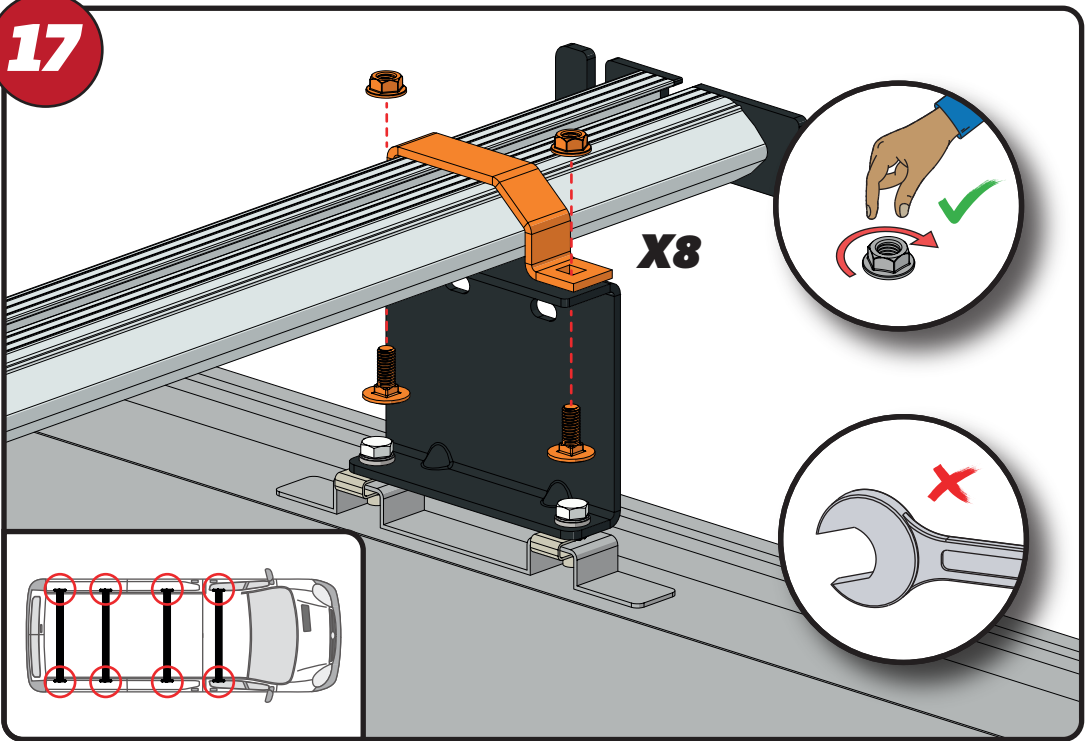


18

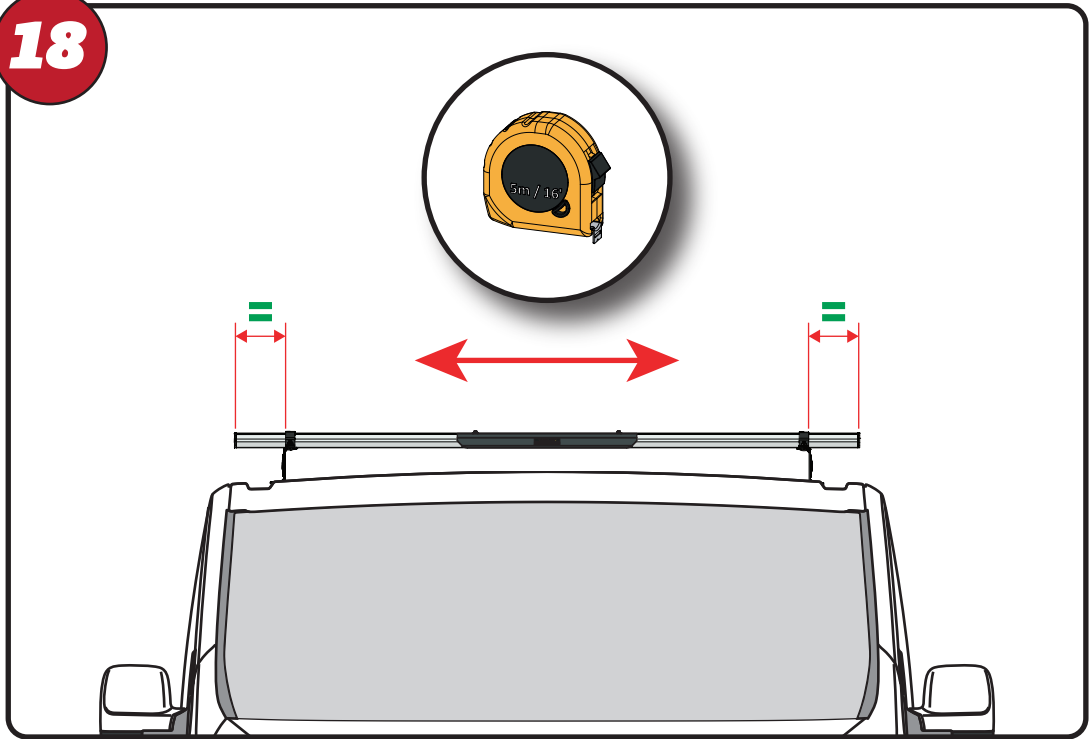


19

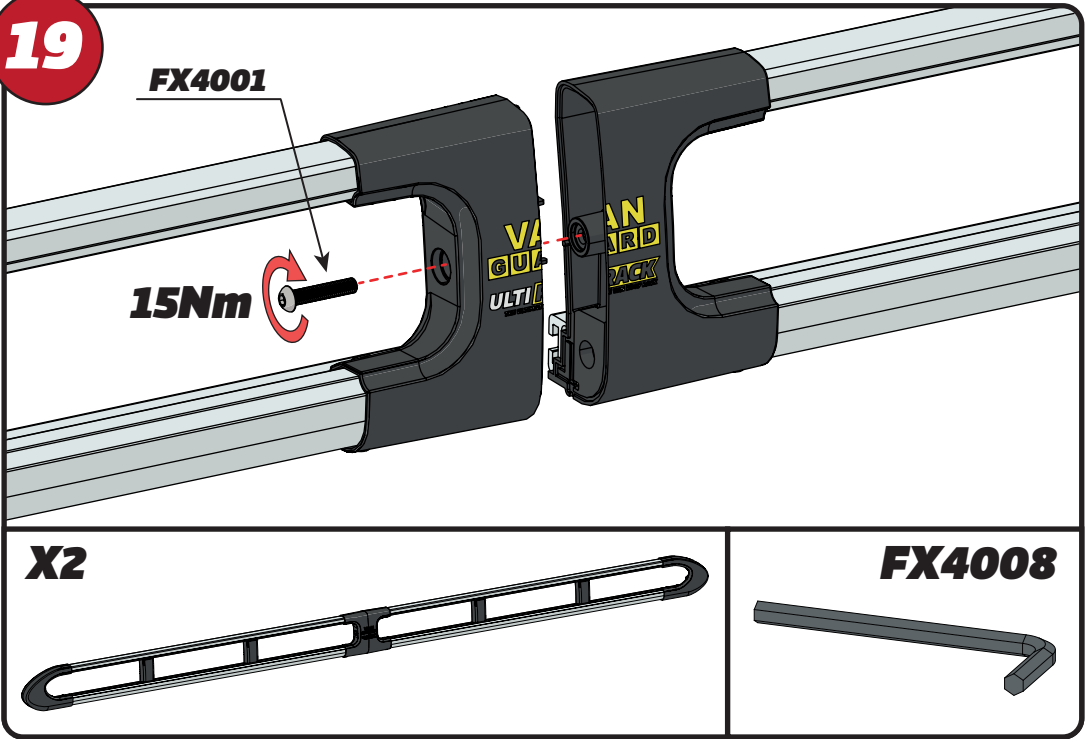


20

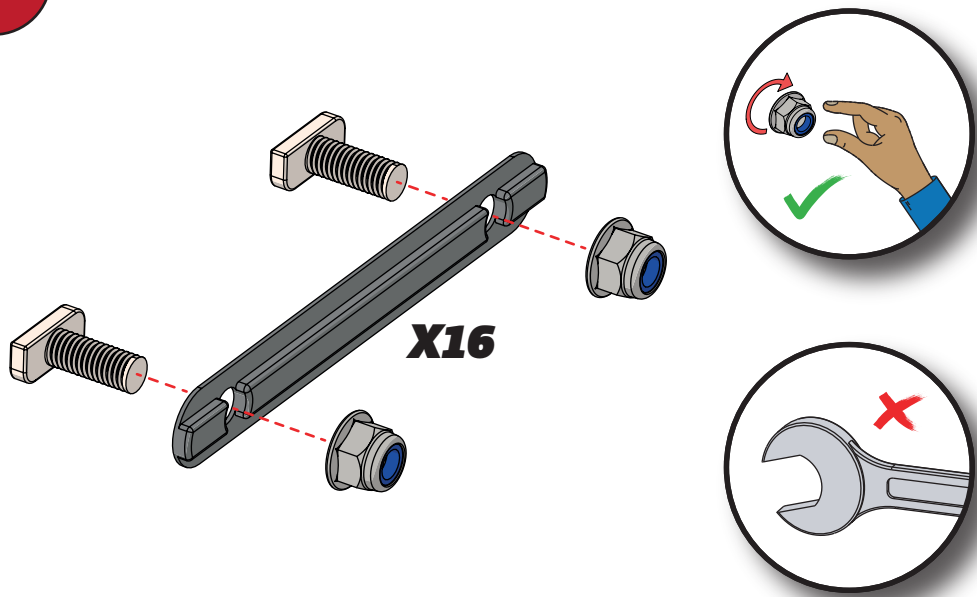


21

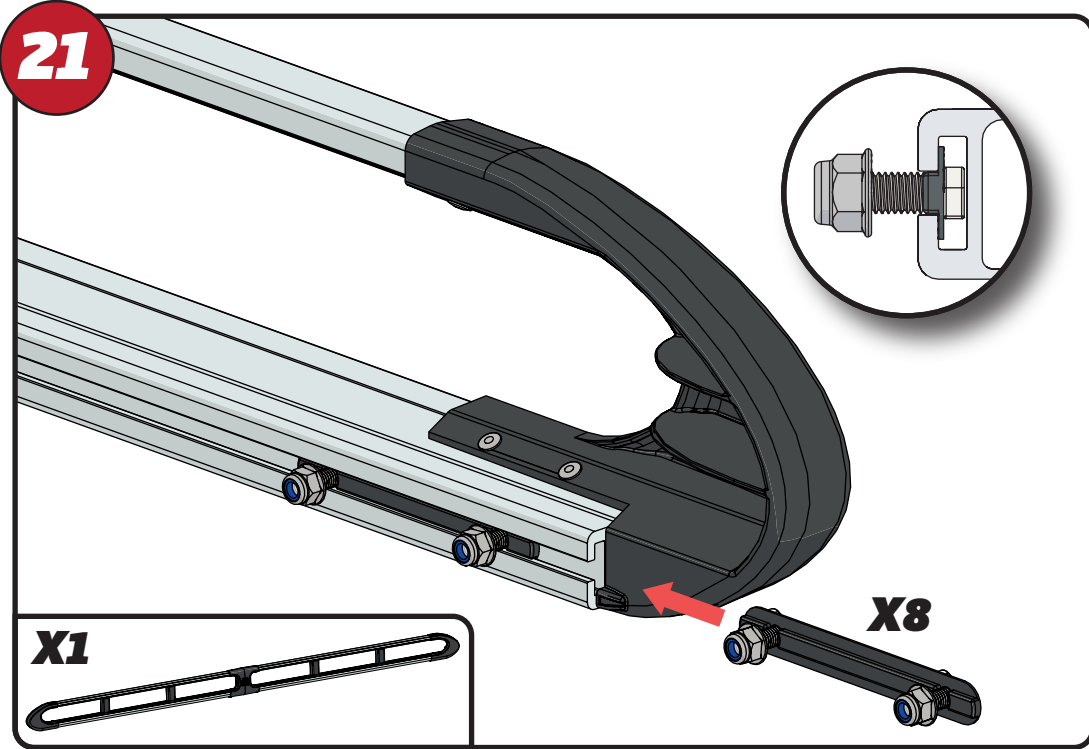


22

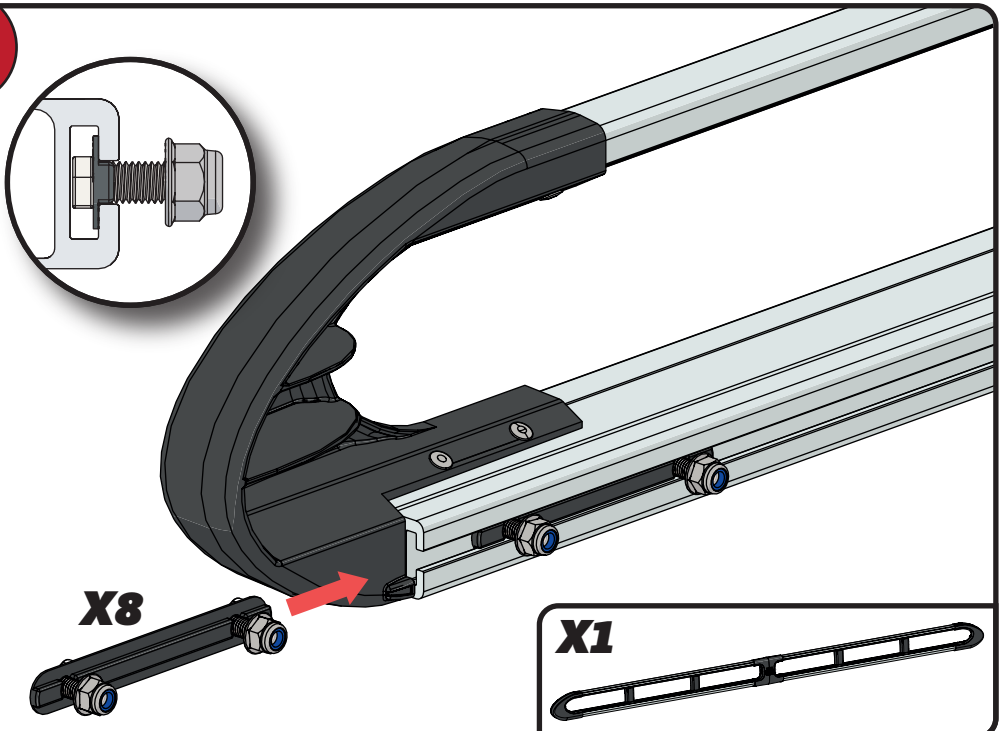


23

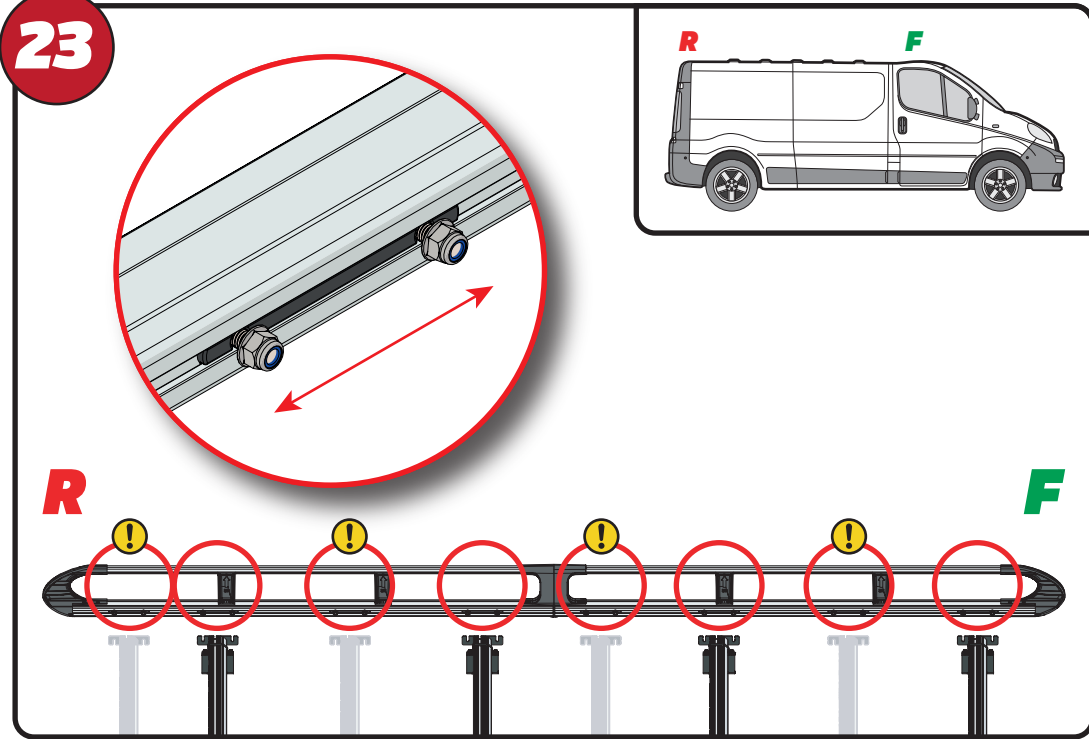


24

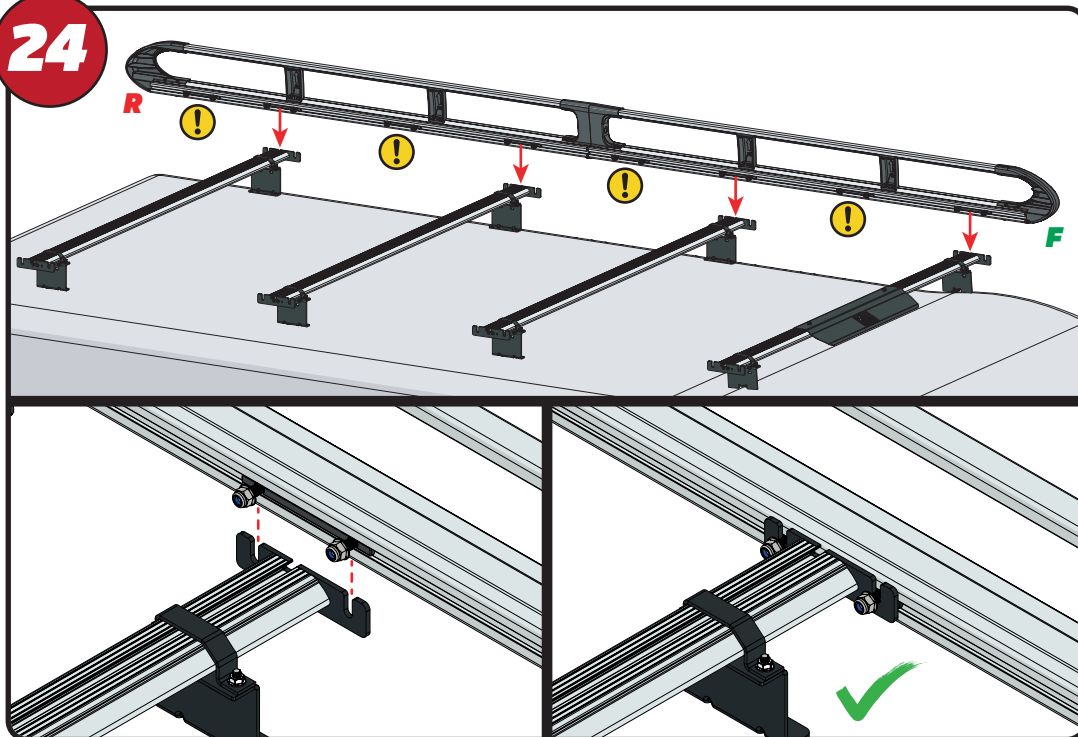


25

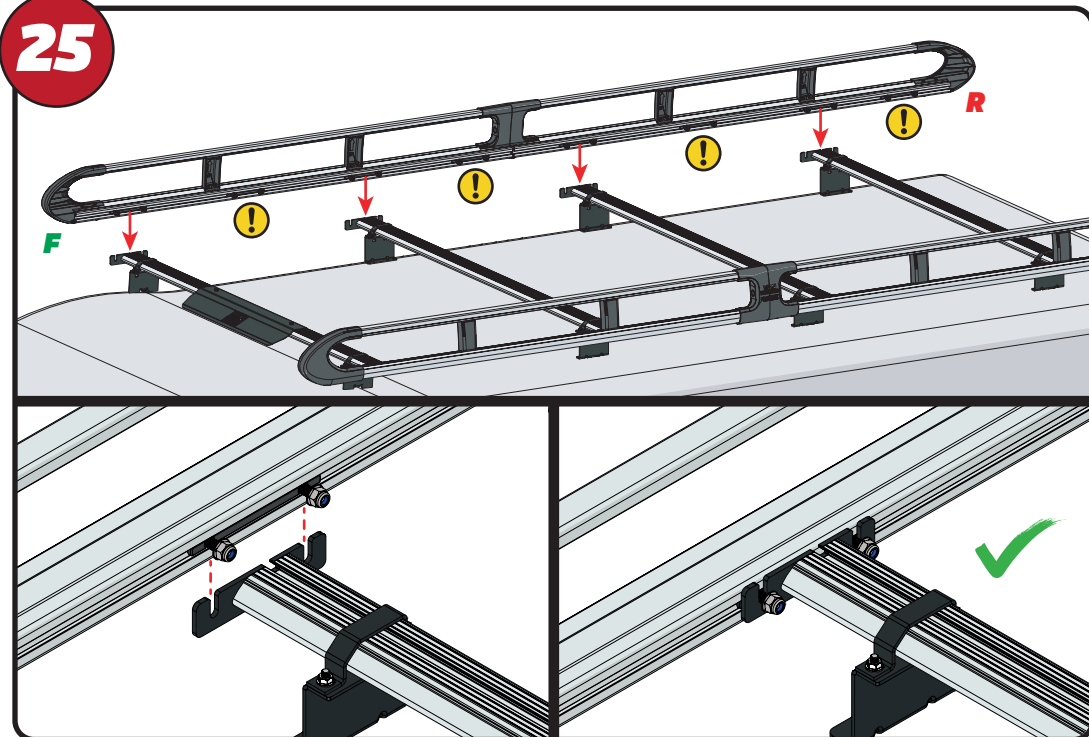


26

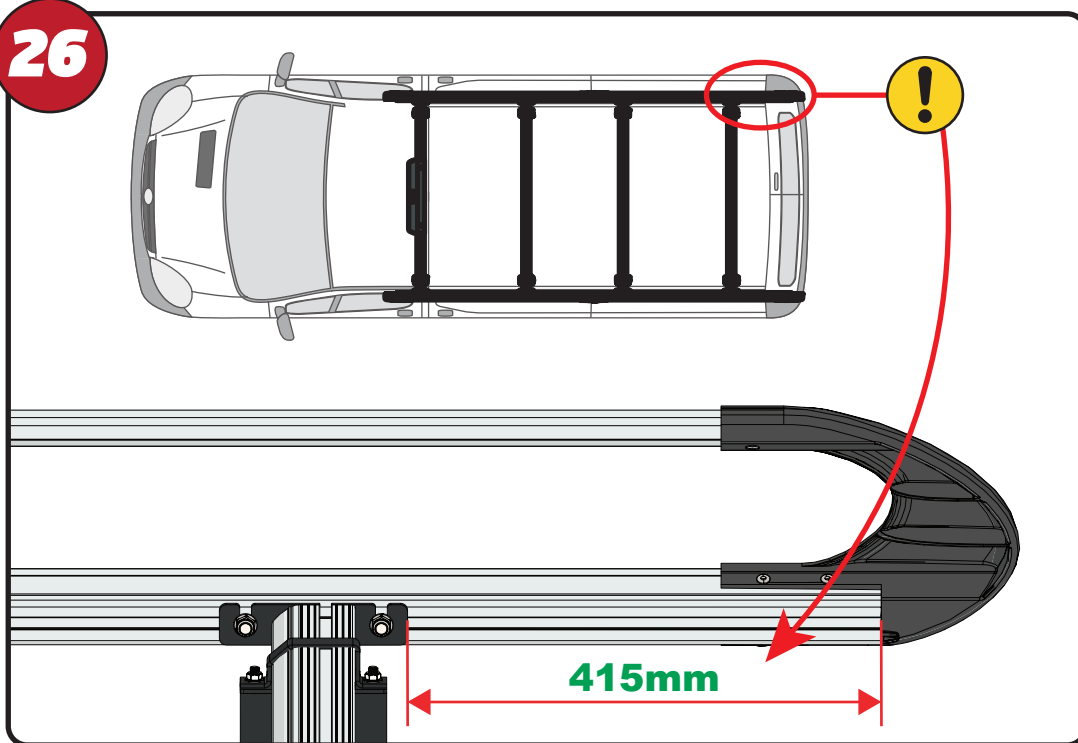


27

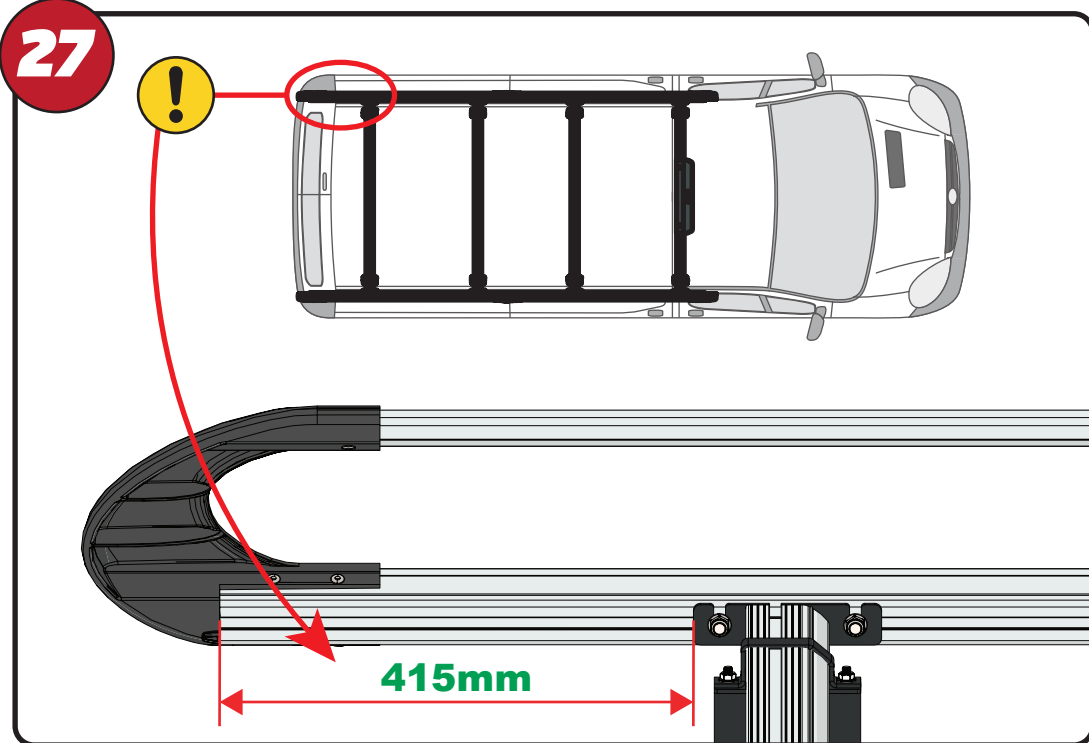


28

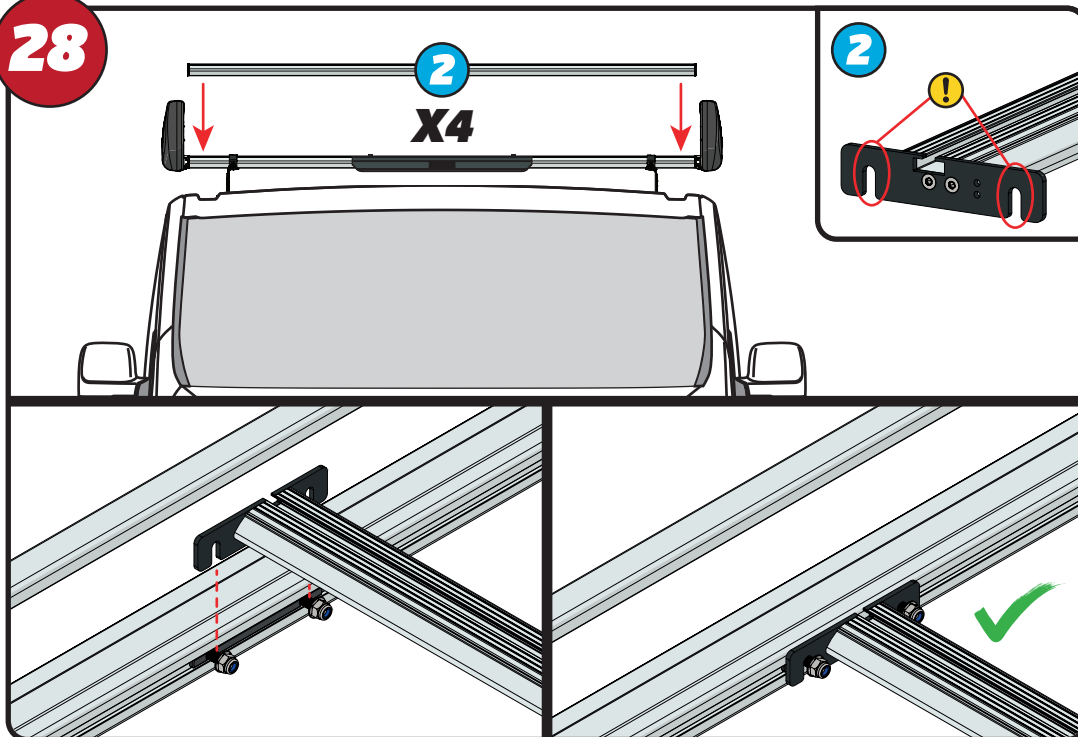

29

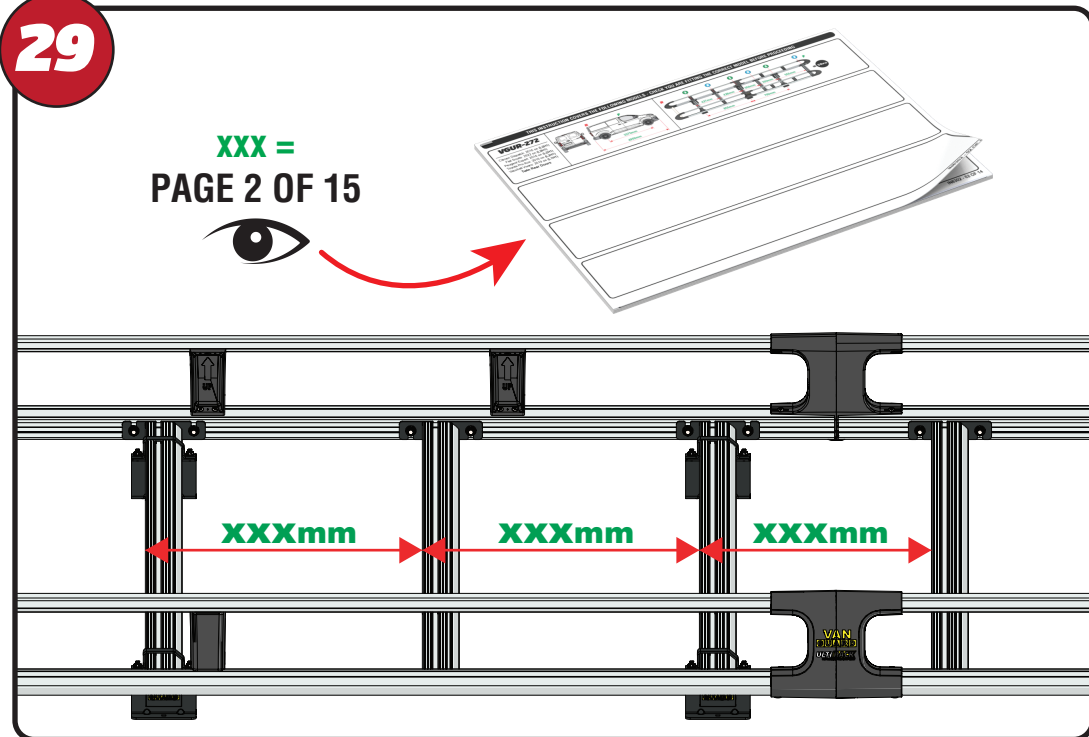


30

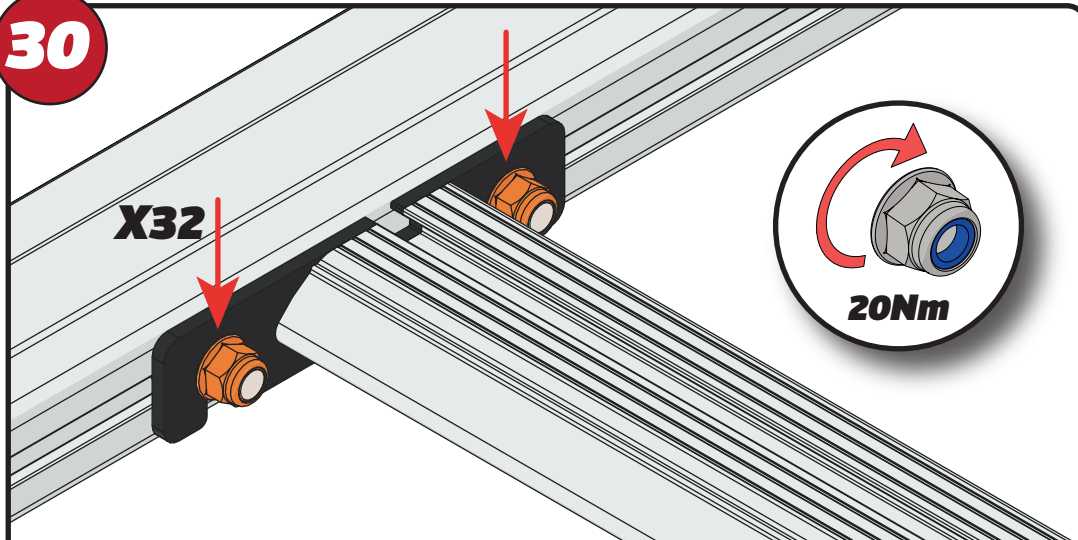



EN - TIGHTEN ALL OF THE CROSS BARS
 DE - ALLE QUERSTANGEN FESTZIEHEN
 FR - SERREZ TOUTES LES BARRES TRANSVERSALES
 NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
 ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
 IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
 DA - SKRU ALLE TAGBØJLER OP
 NO - SKRU OPP ALLE TVERRSTENGER
 PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
 CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


31

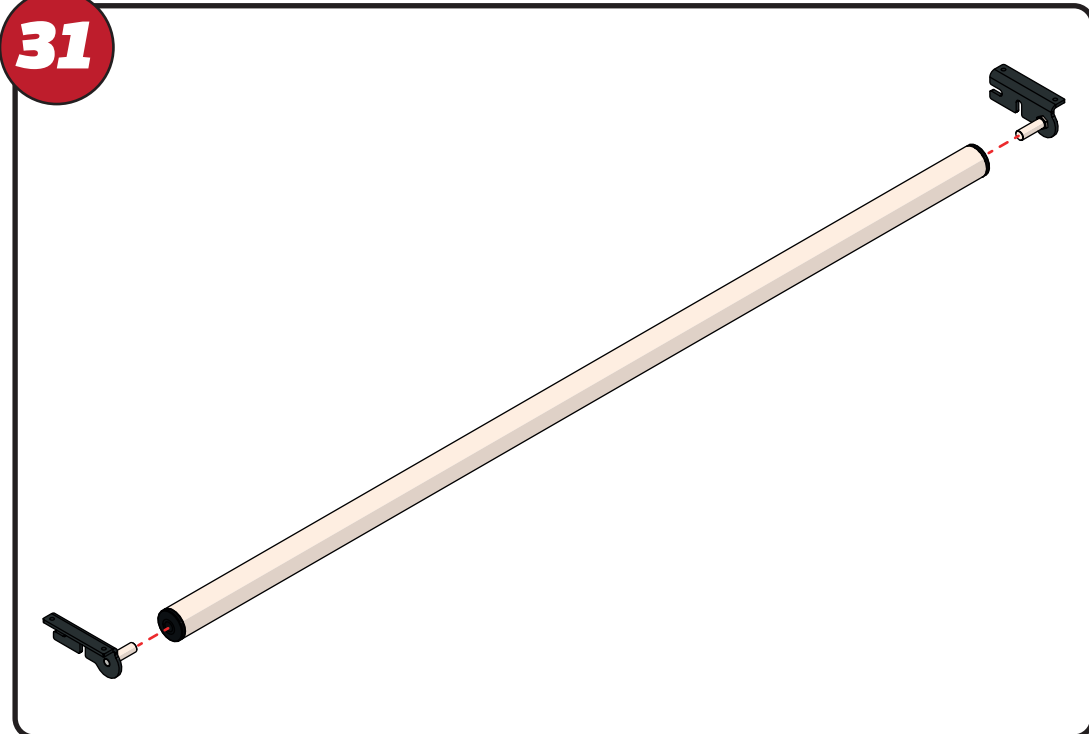


32

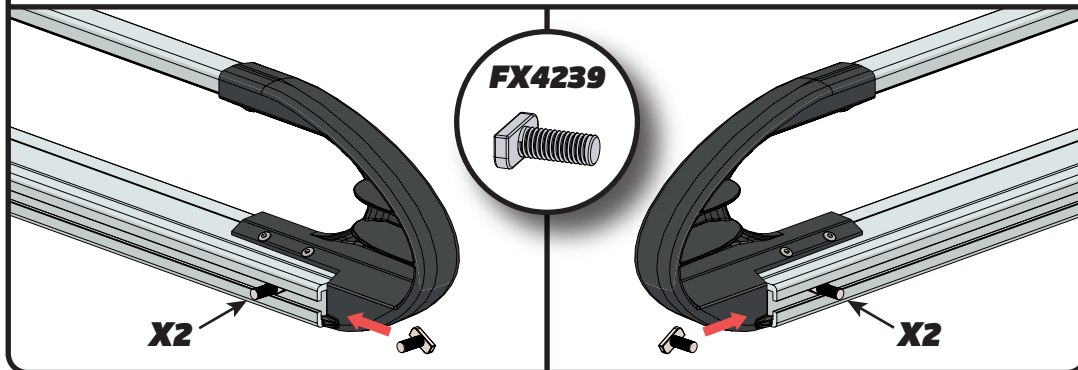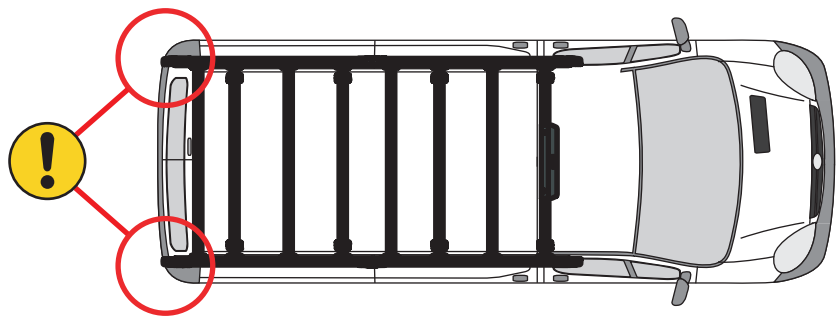


33

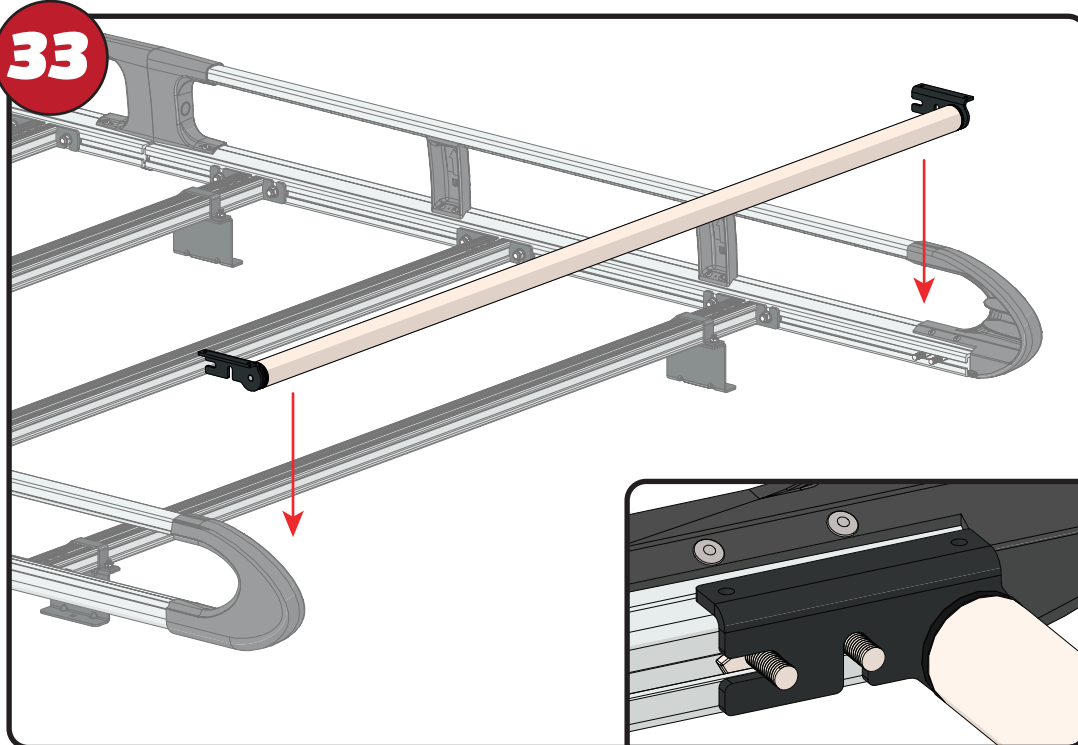


34

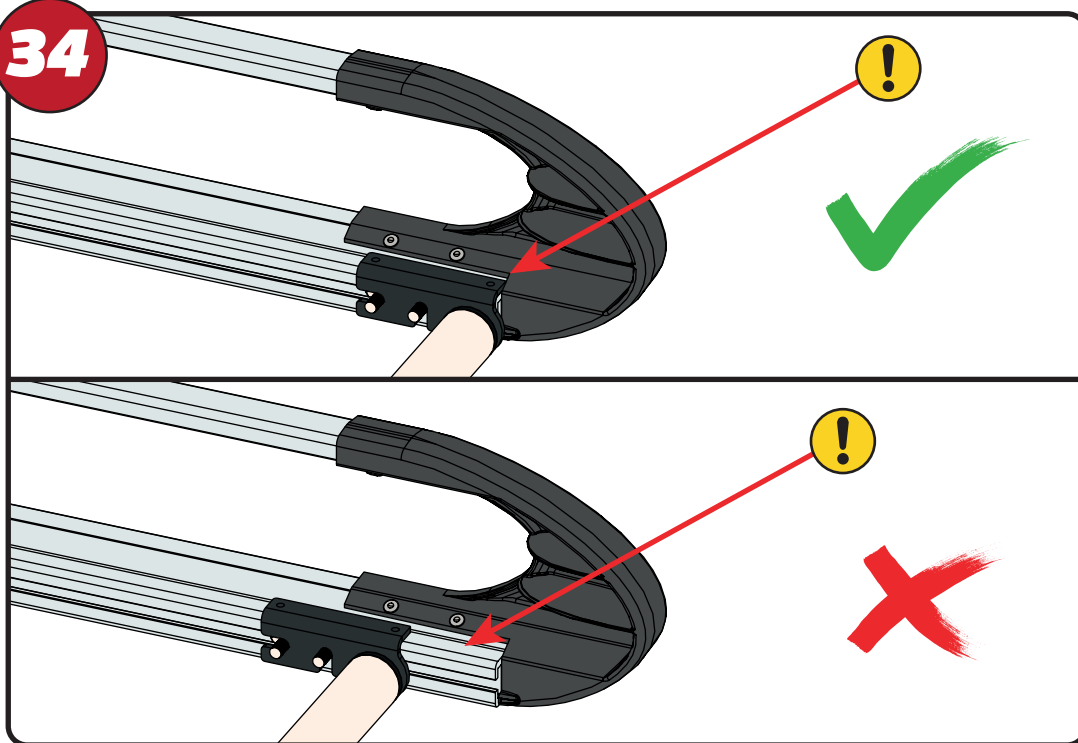


35

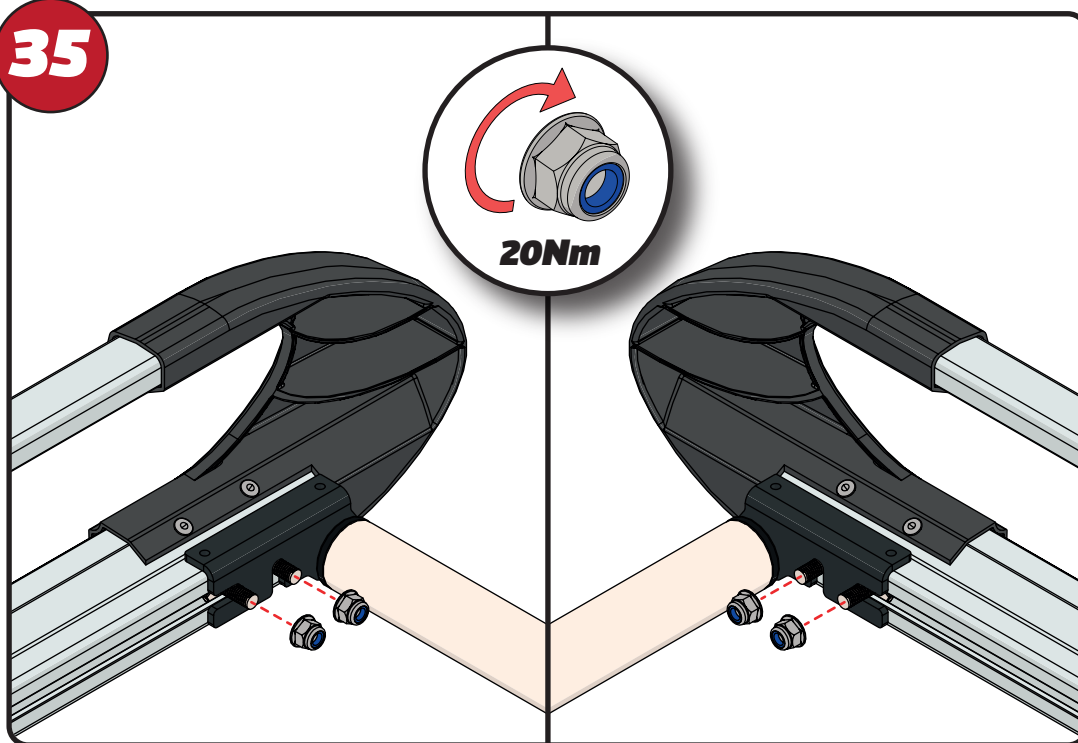


36

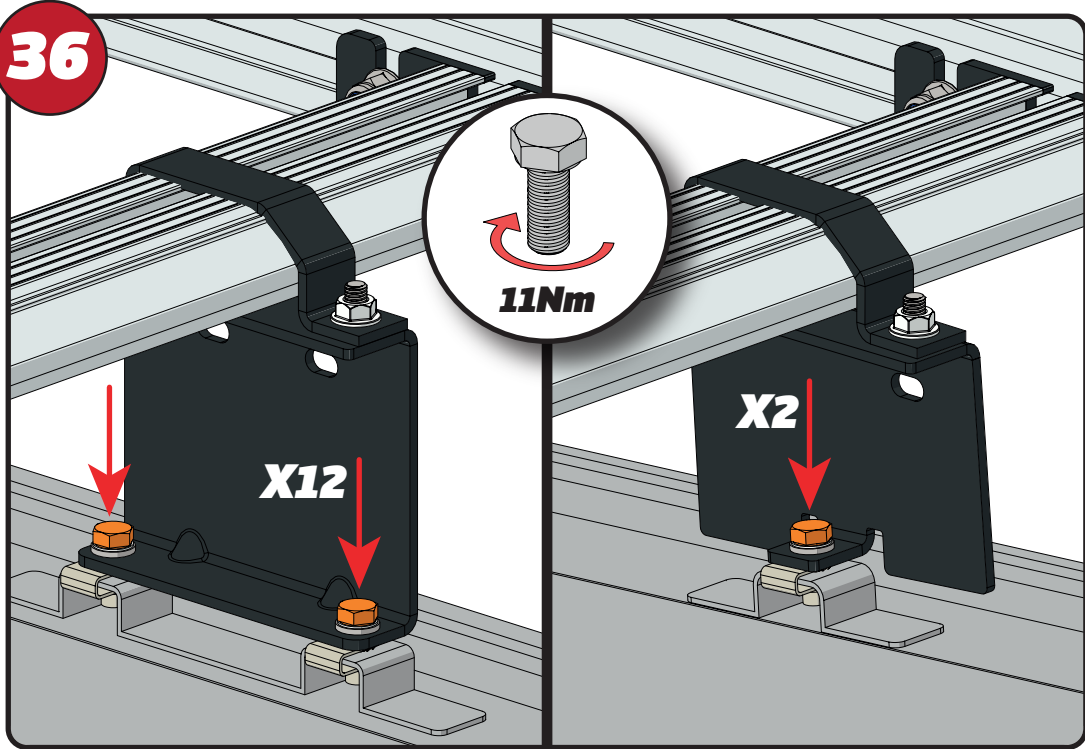


37

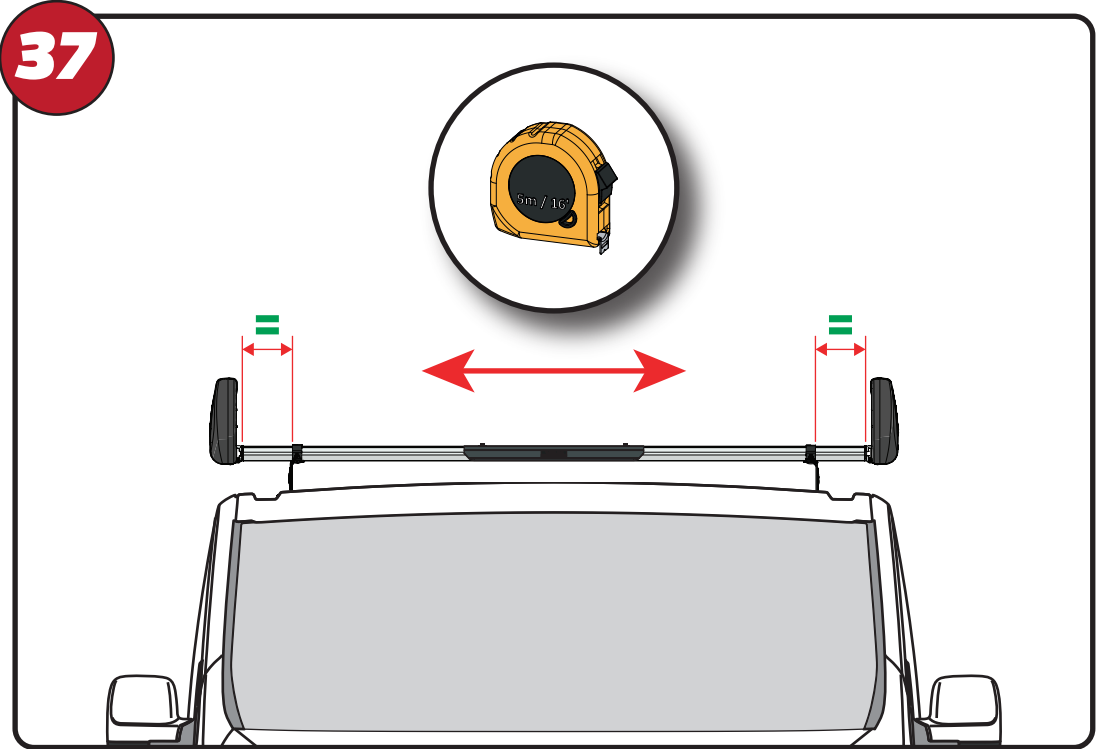


38

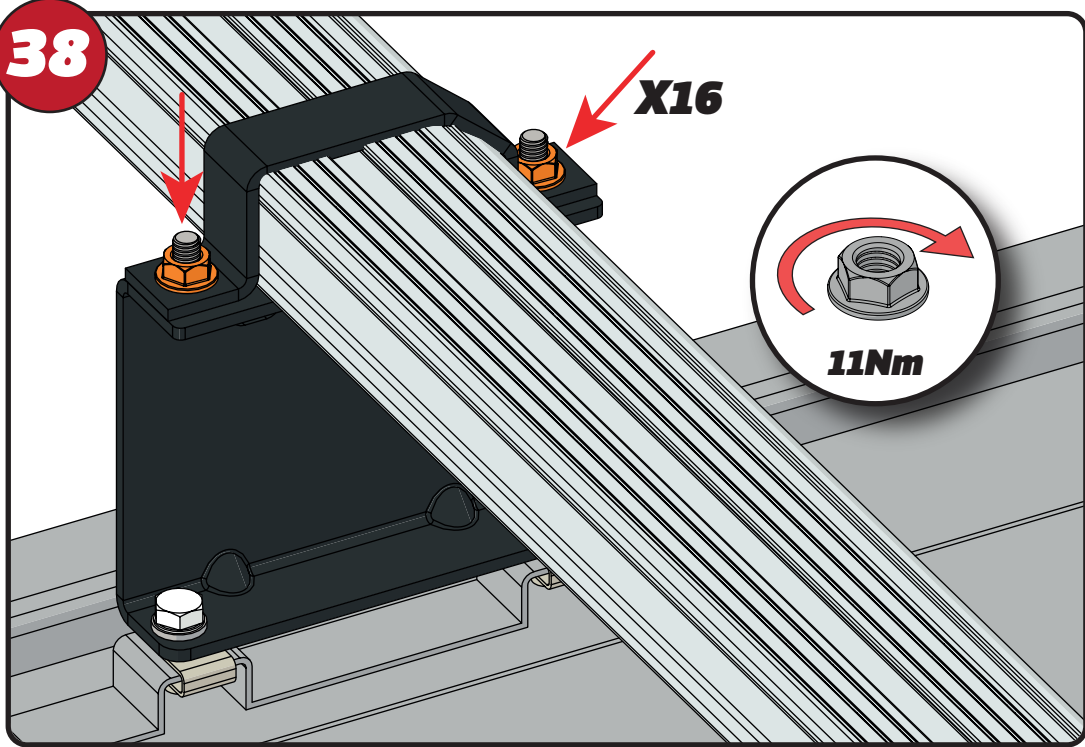


39

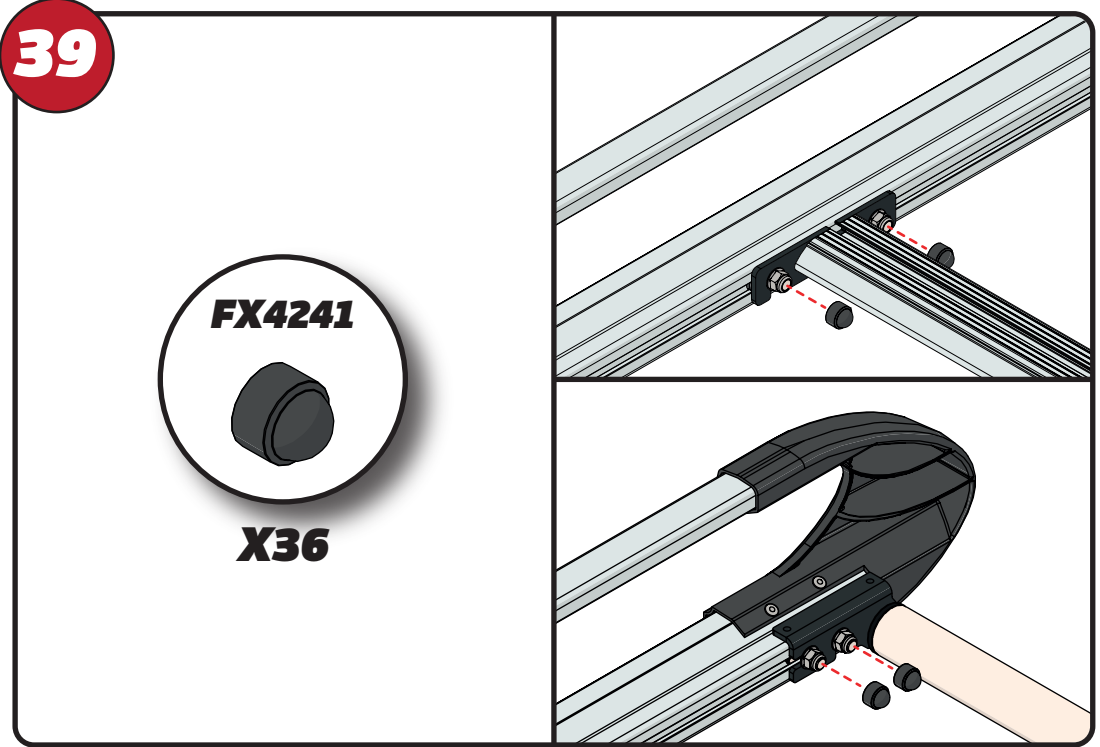


40

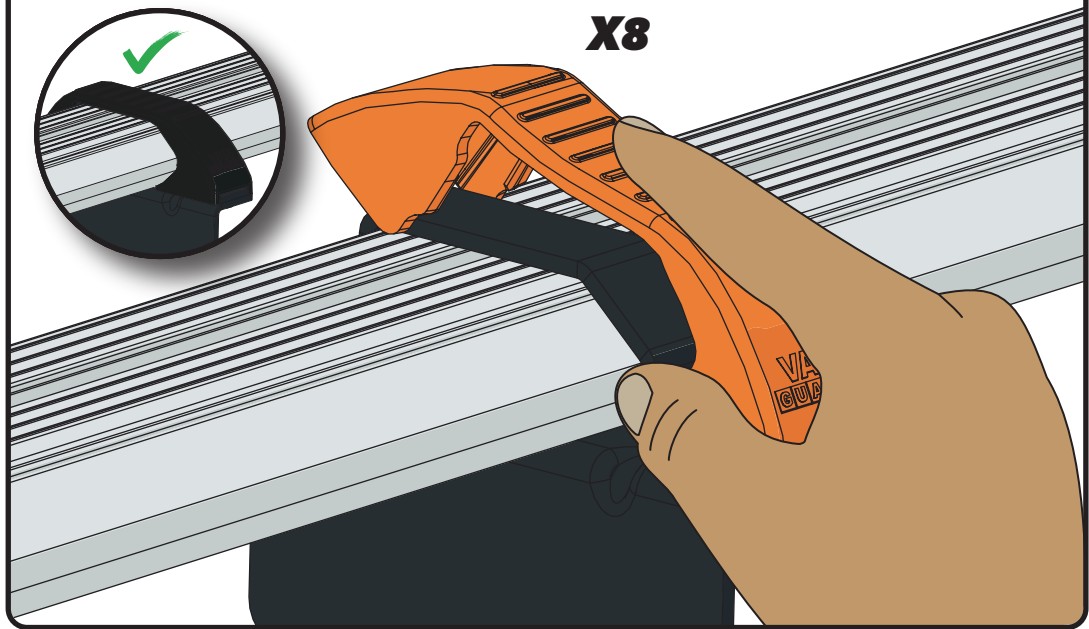

41

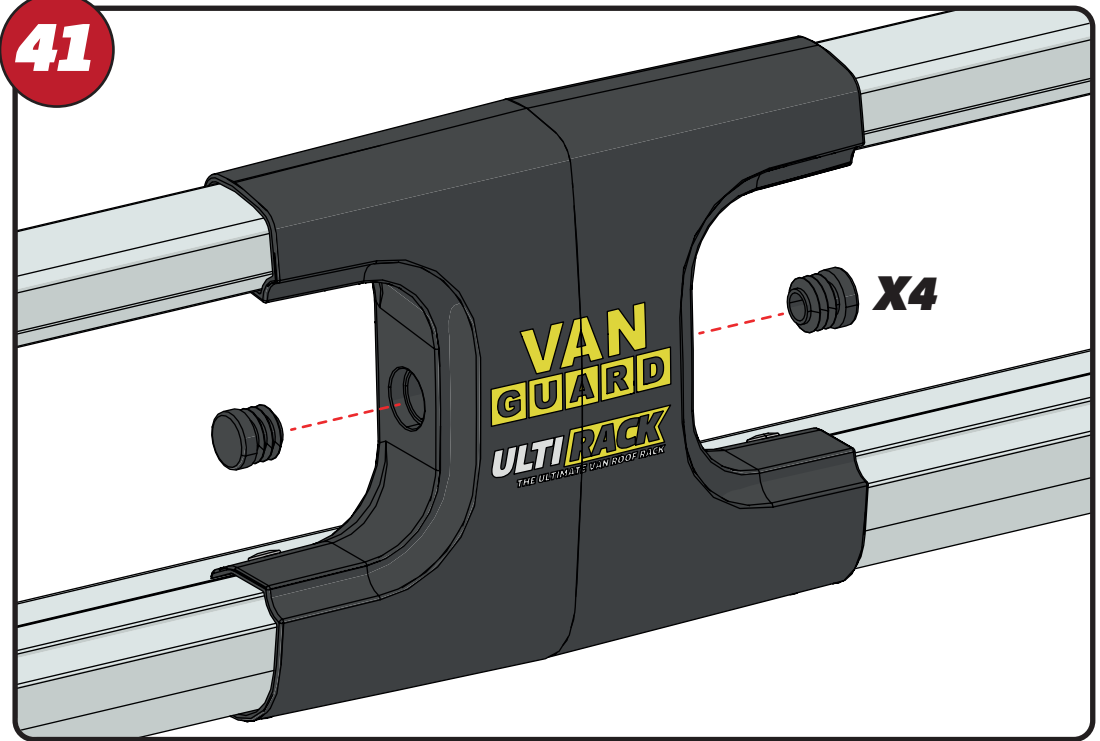

42

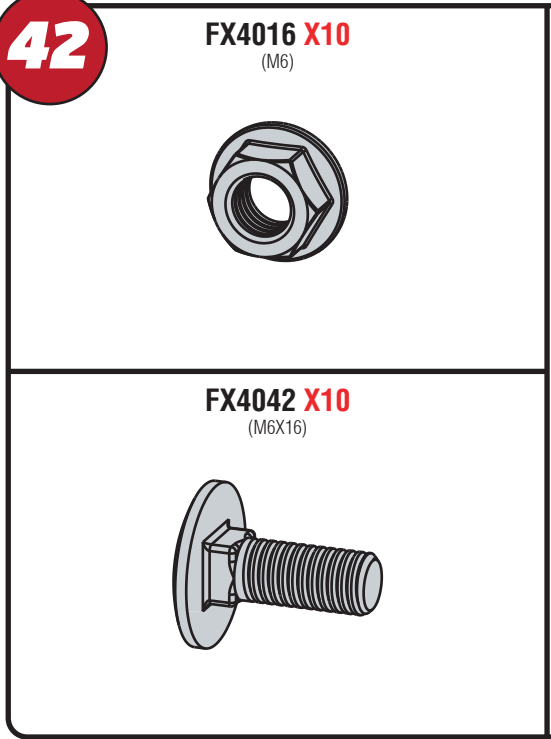

43

