

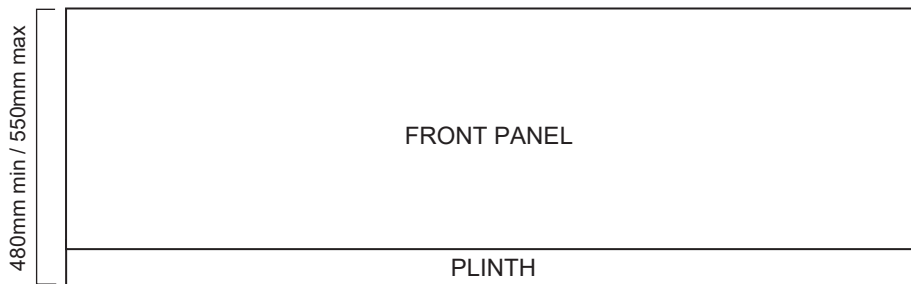


Bath Panel Fixing Instructions

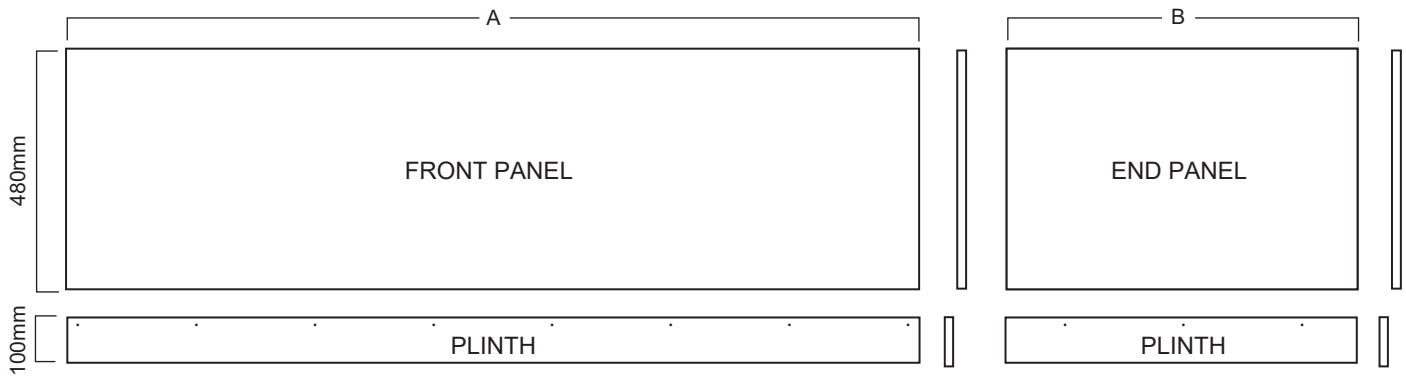

Panel Size	A	B
1500mm	1500mm	-
1700mm	1700mm	-
1800mm	1700mm	-
1800mm	1700mm	-
700mm	-	700mm
750mm	-	750mm
800mm	-	800mm
900mm	-	900mm

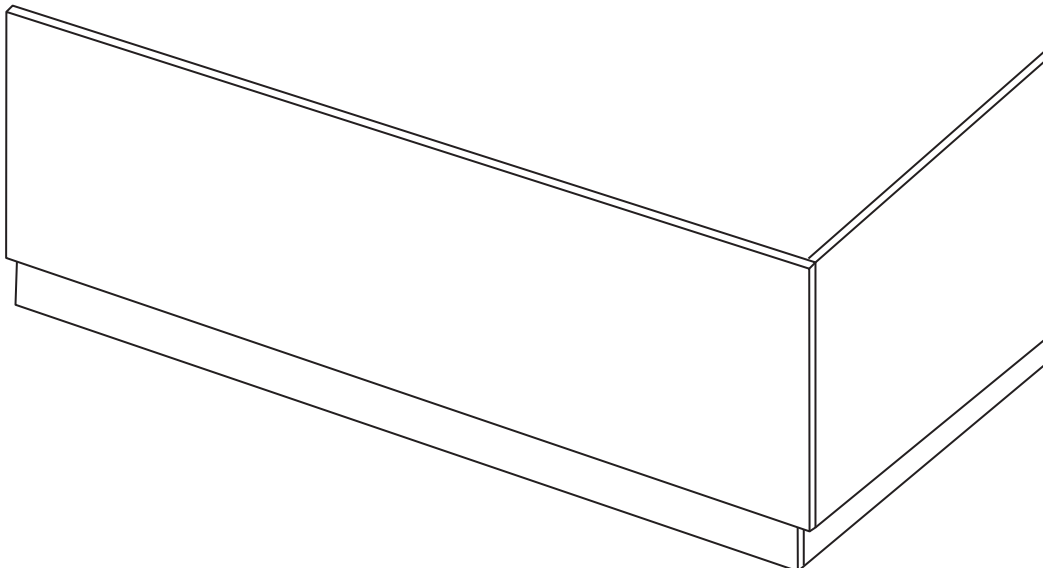

- Measure the height that the panel needs to be by measuring from under the bath rim to the floor
- Drill equally spaced holes along the plinth and screw to the bottom of the front panel at the desired height using the screws provided.
- It is advisable to build a frame or place battens along the floor and down the walls to support the panel.
- When an end panel is used it is necessary to trim the plinths so that the front and end panels can butt together. Any trimmings should be done at the wall ends to ensure that the finished edge is at the visible corner.
- Front and end panels are fastened together using the screws and corner brackets provided.