
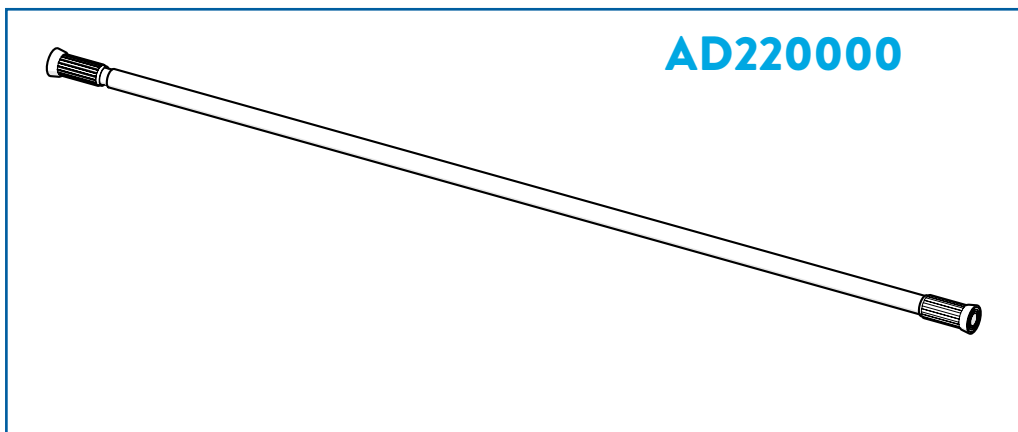


# AD200200 SHOWER ROD 1410MM - 2600MM

# AD220000 SHOWER ROD 1100MM - 2000MM

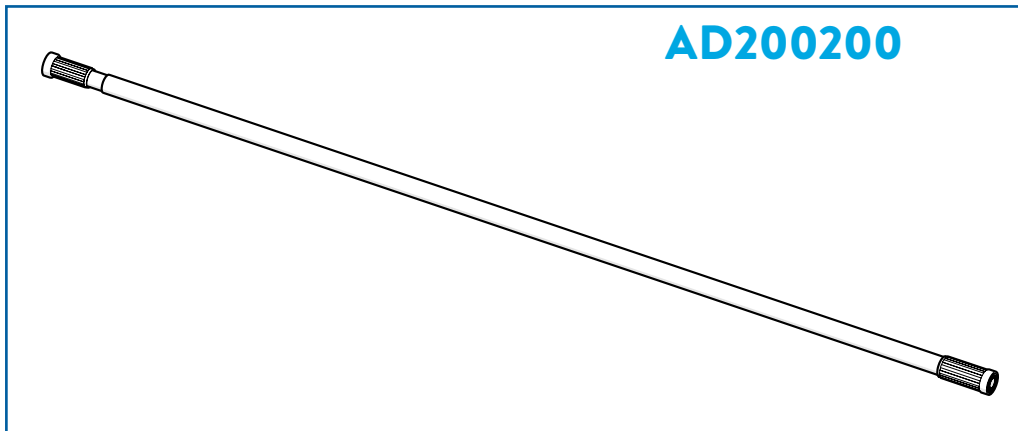

## CONTACT DETAILS

Croydex  
Central Way  
Andover  
Hampshire  
SP10 5AW  
UK

Tel: +44 (0)1264 365881  
Email: [info@croydex.co.uk](mailto:info@croydex.co.uk)

[www.croydex.com](http://www.croydex.com)

**ALL PRODUCT DIMENSIONS DETAILED IN THIS INSTALLATION  
AND MAINTENANCE MANUAL ARE APPROXIMATE**

**ALL ILLUSTRATIONS OF THE PRODUCT ARE FOR REFERENCE  
ONLY. COMPONENTS SUPPLIED WITH INDIVIDUAL PRODUCTS  
MAY DIFFER**

# SECTION 1 - INTRODUCTION

**PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE**

## **IMPORTANT!**

Before attempting to install this product, ensure that it fits and will function in the desired location.



## **IMPORTANT!**

Before attempting to install this product, ensure that any wall surfaces that the product will contact are cleaned, dry and free of any residue.


# SECTION 2 - INSTALLATION

**FOR INSTALLATION OF AD220000 SKIP TO STEP 2**


**1.** Ensure the sprung loaded bracket at the end of the large diameter tube can be compressed by approximately 10mm whilst still being securely attached to the rod. To adjust this, rotate the end bracket clockwise or anti-clockwise as necessary. **(See Fig. 1)**

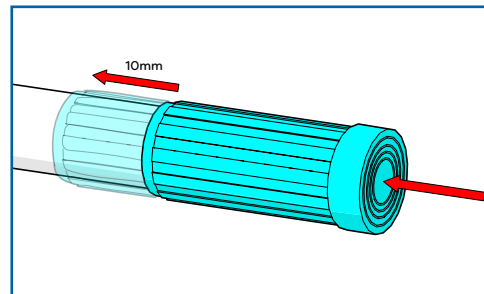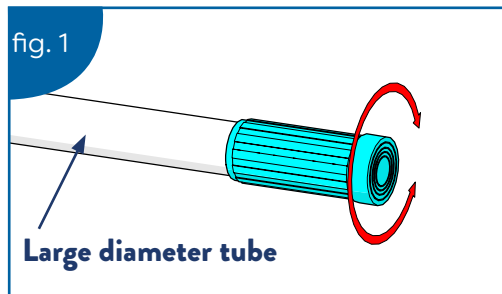

**2.** Ensure the rotating end bracket on the smaller diameter tube is rotated all the way in, anti-clockwise, so as to leave space for adjustment during installation. **(See Fig. 2)**

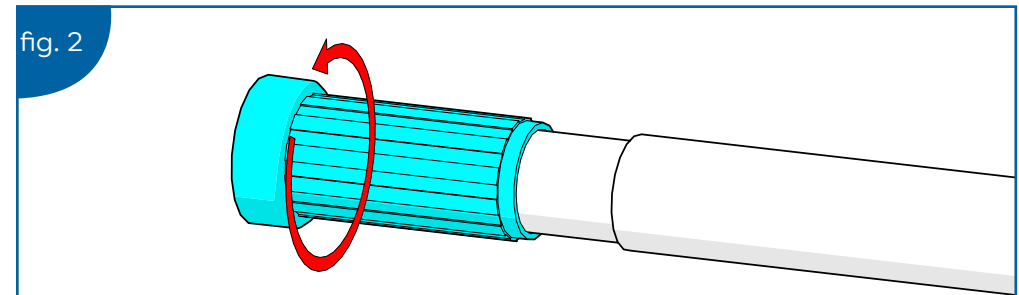

**3.** Unlock the tension rod by twisting anti-clockwise. Press the sprung loaded bracket against the wall and tension the rod in place by twisting clockwise. **(See Fig. 3)**

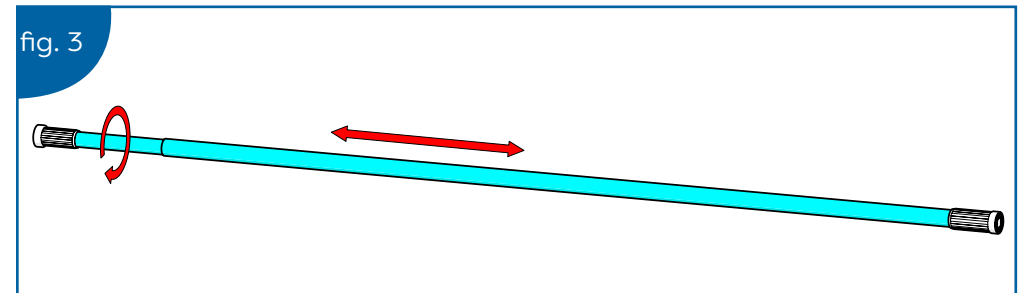

**4.** To add further tension to the rod, turn the rotating end bracket clockwise until the desired tension is achieved. **(See Fig. 4)**

