
Installing steps

BATH

- 1. Indentify all components are present prior to installation
- 2. Flush pipes to remove any debris in pipes before installation
- Position overflow body (C). Ensure washers (Item D and E) are in place and push the overflow cover (A) into lock nut (B)
- 4. Assemble waste outlet (J), Ensure washers (Items H and I) and Flange (G) are in place and tighten.
- 5. Fill the bath with water and check all joints to ensure there are no leaks, This is best done in stages starting with a small amout of water before fully filling the bath
- Once fitting has been completed carefully clean all plated surfaces. The finished surface product should be cleaned on a regular basis to maintain their appearance.
 The product should only be cleaned with warm soapy water and then wiped with a dry cloth

Once assembled, fill the bath with water, check for leaks.

Product is suitable for bathtub thickness 5-15mm

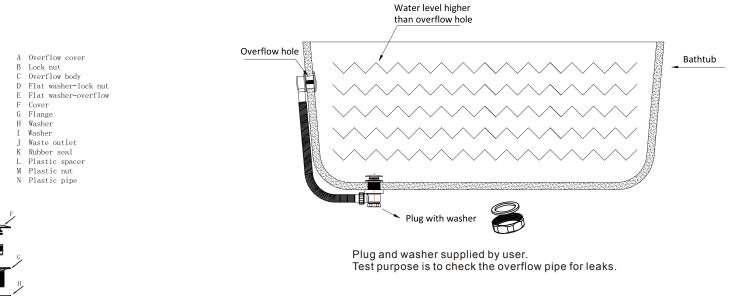

Aftercare:

The end user is required to regularly maintain and clean product using warm soapy water and a soft cloth for the product warranty to be valid. Surfaces should be maintained using a clean damp cloth, NO corrosive and abrasive agents or materials should be used or come into contact with the surface finish, as this will invalidate your product warranty.