

# Platinum 3 Star Cylinder

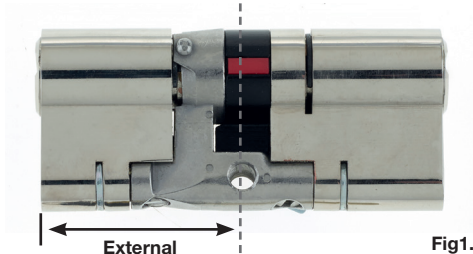


Fig1.

## Cylinder Installation

1. Remove any hardware such as handles or cylinder escutcheons from both sides of the door before attempting installation.
2. Insert operating key into the external side of the cylinder and turn slightly until the cam is no longer protruding from the side of the cylinder body.
3. From the external side of the door insert the cylinder with the Anti-Snap elements on the external side as shown in Fig 1.
4. Once the cylinder is correctly aligned within the door secure the cylinder in place using the M5 screw. Do not over tighten the screw or use power tools.
5. Reattach any removed door hardware.

**Note:** Do not hammer (or otherwise force) either end of the cylinder when installing into the door.

## Accreditations

- BS EN1303:2005 – 16000C52
- BSI TS007:2014 - KM559658
- Secured by Design



### User information:

This cylinder offers resistance to the commonly used types of attack. No specific security hardware is required, but installing this three star cylinder in conjunction with security hardware complying with TS 007 will increase attack resistance still further.

Security hardware can be of several types, including a handle with a reinforced backplate, an escutcheon or a device which is concealed behind the handle backplate. In all cases, the purpose is to protect your cylinder from force attack.



## Yale Platinum 3 Star Euro Profile Cylinder