Modern Furniture

Installation and Aftercare Instructions

Before You Start

- The product should only be installed by a suitably qualified / competent / experienced bathroom installer.
- Check the contents of the pack for defects before installation. The supplier will not accept any refitting costs if faulty product has been fitted.
- The furniture should only be installed in a well ventilated bathroom at a distance from bath / showers to avoid splashing.
- Make sure the unit and basin are secured to a suitably strong / reinforced wall to ensure stability.

CAUTION

- Take care when using power tools near water the use of a residual current device (RCD) is recommended.
- Beware of hidden pipes or cables.
- Wear suitable eye protection when drilling.
- Take care when drilling tiled surfaces as the drill might slip. We recommend using a piece of masking tape to prevent the drill from wandering.

Aftercare


Do 🗸

- Wipe away any water splashes or condensation after use.
 Excessive exposure to water or sitting water will damage the furniture.
- Clean with a soft damp cloth with a mild detergent only. Surface should then be fully dried using a soft lint free cloth.
- A suitable limescale remover can be used on the BASIN ONLY if required but MUST be tested on an inconspicuous area of the basin / furniture first.


Don't 🗙

- Scrub or scour any part of the furniture or basin.
- Use furniture polish.
- Use abrasive or bleaching cleaning agents.
- Allow hot or sharp objects to contact the furniture or basin.

Basin Fitting Instructions

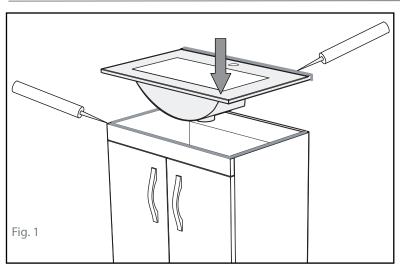


- Once the basin is plumbed in, finish by securing to the washstand or wall with a silicone sealant (not supplied). This creates a water tight seal and prevents damage.
- Ensure silicone/ sealant sits on outer edge of furniture to prevent any water pooling, see below diagram for positioning.

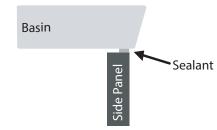


GW.V1 1

Push connected unit to wall and secure in place as per figure 1 using suitable fixings (not supplied).

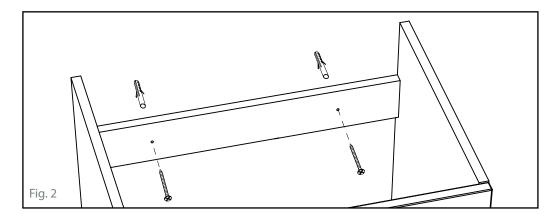



Installing handles

Screw in place from back of door.

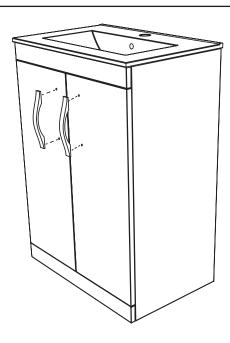

Hinge Adjustment

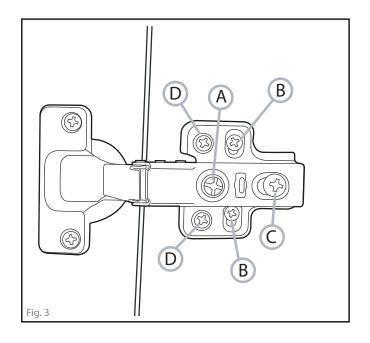

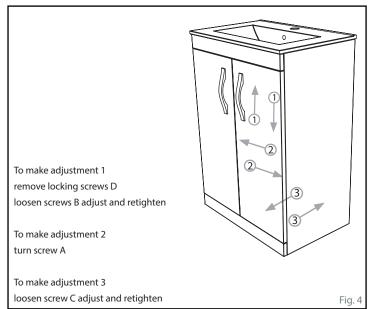

GW.V1 2