

# TECHNICAL DATA SHEET


# BRISTAN

## QUADRANT

### QUADRANT MONOBLOC SINK MIXER CHROME

#### Product Specification

Product Code:	QT SNK C
Finish:	Chrome
Product Type:	Contemporary
Construction:	Bodies are of all brass construction and are designed to conform to BS EN 200
Cartridge/Valve Type:	1/2" x 1/4 turn ceramic disc valves
Supply:	Suitable for all plumbing systems
Inlet Connections:	Flexible inlet pipes with G1/2" (male) connections
Water Pressure:	Min. 0.2bar, Max. 8.0bar

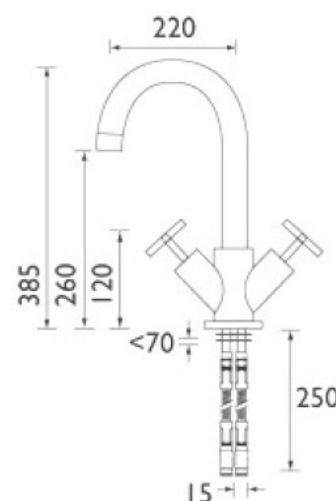

#### Additional Information

- Supplied with single check valves in each inlet tail.
- Compatible with the following flow limiters: ECO BAS3.5, ECO BAS4.5 and ECO BAS6.
- Flow limiters have to be fitted into a 15mm compression fitting.
- Chrome plated to BS EN 248.

**Technical Advice:** For further information please call 0844 7016273 or email [customercare@bristan.com](mailto:customercare@bristan.com).  
**Guarantee:** 5 years covering manufacturing faults.

#### Compliance/Approvals

**WRAS:** Manufactured to comply with WRAS

#### Flow Rates (litres per minute, open outlet)

System Pressure	0.2bar	0.5bar	1bar	2bar	3bar	5bar
QT SNK C	3.8	6.9	9.5	13.5	16.8	22.0

Bristan, Birch Coppice Business Park, Dordon, Tamworth, B78 1SG  
Telephone: 0844 701 6274 Facsimile: 0844 701 6275  
Web Site: [www.bristan.com](http://www.bristan.com) Email: [enquire@bristan.com](mailto:enquire@bristan.com)



D3

The information contained on this page was correct at date of issue. Fitting dimensions are provided as a guide only. Some variation may occur due to manufacturing tolerances. Bristan pursues a policy of continuing improvement in design and performance of its products and so reserves the right to change specifications without prior notice.

## AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces. All surface finishes will wear if not cleaned correctly, the only safe way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting - even non-scratch cleaners.

## GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture.

**Note:** The 5 year guarantee is invalidated if damaged by waterborne debris.

*In the interests of continuous product development we reserve the right to alter specification as necessary.*

**TELEPHONE NUMBER: 0844 701 6273**

**PRODUCT CODE: QT SNK C, QT SQSNK C**

Bristan Group Ltd  
Birch Coppice Business Park  
Dordon  
Tamworth  
Staffordshire  
B78 1SG  
UK  
A Masco Company

Web Site: [www.bristan.com](http://www.bristan.com)

Telephone: 0844 701 6274

Facsimile: 0844 701 6275

Email: [enquire@bristan.com](mailto:enquire@bristan.com)

(QT SNK)

(R5)

(SM)

# BRISTAN

## Quadrant Single Flow Sink Mixer

## Fitting Instructions & Contents List

**Please keep these instructions for future reference  
and request of replacement parts.**


**WATER PRESSURE**

For optimum use both the hot and cold supplies should be reasonably balanced. The minimum required pressure is 0.3 Bar to ensure adequate performance.

This mixer should be installed in compliance with Water Regulations. Where the supplies are unbalanced, i.e. hot water from the cylinder tank/cold from the mains, approved check valves must be fitted in the supply pipes. For further details contact your Local Water Authority.


## CONTENTS

1. Mixer body	(x1)	5. O-ring	(x1)
2. Plinth	(x1)	6. Metal C plate washer	(x1)
3. O-ring	(x1)	7. Tail pipes	(x2)
4. Fixing bracket	(x1)	8. Nut	(x1)

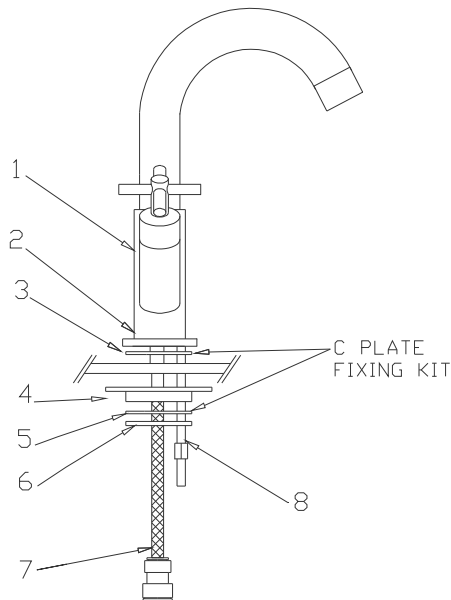

## INSTALLATION

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Fit the mixer to the sink using the 'C' plate fixing kit. The plinth (2) and O-ring (3) go between the fitting and the sink, and the fixing bracket (4) (if required), O-ring (5) and metal washer (6) on the underside of the sink, to be secured by the threaded rod and nut (8).
3. Fit the flexible pipes (7) to the fitting. Connect the hot and cold supplies.
4. Fully open both valves, letting it run for a few minutes to check all joints and connections for leaks.
5. See over the page for aftercare instructions.

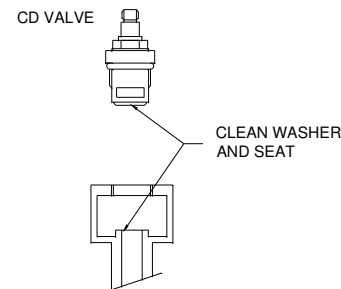

## MAINTENANCE

If the fitting begins to drip:

1. Turn off the water supply.
2. Unscrew grub screw on the underside of the handle using a hexagonal key, pull off the handle. Unscrew shroud and valve.
3. Carefully clean seating, rubber washer and ceramic disc.
4. Replace valve, shroud and handle. Secure with grub screw, then turn on the water supply.
5. Contact our helpline if problem persists.

**Please Note:** In the unlikely event you find a part missing please contact our Customer Service Helpline on 0844 701 6273 or email [enquire@bristan.com](mailto:enquire@bristan.com) for immediate dispatch of part.