



Aqua 6 Glide Quadrant and Off-set Quadrant Enclosure

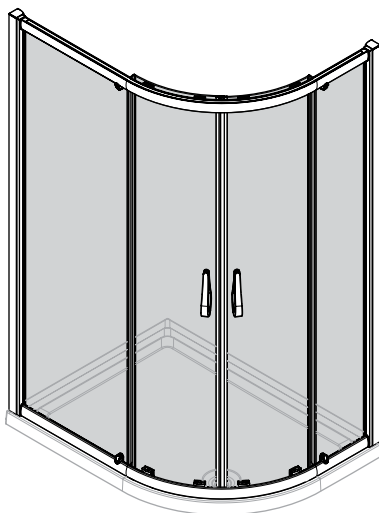


- Instruction suitable for both Quadrant & Off-set Quadrant variations.
- Instruction suitable for both Right and Left Hand fixing variations on Off-set Quadrants.

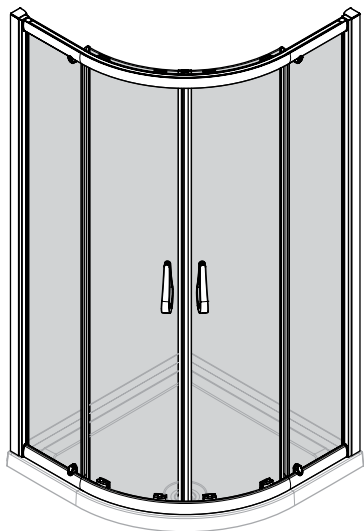

Before You Start

- Check that the tray has been installed correctly and that it is level (Fig. A), tiled down onto and sealed to the manufacturer's guidelines. **Please Note:** All product supplied without tray.
- Ensure the product is fitted to a non-porous surface ie. tiled. Check that the wall surface is flat.
- Unpack and check the product is complete and undamaged.
- Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type – if in doubt seek professional advice.
- Ensure the area is clean, dry and dust free.
- Read the instructions in full.
- Have the correct tools available, (as shown below, see 'Tools Required').
- It is recommended to situate the showerhead and door adjacent to each other in order to allow any water spray to be on the side panel or upstanding wall.

Fig.A.

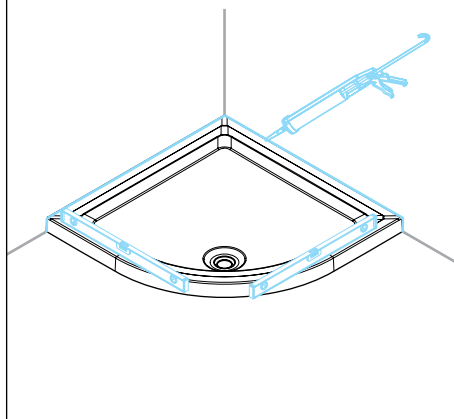


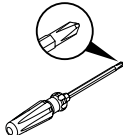




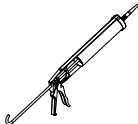


Safety

- Handle all glass with care - support on cardboard to avoid risk of breakage.
- This product is heavy and requires 2 people to carry and install it.
- When drilling walls check first for hidden pipes and cables.
- All glass is toughened – it cannot be reworked or replaced by ordinary glass.
- Use safety eyewear when drilling.
- Use safety eyewear when handling glass.
- Keep all small parts away from children.

Disclaimer

- Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from damaged or faulty product being installed.
- Please dispose of all packaging with due regard to the environment.

Tools Required (not supplied)

Spirit Level 	Screwdriver 	Tape Measure 	Pencil 	Utility Knife 
Junior Hacksaw 	Silicone Gun & Sealant 	Power Drill 	Suitable Drill Bits 	* Ensure drill bit used is suitable for wall surface



Help Line: 0870 241 6131

Lines open: 8.30am - 5.00pm Monday to Friday
Standard National call charge rate from BT landlines

Parts & Fittings Supplied




Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from a damaged or faulty product being installed.



Keep small parts away from children

*** Off-set Quadrant Variant:**
Glass Panel supplied one long , one short

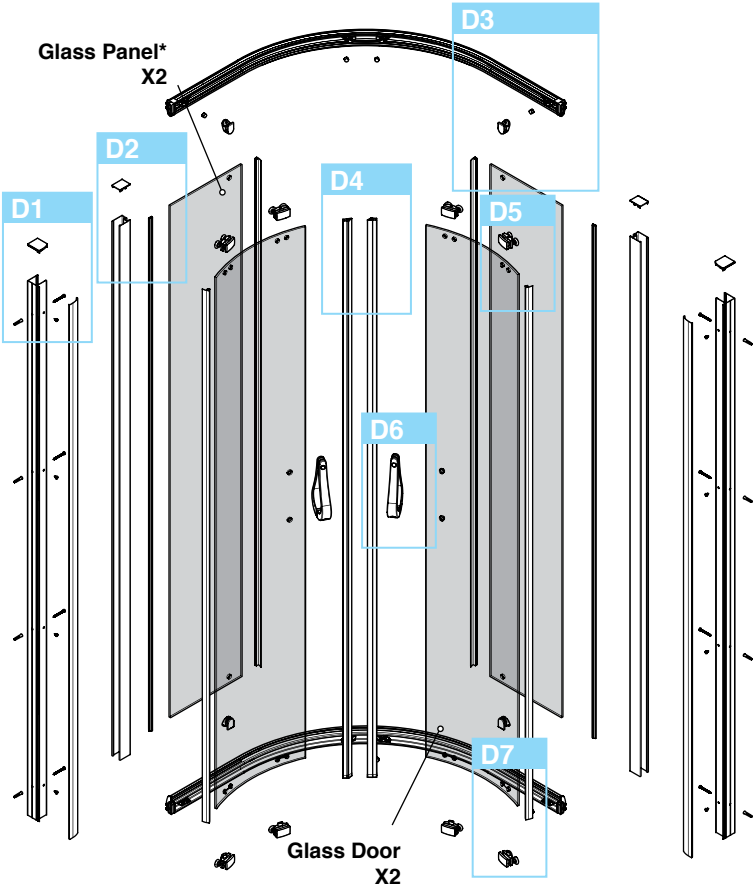


Allen Keys Supplied




3mm Allen Key

D1


*Left and right hand variants supplied

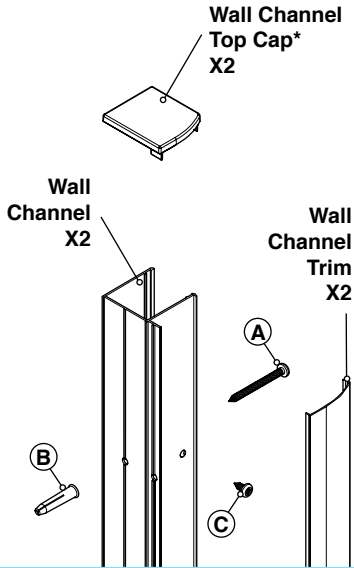

D2

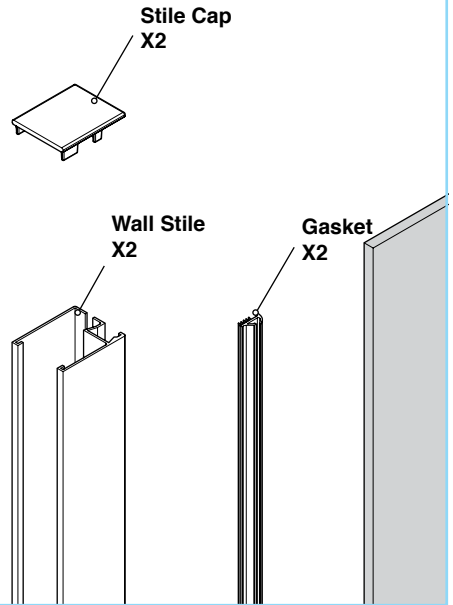


D3

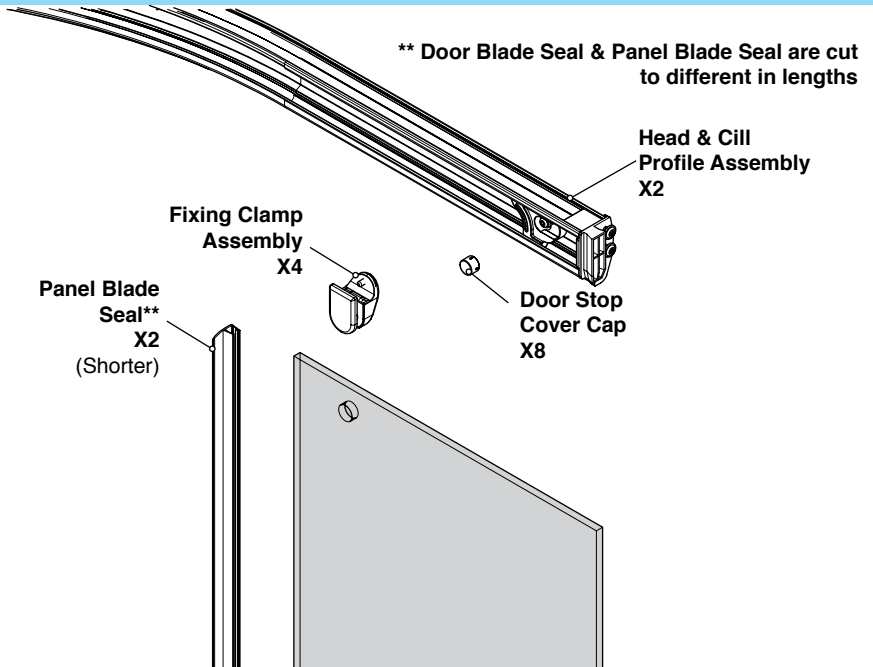


D4

**Magnet Seal
X2**

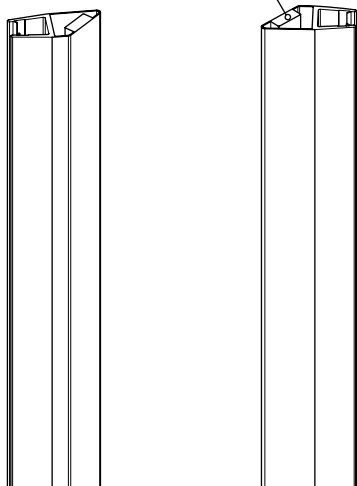


D5

**** Door Blade Seal & Panel Blade Seal
are cut to different in lengths**

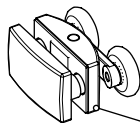

**Top Adjustable
Bearing
X4**

Door Blade Seal
X2
(Longer)**

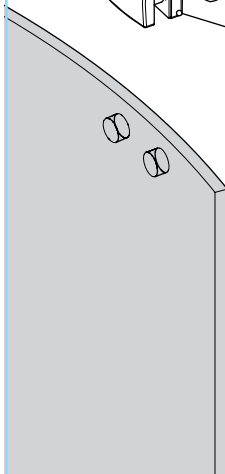


D6


**Door Handle
X2**






D7

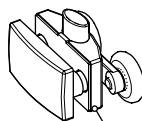

**Bottom Spring
Loaded Bearing
X4**

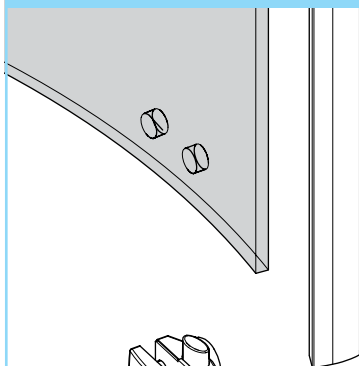


Loose Screws & Fittings Supplied

(A)	No.8 x 1¾" Pan Head Pozi Screws	 (actual size)	Qty x8
(B)	Wall Plugs	 (actual size)	Qty x8
(C)	No.8 x ¾" Pan Head Pozi Screws	 (actual size)	Qty x8

Inside View

1

Slide Stile into position
on Cill Assembly Profile
as shown*

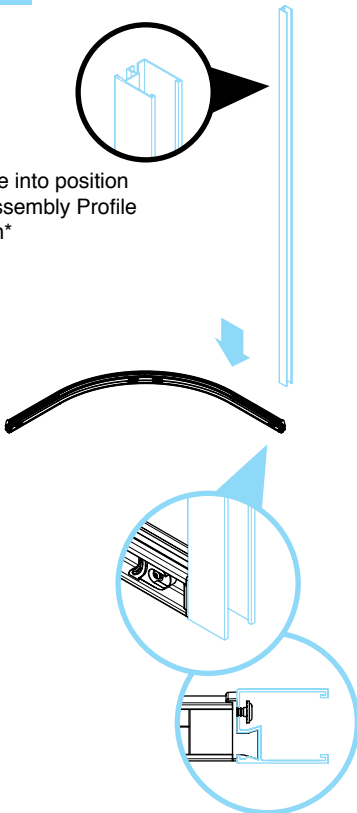


IMPORTANT NOTE:

Ensure that this assembly (1-10) is
carried out on a flat / level surface.




Ensure correct Closing Stile and
Cill Assembly orientation.

*Closing Stile/ Side Stile location detail Inside View:

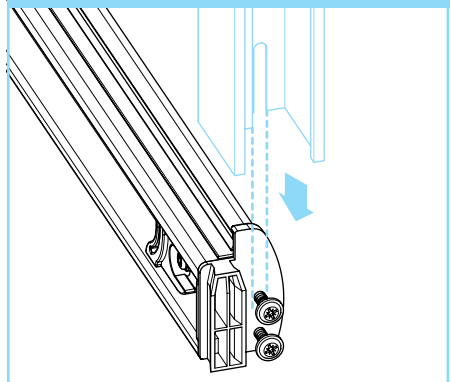

2

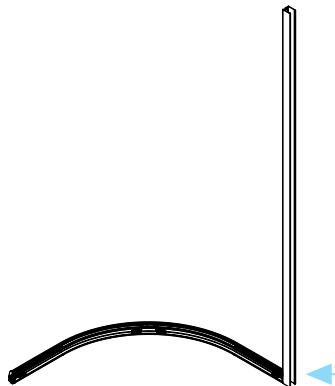

IMPORTANT NOTE:

Ensure product is assembled on a level surface/ floor and that the frame assembly is straight and level.


i)

Pre-fitted Cill Assembly screws.

ii)


Tighten pre-fitted Cill Assembly screws to fix Wall & Closing Stiles.

i)

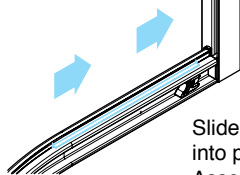


Slide pre-fitted seal into position on Cill Assembly as shown

ii)

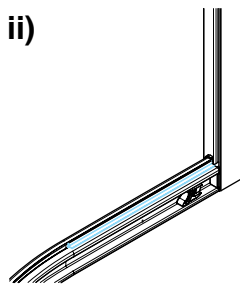


3.1

For Off-set Quadrant Installations, please fit large glass panel at this stage.



Ensure pre-fitted seal on Cill Profile Assembly is pushed up against Wall Stile.

3.2

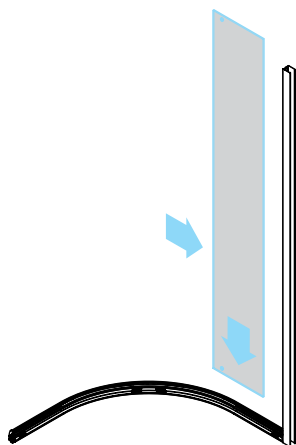


Please take care when handling glass.




Locate Glass Front Panel into Stile.

Inside View

3

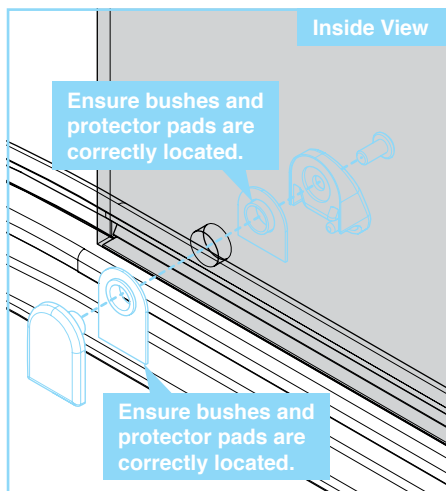


Please Note: Fixing Brackets are supplied assembled. Using Allen key supplied, disassemble part and then re-assemble as shown. DO NOT overtighten.

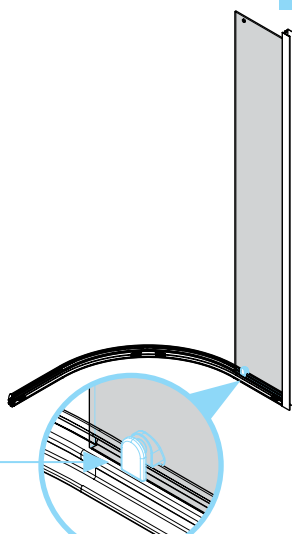

DO NOT fit cover cap at this stage. Screw heads are on OUTSIDE of the enclosure.

5

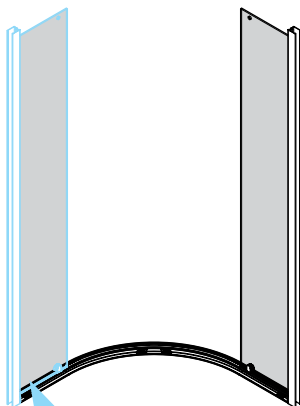



Once you have assembled one Front Glass Panel assembly opposite Front Glass Panel as detailed in steps 1-4.



IMPORTANT NOTE:

Ensure product is assembled on a level surface/ floor and that the frame assembly is straight and level.

Inside, Underside View

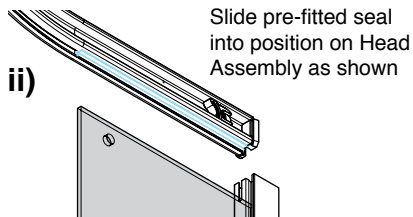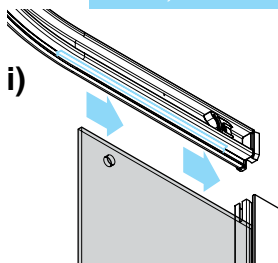


Slide pre-fitted seal into position on Head Assembly as shown



Ensure pre-fitted seal on Head Profile Assembly is pushed up against Stile prior to slotting Head Profile Assembly into position.

6

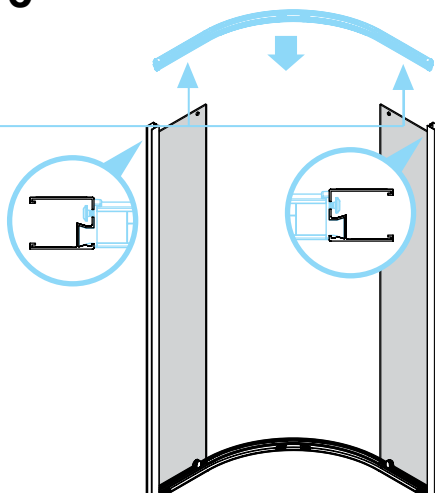

Ensure that the Head Profile Assembly is push right down on top of glass panels.


7

Inside View

Ensure bushes and protector pads are correctly located.

Ensure bushes and protector pads are correctly located.


! Please Note: Fixing Brackets are supplied assembled. Using Allen key supplied, disassemble part and then re-assemble as shown. DO NOT overtighten.

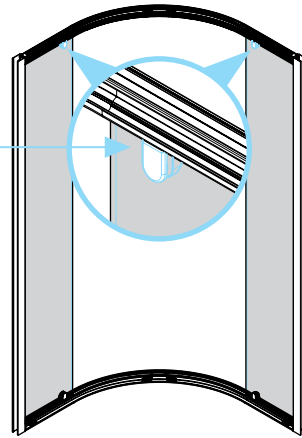

! DO NOT fit cover cap at this stage. Screw heads are on OUTSIDE of the enclosure.

Inside View

8

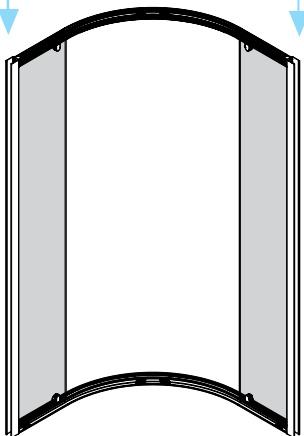

! IMPORTANT NOTE: Ensure that Head Assembly is located on top of glass prior to tightening pre-fitted screws.


Inside View

Pre-fitted Cill Assembly screws.

i)


Tighten pre-fitted Cill Assembly screws to fix Wall & Closing Stiles.

ii)

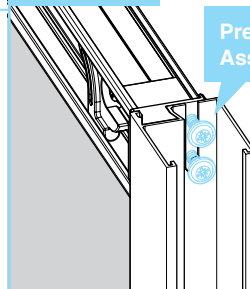


Inside View

9

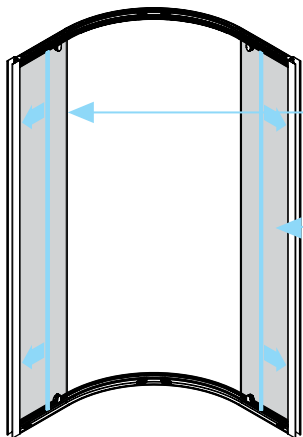

IMPORTANT NOTE: Ensure Gasket is down tight against bottom Cill Profile for a watertight seal.

Inside View, Alternative Angle

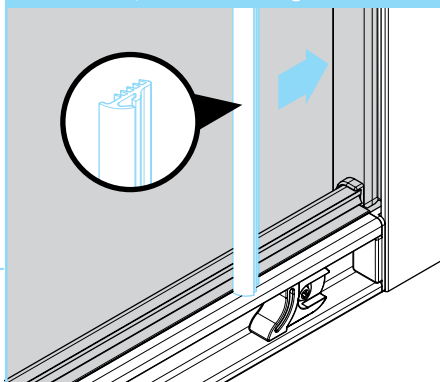


Please Note: Gasket is supplied oversized, please trim Gasket to suit.



Tip: Push fit Gasket, start at the bottom and work up.


Inside View

10

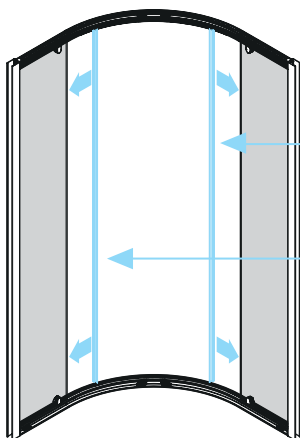


IMPORTANT NOTE: Ensure Panel Blade Seal is down tight against bottom Cill Profile.

Inside View

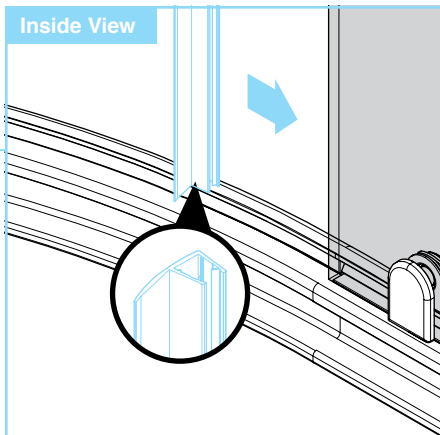


Tip: To push fit Panel Blade Seal, start at the bottom and work up.


11.1

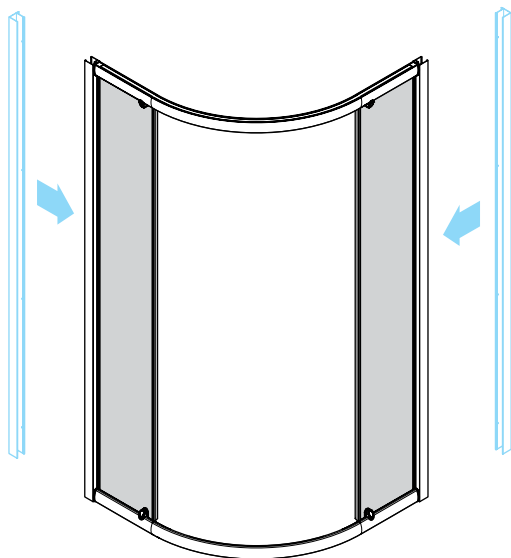


11.2

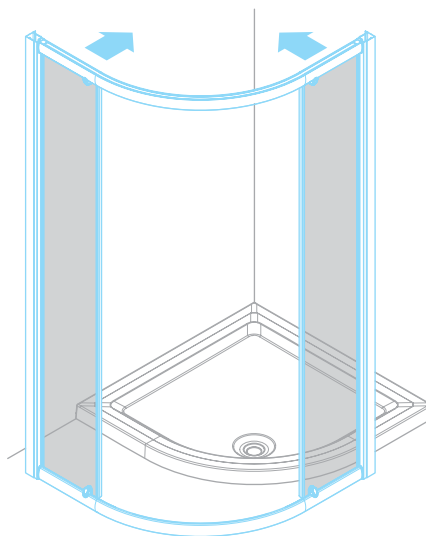

11.3

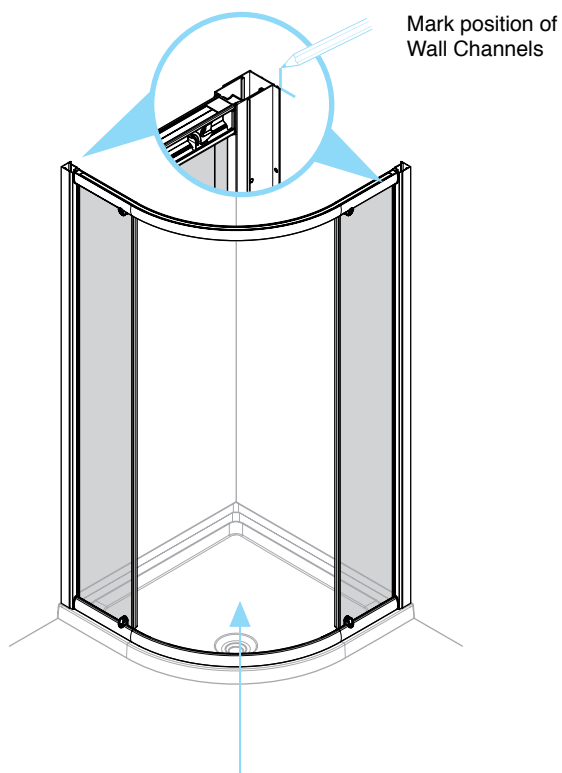

Plan View

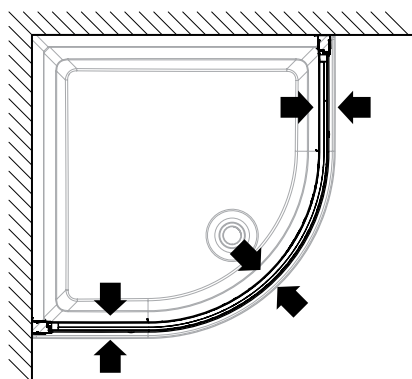

IMPORTANT NOTE

Ensure radius of enclosure matches tray.

DO NOT push frame fully into Wall Channel, allow a suitable gap to ensure adjustment and fixing.




Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type is used. If in doubt seek professional advice.



Position Wall Channel on wall as shown, ensure Wall Channel is fixed level.


12

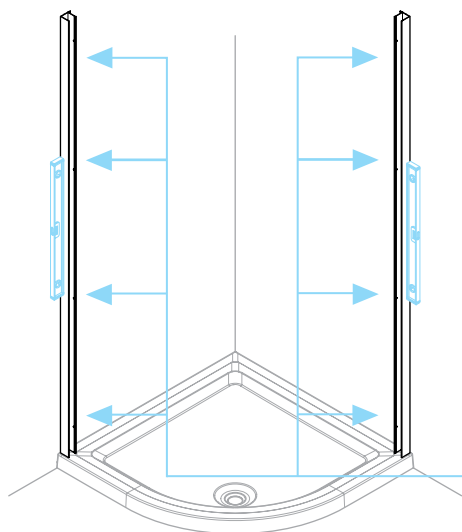

Tip: When drilling tiles apply masking tape to surface to stop drill bit slipping.


Inside View

12.1

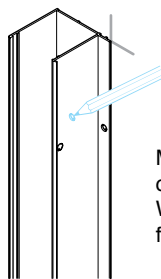


Mark position of pre-drilled Wall Channel fixing hole

12.2

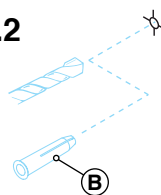


6mm dia. holes with drill bit suitable for wall surface

12.3

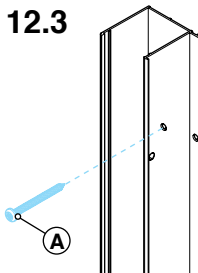


Fix through pre-drilled Wall Channel fixing hole

13

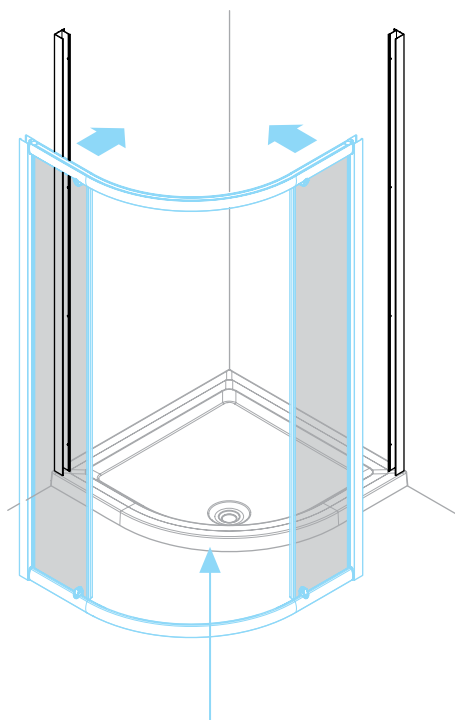

Plan View

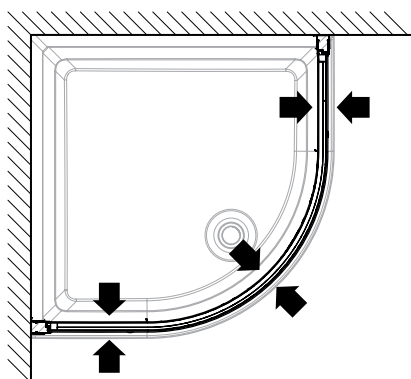


IMPORTANT NOTE

Ensure radius of enclosure matches tray.
DO NOT push frame fully into Wall Channel, allow a suitable gap to ensure adjustment and fixing.

Inside View


14

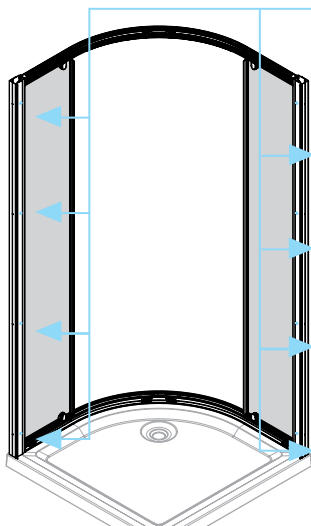

Ensure glass is positioned straight and is parallel with tray.

Inside View


*3mm dia. holes through pre-drilled holes using HSS drill bit

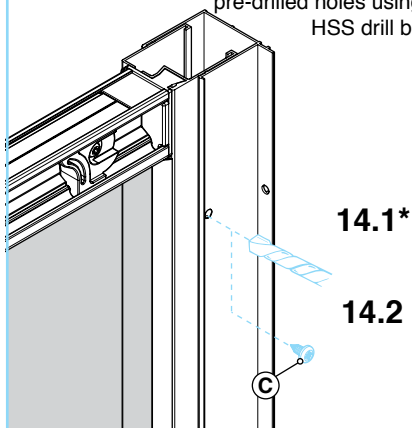

Tip: When inserting screws apply a small amount of oil to the screw thread to allow easier fixing.

Inside View

15

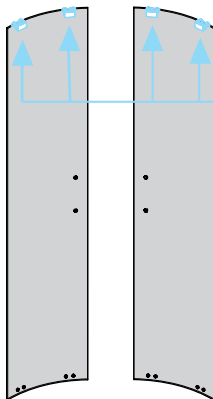


Please Note: Top Adjustable Bearings are supplied fully assembled. Disassemble part prior to fixing.




Please Note: Top adjustable Bearing and Bottom Spring Loaded Bearing variations. Use TOP ADJUSTABLE BEARING only.


Top Adjustable Bearing Fixing Preparation

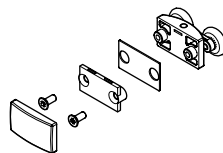


15.1

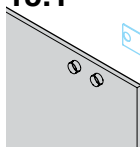


15.2

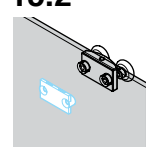


15.3

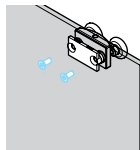

15.4

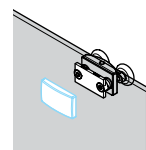

16

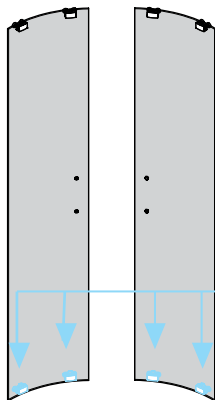


Please Note: Bottom Spring Loaded Bearings are supplied fully assembled. Disassemble part prior to fixing.




Please Note: Bottom Spring Loaded Bearing and Top adjustable Bearing variations. Use BOTTOM SPRING LOADED BEARING only.


Bottom Spring Loaded Bearing Fixing Prep.

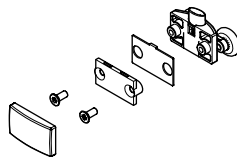


16.1

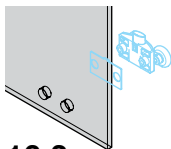


16.2



16.3

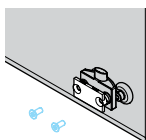


16.4

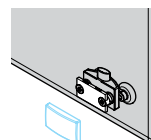


17

Inside View


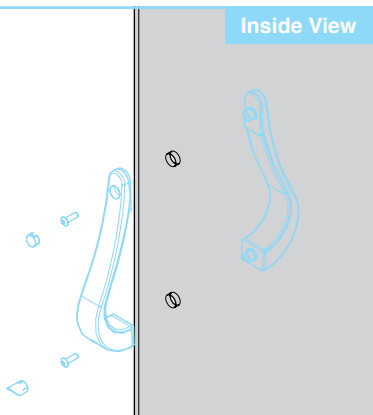


Please Note: Door Handles are supplied assembled. Using Allen key supplied, disassemble part and then re-assemble as shown. Ensure all screw heads are on the enclosure interior. DO NOT overtighten.

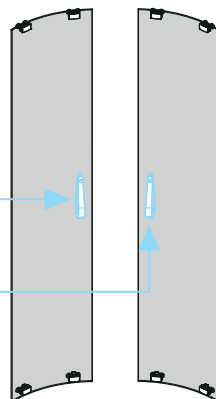

Inside View

18

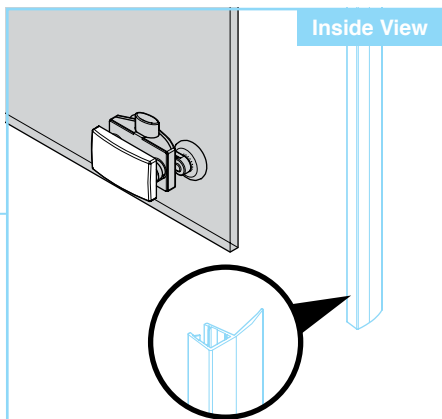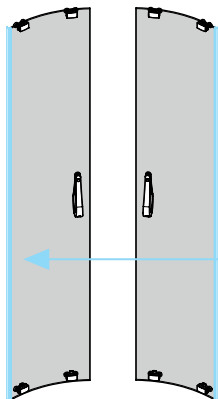

Inside View





Ensure Door Blade Seal is fitted with blade facing away from enclosure, (as Shown).



Tip: Push fit Door Blade Seal, start at the bottom and work up.

Inside View

19

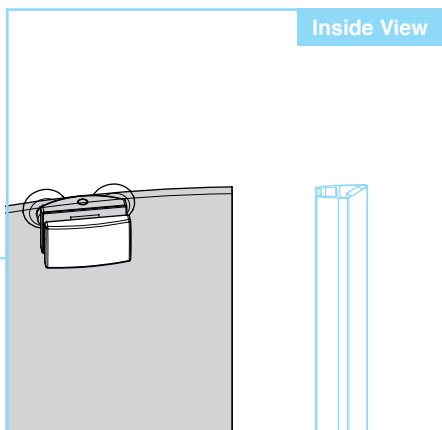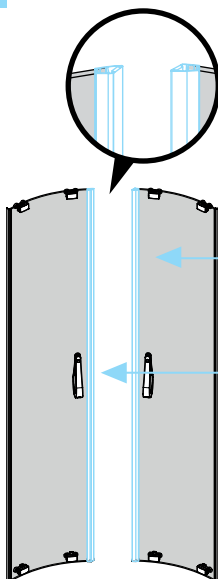

Inside View




Ensure correct position of Magnet Seals, (as shown).




Tip: Push fit Magnet Seal, start at the bottom and work up.

20

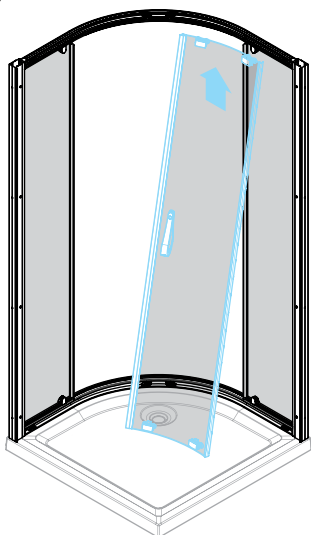


Tip:
Locate bearing wheels on the top rail first.

21

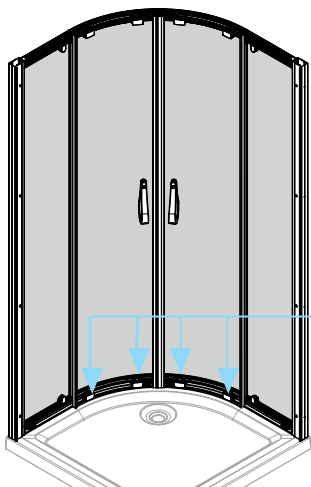


Tip:
Push button down and mount bearing wheels from the outside of the enclosure on to the rail, then release button to lock into place.

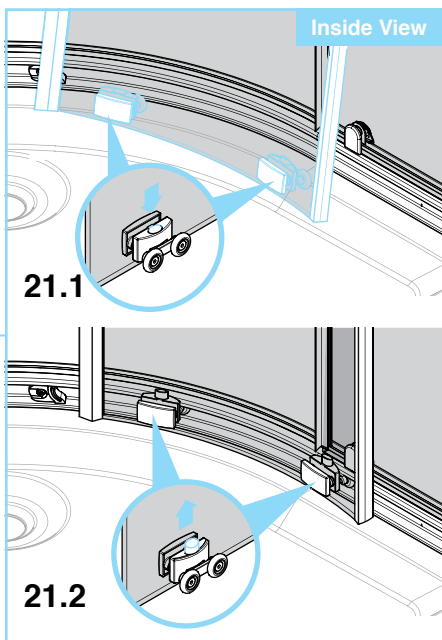


Inside View

22

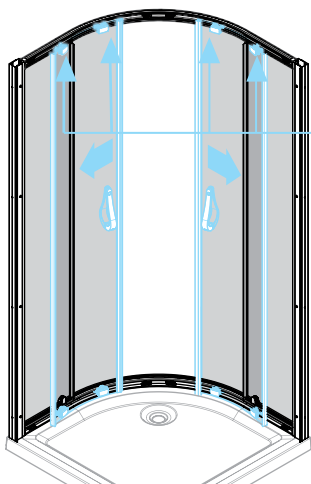

Tip: When door is correctly located, door position can be adjusted up and down using Top Bearing adjustment screws (right).

Inside, Underside View

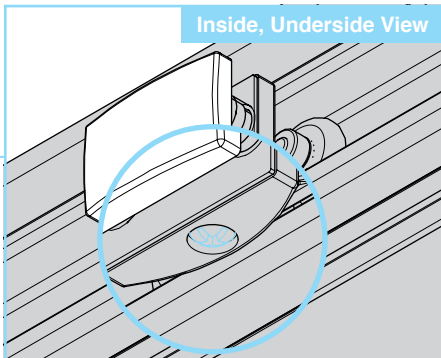


Using the adjustment in the Top Bearings, ensure that the Bottom Bearings are fully engaged into the bottom Cill Rail. Adjustment may also be used to ensure that the Door closes correctly against the Magnet Seals.




Ensure free movement of door. Adjust to suit.

Inside View

23

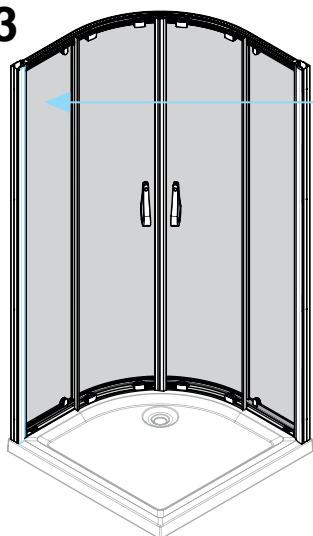


Inside View

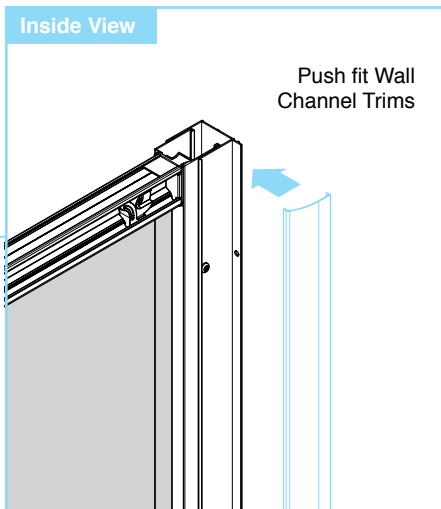


Push fit Wall Channel Trims

Inside View



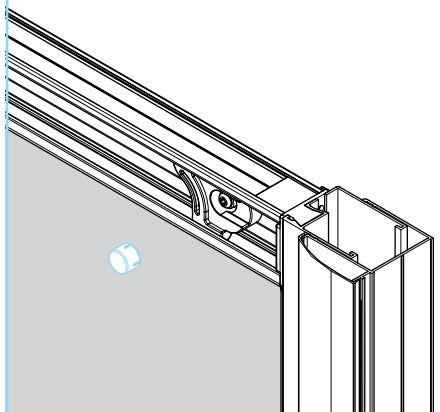


Push fit Door Stop Cover Caps.


24

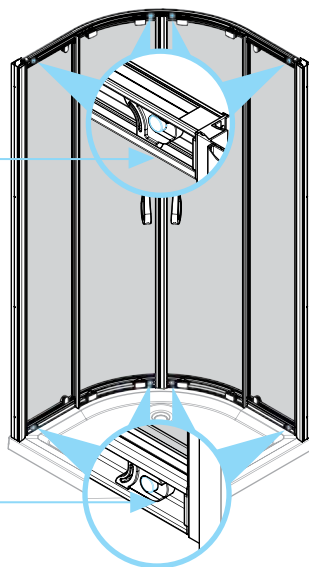

25

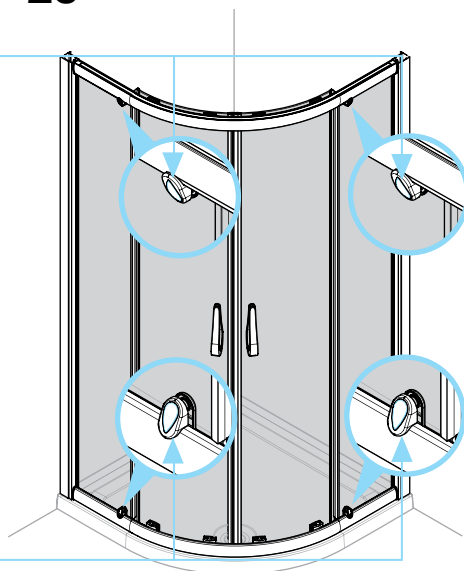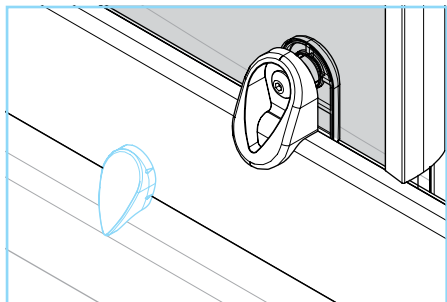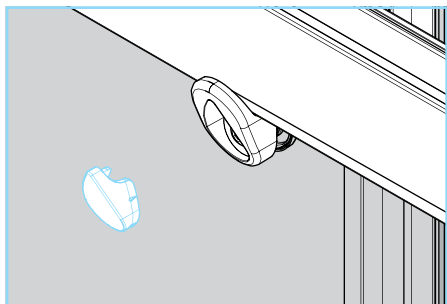

26

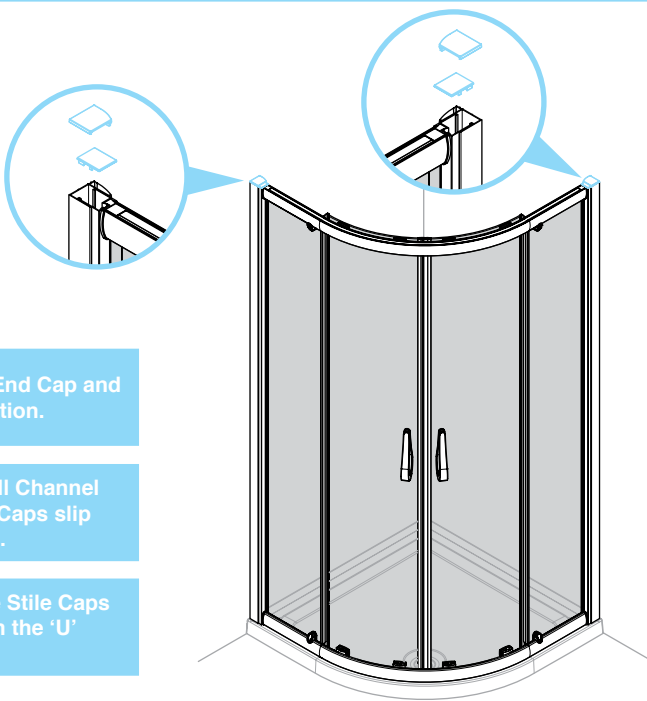

Push fit Wall Channel End Cap and Stile End Cap into position.




Take care not to let Wall Channel End Caps or Stile End Caps slip down the Wall Channel.



For best results, locate Stile Caps at the back edge first in the 'U' feature.

Inside View

27

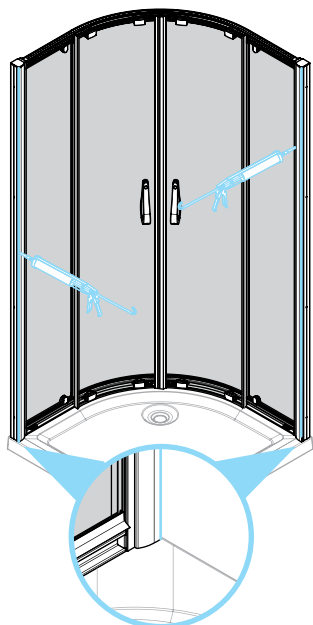


24 hour



Apply Silicone Sealant, (not supplied) vertically between wall channel and wall only.



Apply Silicone Sealant,
(not supplied).

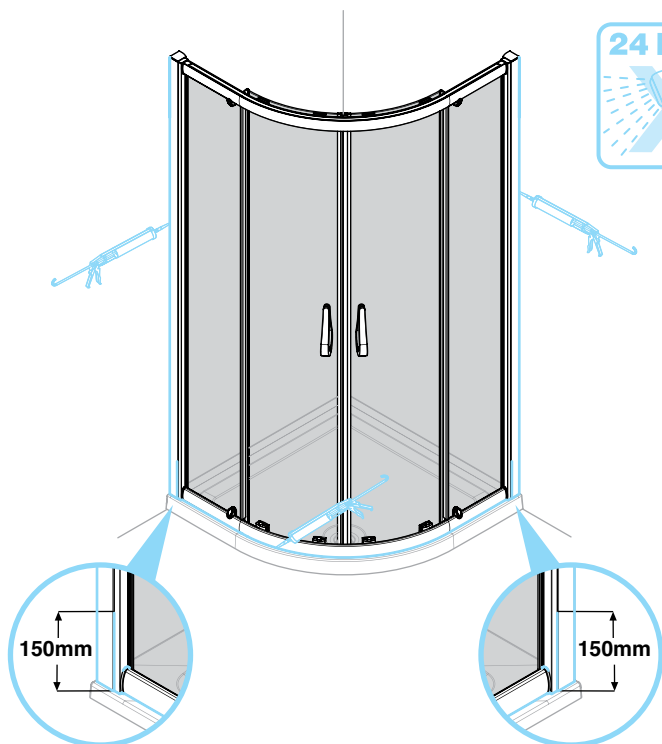

Product Care:

Use a non-abrasive cleaner.

Water marks may be removed with
a proprietary limescale remover or
household vinegar.

