
# **Sprung Bath Waste Installation & Aftercare**

| Item | Description        | Qty |
|------|--------------------|-----|
| 1    | Overflow cover     | 1   |
| 2    | Rubber washer      | 1   |
| 3    | Plastic washer     | 1   |
| 4    | Overflow elbow     | 1   |
| 5    | Overflow tube      | 1   |
| 6    | Screw nut          | 1   |
| 7    | Rubber washer      | 1   |
| 8    | Adaptor            | 1   |
| 9    | Rubber washer      | 1   |
| 10   | Washer(foam)       | 1   |
| 11   | Waste body         | 1   |
| 12   | Waste plug         | 1   |
| 13   | Bath overflow hole | 1   |
| 14   | Bath waste hole    | 1   |

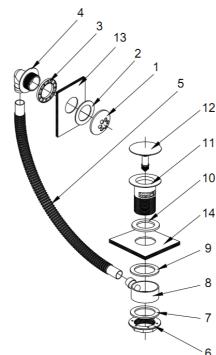

### **Installation instructions:**

## **Sprung Bath Waste**

#### **Before You Start:**

Installation should be carried out by a qualified plumber or other fully competent person.

- 1. Check all components, please contact your supplier if there are any missing or damaged parts.
- 2. It is advise to fit the waste to bath BEFORE installation of the bath.

#### Installation:

- 1. Unscrew and take off the overflow cover(1).
- 2. Place plastic washer(3) onto the threaded part of overflow elbow(4), then push through the bath overflow(13). A little silicone sealant is advised between the bath overflow hole(13) and overflow elbow(4).
- 3. Fit rubber washer(2) over the threaded part of overflow elbow(4), and screw overflow cover(1) onto the thread.
- 4. Unscrew and take off the screw nut(6), rubber washers(7&9), adaptor(8).
- 5. Re-place rubber washer(9) onto adaptor(8), fit to underside of the bath waste hole(14).
- 6. Fit waste body(11) together with the foam washer(10) through both the bath waste hole(14) and adaptor(8).
- 7. Fit rubber washer(7) over the thread part of waste body(11) and tighten screw nut(6). Apply a little silicone sealant or PTFE tap between the waste body(11), bath waste hole(14), adaptor(8), and screw nut(6) to prevent leakage.

#### After care:

Use a clean, soft damp cloth to clean the surface. Abrasive cleaners or acidic cleaners MUST NOT BE USED under any circumstances.