

# INCLUSIVE GRAB Riser Rail Kit

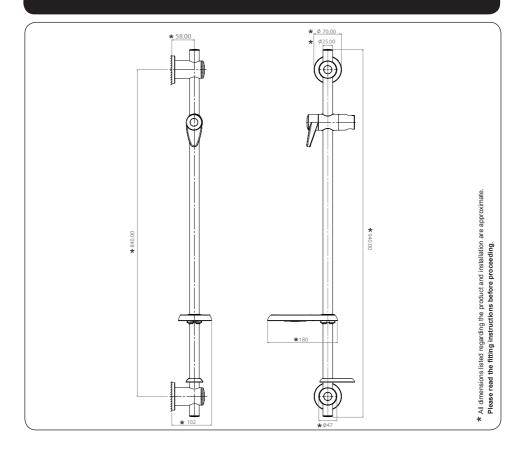



# **Installation Instructions**


Installers please note these instructions are to be left with the user

#### FITTING THE RISER RAIL ASSEMBLY

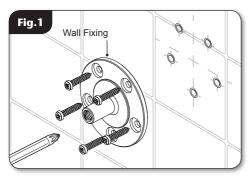

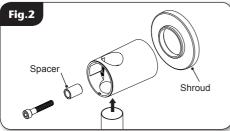

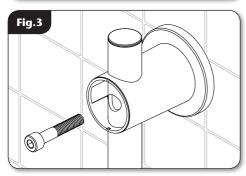

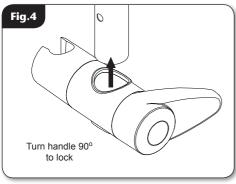

#### WARNING!

Check there are no hidden cables or pipes before drilling holes for wall plugs. Use great care when using power tools near water. The use of a residual current device (RCD) is recommended when using power tools.

When installed as instructed this kit can be used as a grab rail supporting up to 150kg. Suitable wall plugs and screws, for the type of wall, must be used to ensure the kit is secured properly to take the required loading.

For studded walls an appropriate wooden batten must be inserted in the wall to fix to. Do not rely on wall fixings through tile and plasterboard only for grab rail support.

Please note that the strength of the material being screwed into will heavily affect the loading strength of the rail.

- Place the riser rail to the wall and use both
  of the fixing holes to mark the position of
  the top and bottom wall fixings. Position the
  wall fixings in place and mark the locations
  of the holes to be drilled. Remove the wall
  fixings then drill and plug the wall.
- Replace the wall fixing to the wall and secure in place with 5 screws to ensure equal loading (Fig.1).

Note: Screws are not supplied with kit.

 Fit the shroud over the wall fixing and place the top bracket onto the shroud. Insert the spacer, slide the riser rail into the bracket and line up the fixing holes (fig.2).

Note: The larger of the two holes in the top and bottom of the riser rail should be facing outwards when the holes are aligned with the fixing hole in the bracket.

 Use the supplied M8 cap head screw (6mm hexagonal wrench) to fix the riser rail and bracket to the wall fixing (fig.3).

### FITTING THE RISER RAIL ASSEMBLY

- Fit the showerhead holder onto the riser rail.
   Turn the lever anti-clockwise to release the locking mechanism, then slide the holder onto the rail (fig.4). To secure the holder in place, turn the lever clockwise.
- Slide the soapdish and hose retainer onto the bottom of the riser rail, below the holder (fig.5).
- Fit the shroud and the bottom bracket, with spacer already inserted, onto the riser rail and screw to the bottom wall fixing.

Note: The screw should pass though the larger hole in the base of the riser rail (fig.6) and come to rest against the inner of the riser rail to stop it from turning within the bracket.


 Fit the end caps onto both brackets. The end caps will only fit one way. Fit the riser rail trims to both ends of the rail.


#### FITTING THE HOSE AND SHOWERHEAD


- Feed the flexible hose through the ring on the hose retainer. This is to comply with Water Regulations.
- Screw the flexible hose to the shower outlet and showerhead, making sure the supplied washers are in place at both ends of the flexible hose (fig.7).
- Place the showerhead into the holder and check that it fits correctly (fig.8).

Note: The holder is slightly tapered and the showerhead and hose will only fit from one direction.

**IMPORTANT:** It is the conical end of the hose which grips into the holder. The showerhead will not fit in the holder without the hose attached.

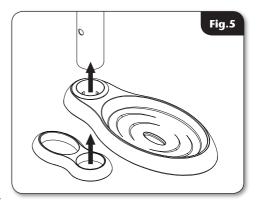

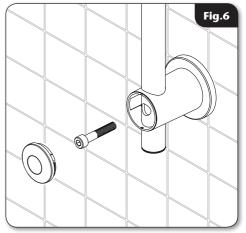

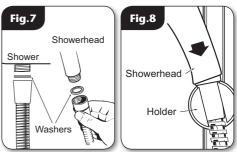

## **SPARE PARTS**

Ref	. Description	Part number
_	Kit - white/grey	88900041
-	Kit - chrome/grey	88900042
1	Bracket Set* - White  - Bracket (White)  - Cap (White)	83315380
	- Chrome - Bracket (Chrome) - Cap (Chrome)	83315390
2	Wall Fixing Set - Wall Fixing - M8 Cap Head Screw	83315410
	- Spacer	
3	Bracket Cap - white	7054530
	- chrome	7054545
4	Riser Rail – 25 mm - Stainless Steel	88800038
5	S/Head Holder - white/grey	P84200110
	- chrome/grey	P84200120
6	Soap Dish	S86100380
7	Hose Retainer - white	7054532
	- chrome	7054546
8	Shroud	7054542

<sup>\*</sup> Bracket Set for both white and chrome contains 2 of each component.

