


2 DOOR QUADRANT INSTALLATION GUIDE



Please read these instructions carefully and keep for future reference. Incorrect fitting will invalidate the guarantee

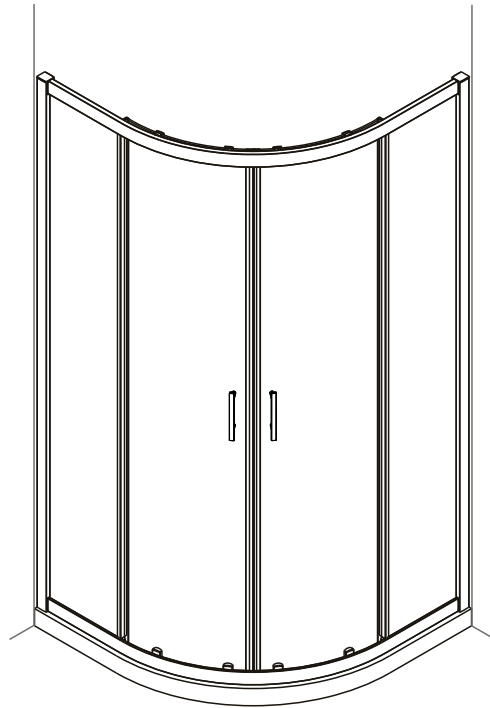

SAFETY









- Handle glass with great care. Although glass is very tough, sharp impacts can damage both the glass and metal frame.
- Make sure there are no hidden pipes or cables hidden in the wall where you intend to drill
- Wear safety goggles, shoes and appropriate clothing




BEFORE INSTALLATION

- Check that the shower tray is level in all directions. The enclosure will not sit correctly on an uneven surface. If uneven, the wall channels may not fit and the doors may not shut correctly.
- The enclosure should be fitted on tiled walls which are sealed with waterproof grout.
- The tiling or other wall finishing should be effectively sealed at the tray and wall edges.
- The shower tray and the enclosure must match in size, Attempting to fit the incorrect size of enclosure to the shower tray will result in water leakage.
- Always check very carefully that all components are present and profiles are vertical.
- To Avoid damage, use the opened out packaging to build the screen on
- Note: The screws and wall plugs supplied are for masonry walls. For lightweight walls i.e. stud partitions, plasterboard etc. use alternative fixings

FIXING KIT COMPONENTS

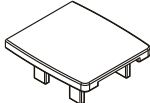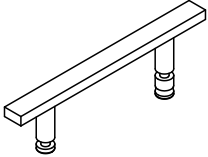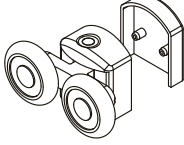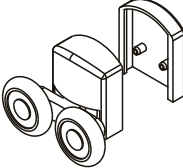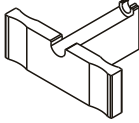6		6		2		
4		4		1		
				1	 3#	

TOOLS REQUIRED

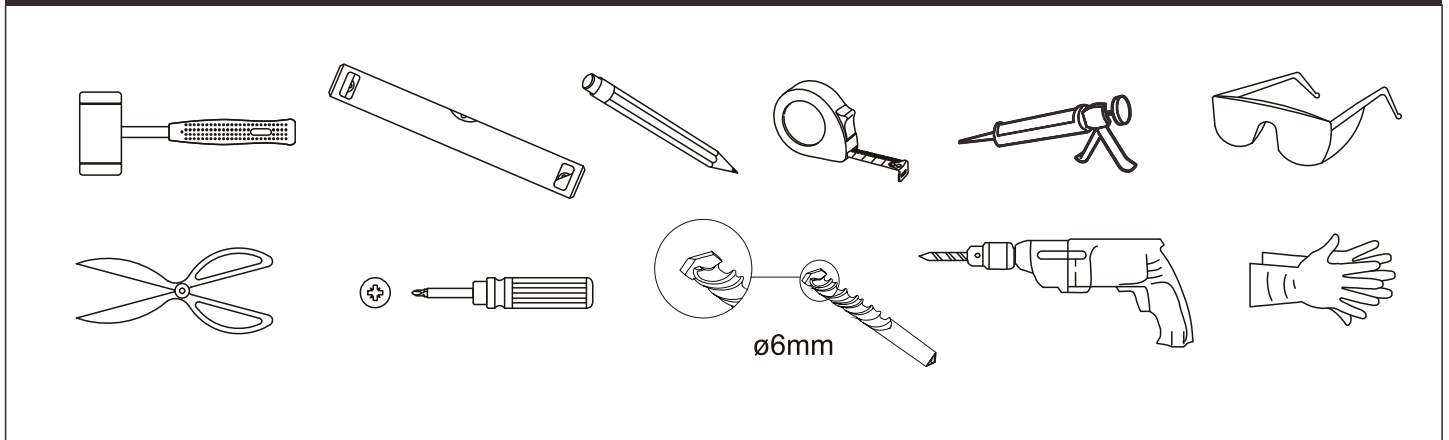

PRODUCT ADJUSTMENT


2 DOOR QUADRANT CODE	DOOR SIZE IN MM	OVERALL ADJUSTMENT
Z280	800	770-790
Z290	900	870-890

OFFSET SIZES PRODUCT ADJUSTMENT

2 DOOR QUADRANT CODE	DOOR SIZE IN MM	OVERALL ADJUSTMENT
Z2108	1000x800	970-990/770-790
Z2128	1200x800	1170-1190/770-790
Z2129	1200x900	1170-1190/870-890


STAGE 1

Ensure your tray is 100% level in all directions before fitting the enclosure

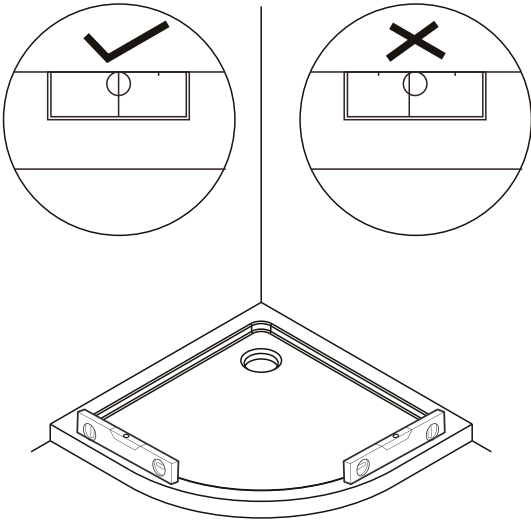


STAGE 2

Effectively seal at the joint between the tray and the wall edges

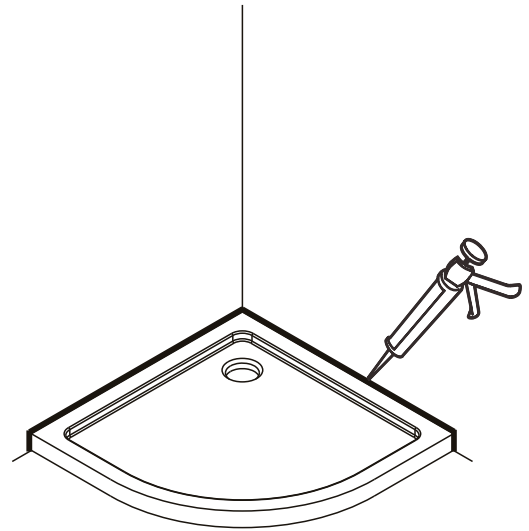

STAGE 3


Mark the position of the outside of each wall profile within the adjustments on page 1. Before marking the fixing positions check the label on the back of the profile indicating the side of the profile to face inside

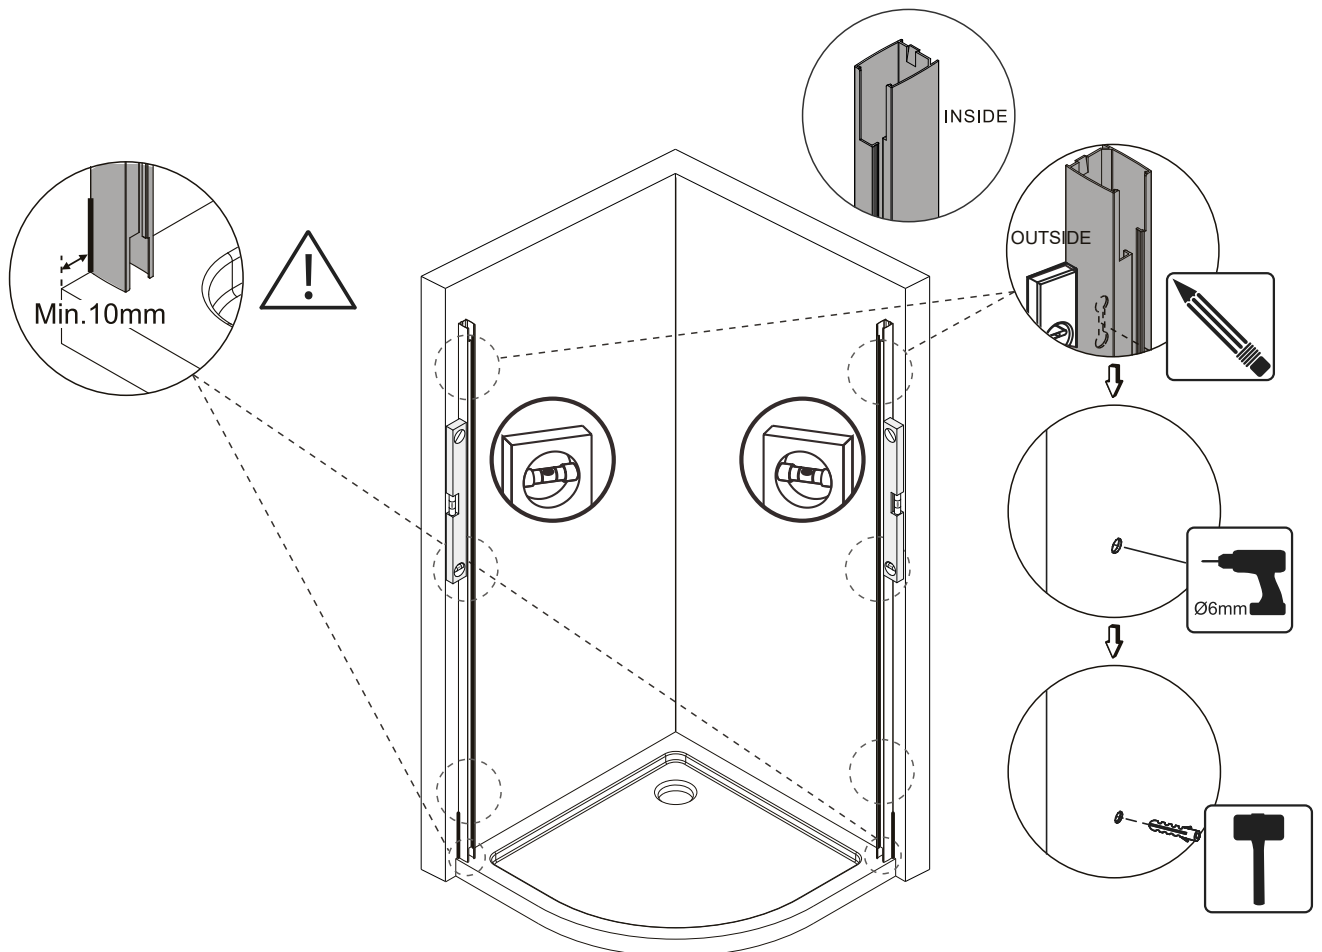


STAGE 4

Build the product on the tray starting with the bottom profile

- A. Slide the wall profile fully over the nylon bracket
- B. Load the 4x30 screw onto the tool provided and fix the wall profiles, top, middle and bottom
- C. Slide the top frame fully into the ends of the wall profiles. Check the frame is locked in place and does not slide back out of the frame.

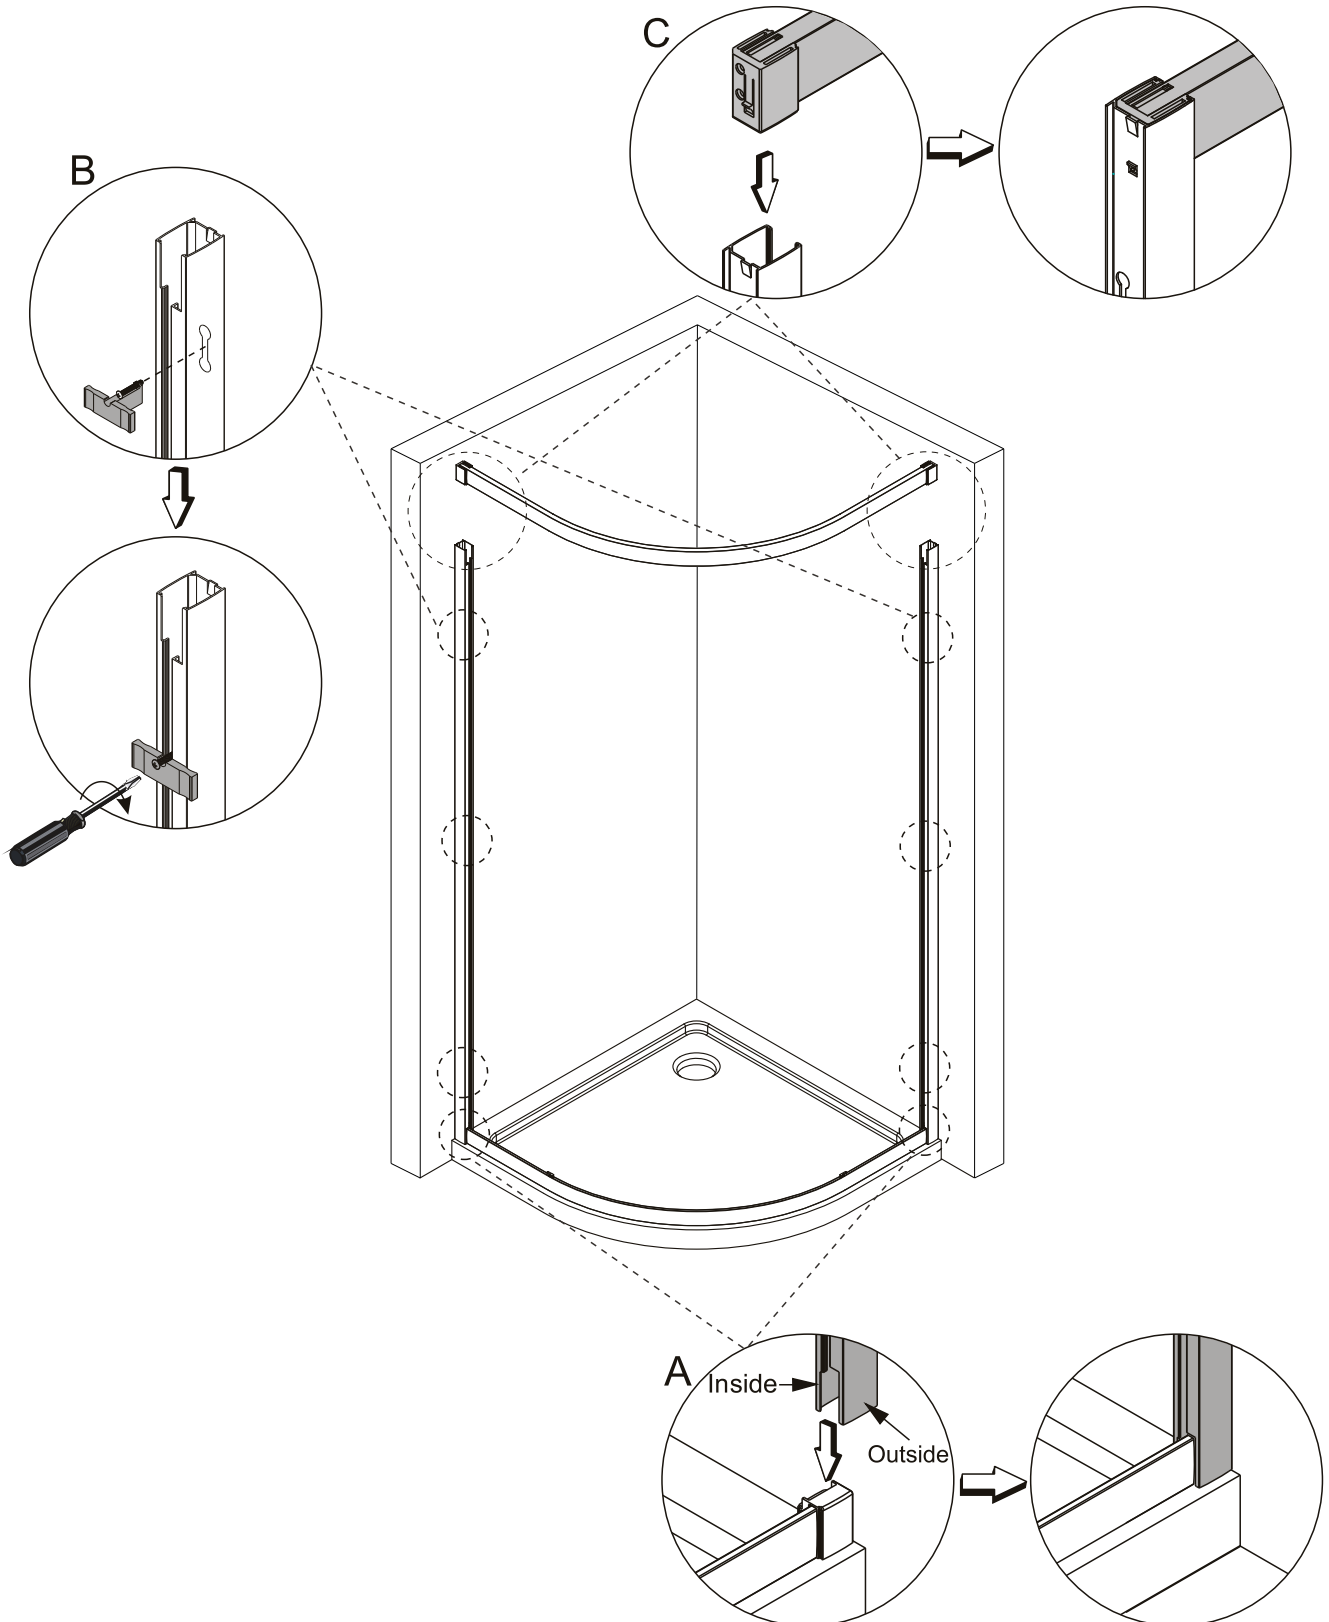

STAGE 5

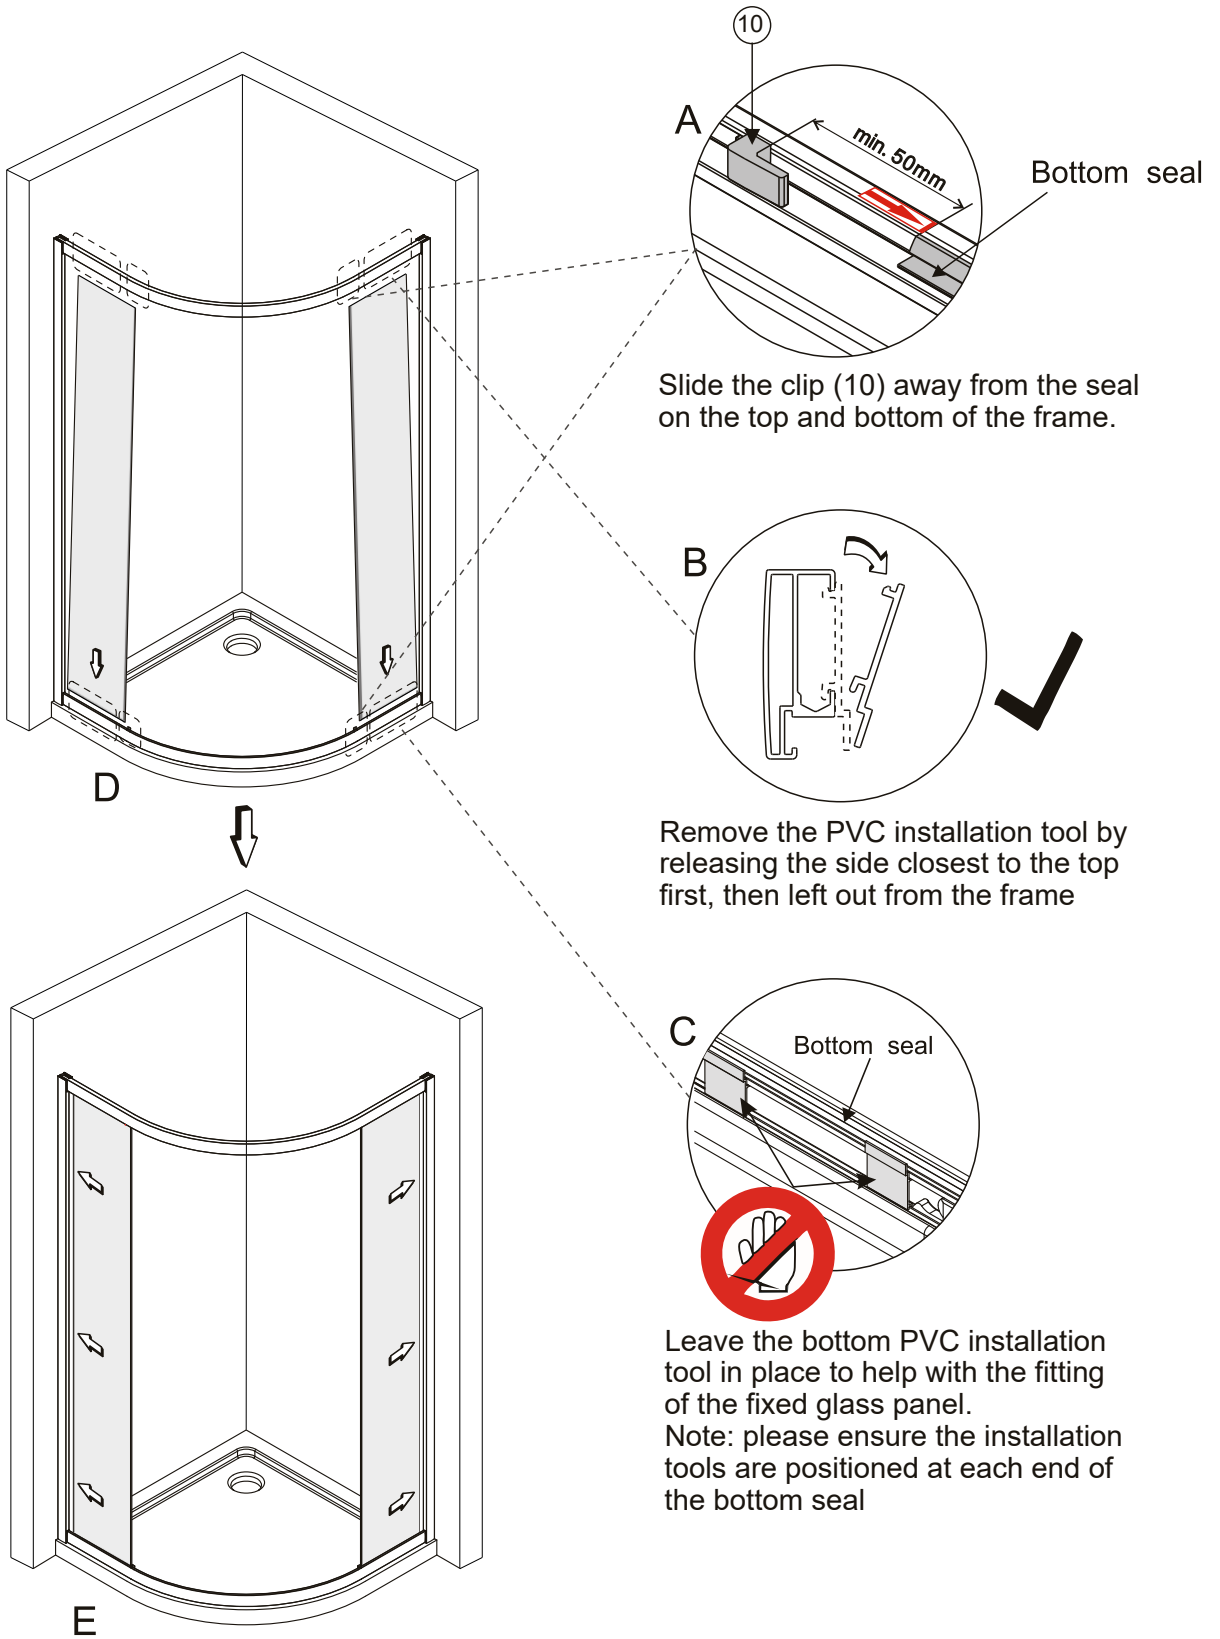


D. Standing inside the enclosure, place the bottom of the fixed panel on the frame at a slight angle, then lean the panel forward into the top of the frame.

E. Slide the glass panel into the wall profile


STAGE 6

Adjust the top and bottom profile to align the glass edge with the red line on the labels, while ensuring that the glass panels are plumb

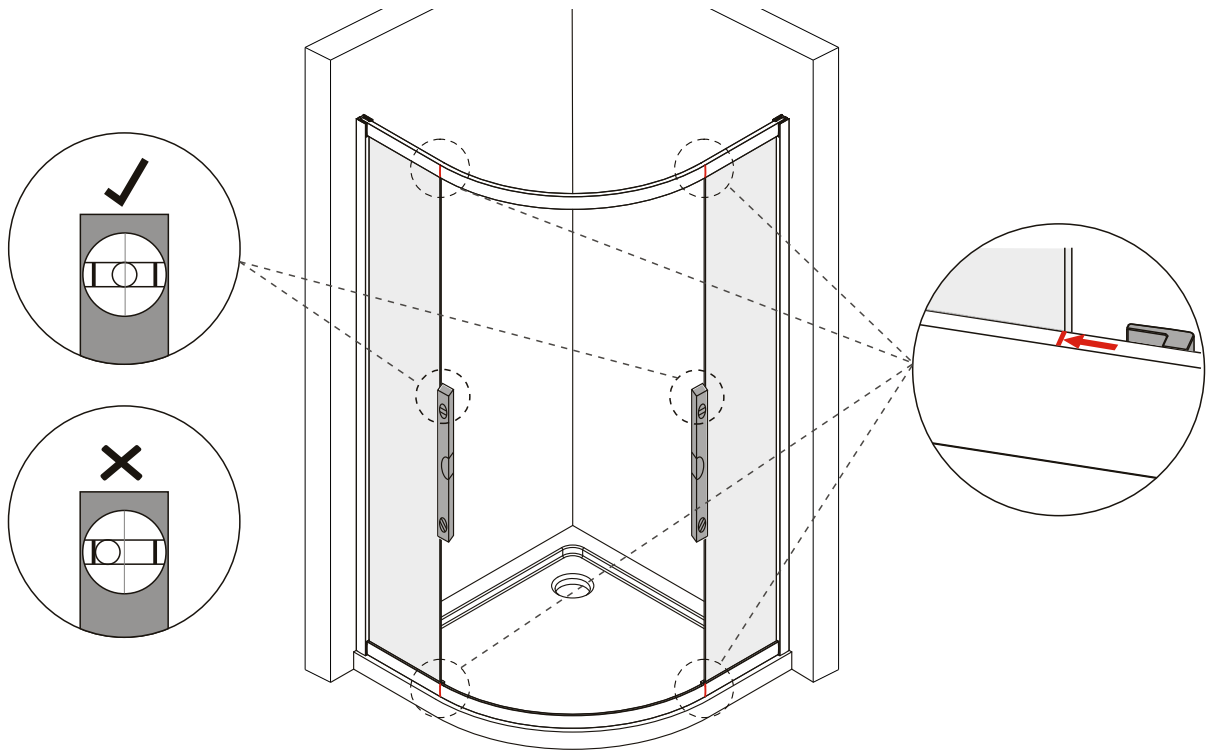


STAGE 7

- Slide the clip over the fixed panel on both the top and bottom of the panel
- First dampen the seal with water to help it slide into the profile. Ensure that flat side of the seal is faced to the glass and the ridged side to the profile. Starting at the bottom, use the tool provided to insert the wedge gasket between the glass and the profile.
- Remove the PVC installation tool by relasing the side closest to the bottom first, then lift out from the frame

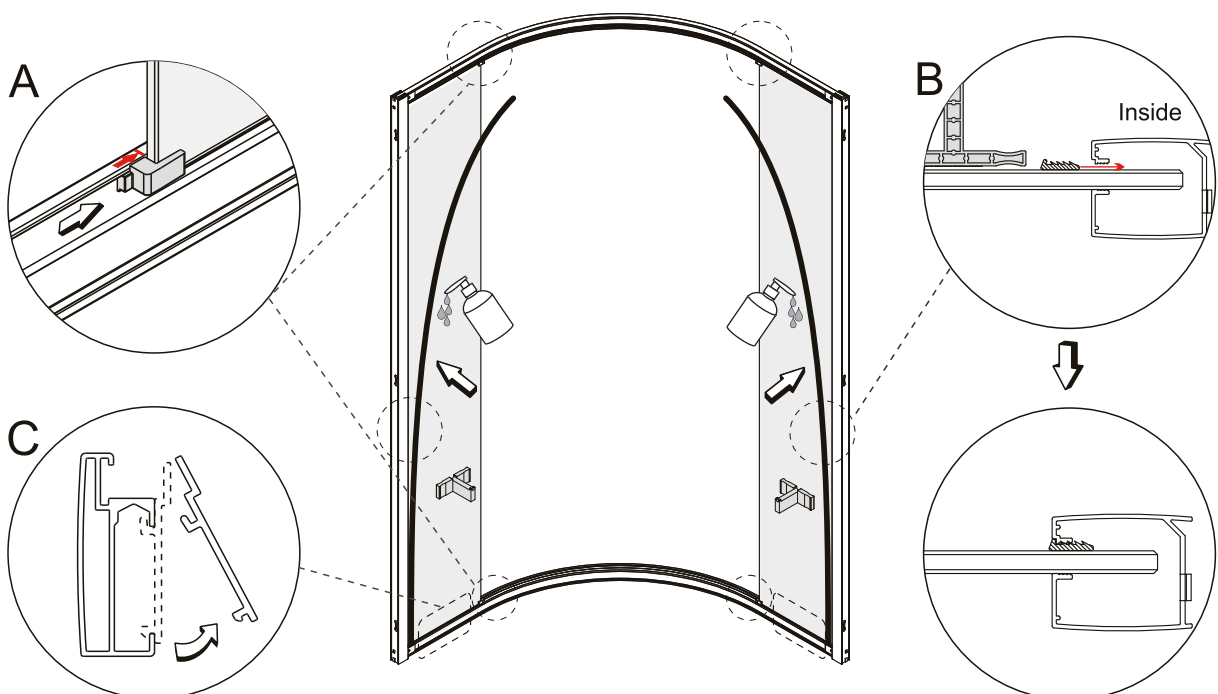


STAGE 8

Tighten the grub screws until they are flush with the adjusting block





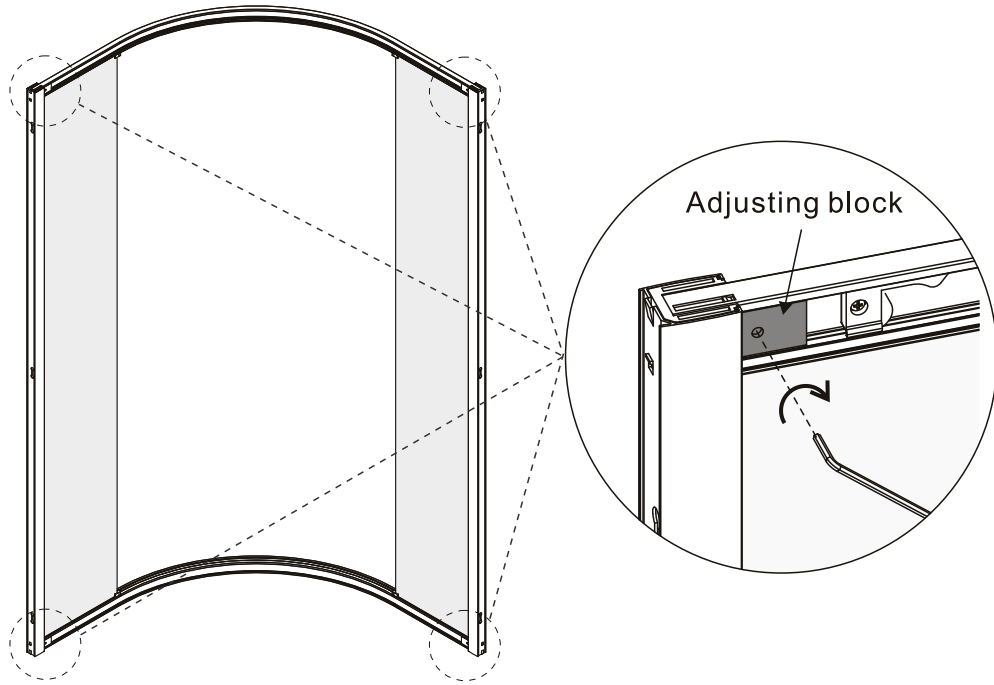


STAGE 9


Slide the rollers labeled TOP into the top of the glass panel roller fixing and repeat the step for the BOTTOM rollers

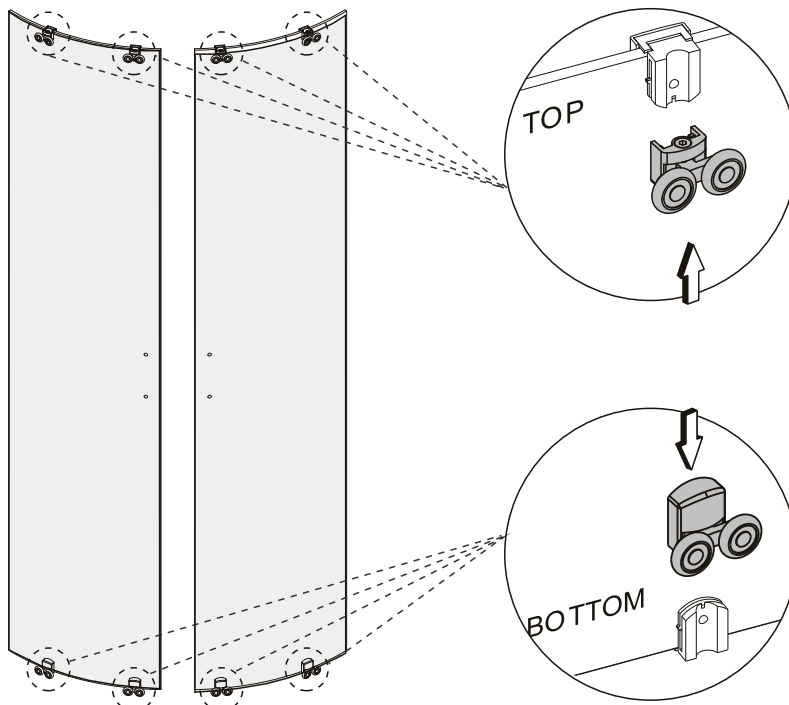

STAGE 10

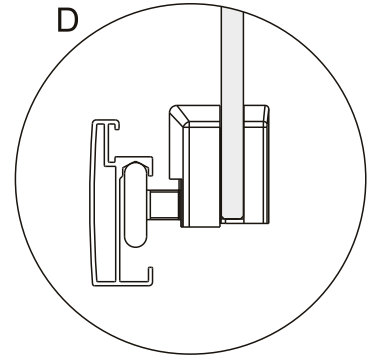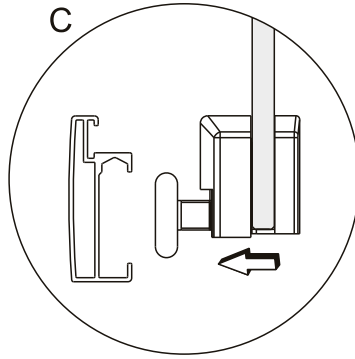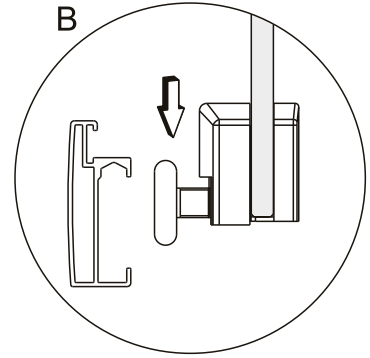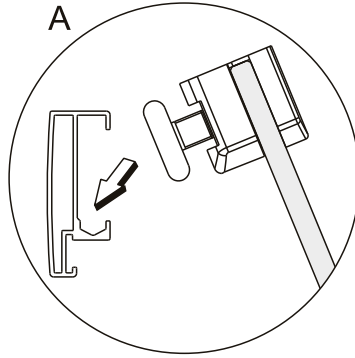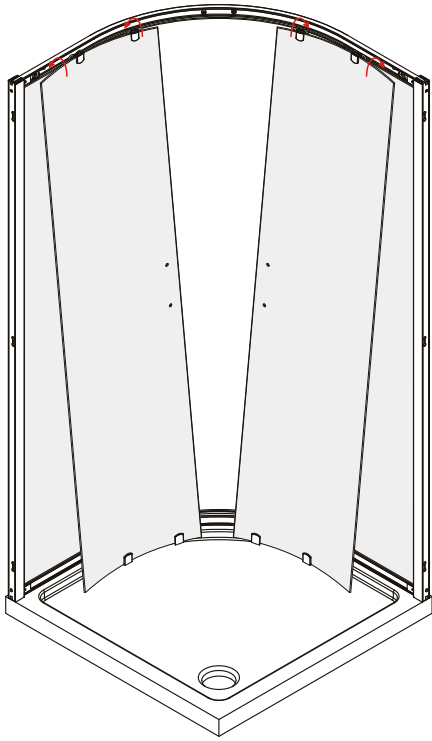


STAGE 11

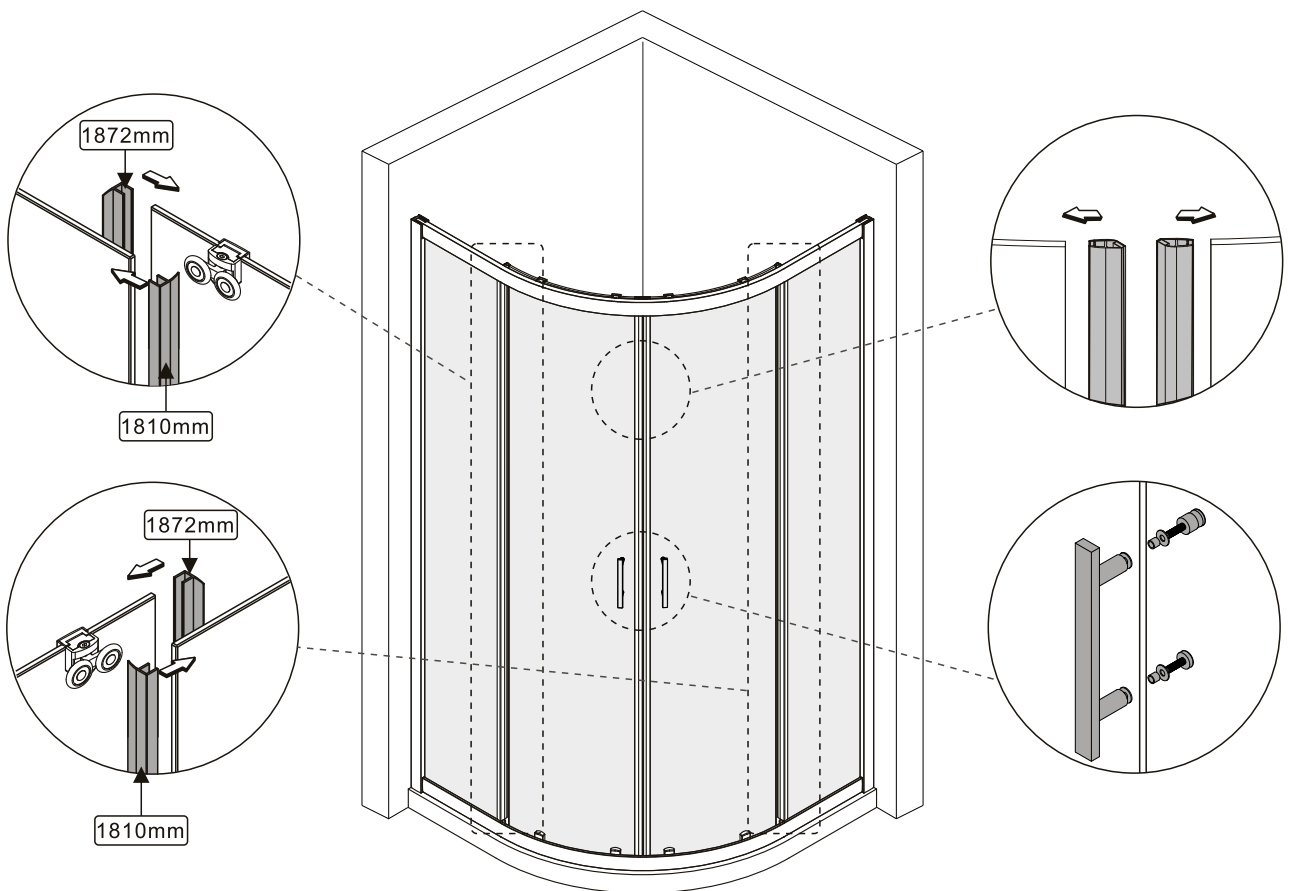

STAGE 12


Adjust the rollers to ensure the moving panels are plumb, that the overlap of both panels are parallel and there are no gaps between the magnet seals.

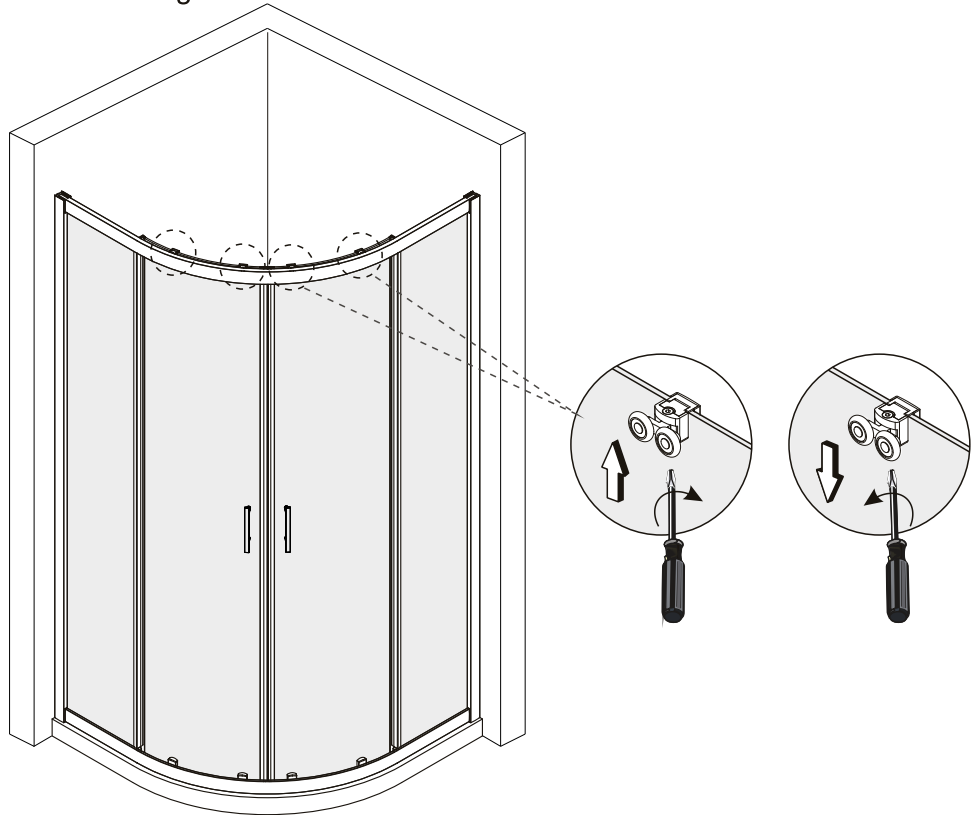


STAGE 13

Before sealing make sure that all surfaces are clean, dry and free from any residue such as grout. Use a quality silicone sealant and applicator to finish the door. Seal between the wall and the wall profile. On the top and bottom of the frame seal between the fixed panel seal and the clip, and between the clip and the frame. Seal between the bottom profile and the tray/tiles.

DO NOT USE THE ENCLOSURE FOR 24 HOURS

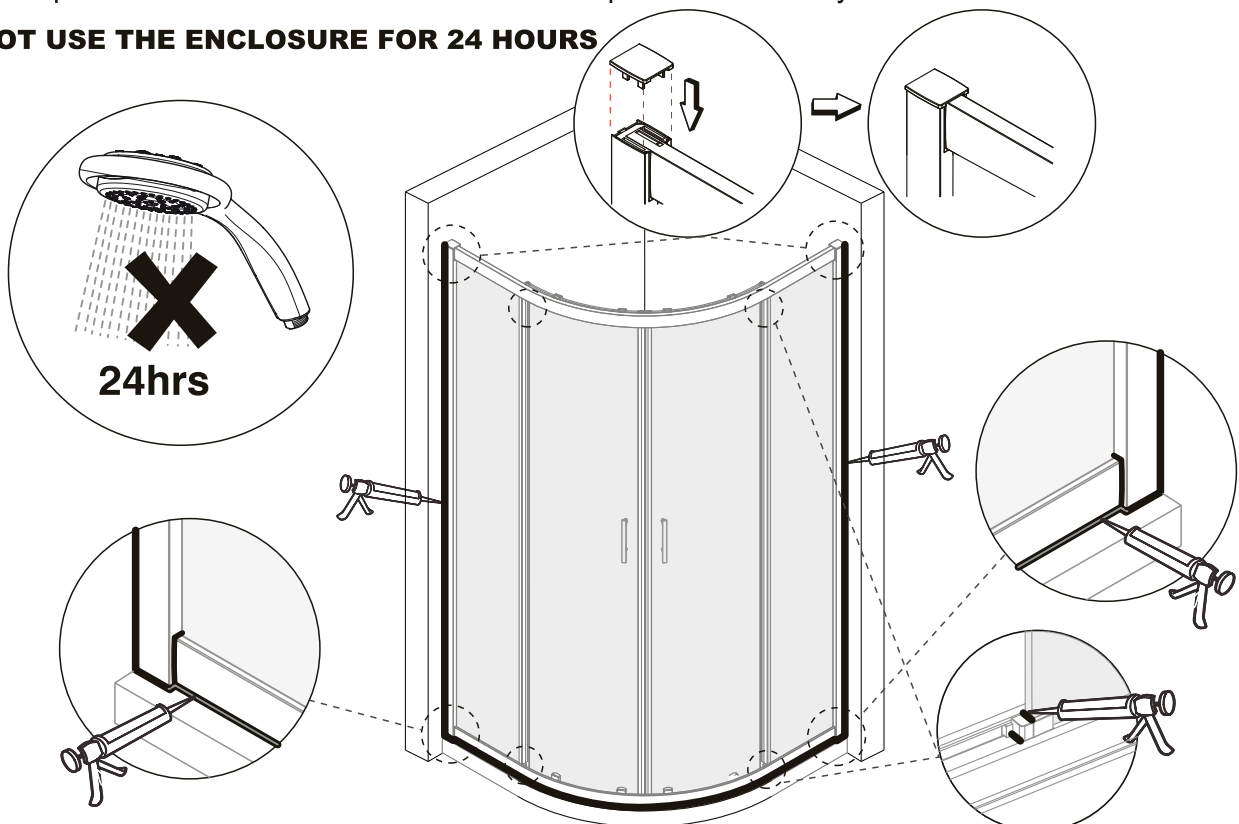

PARTS LIST

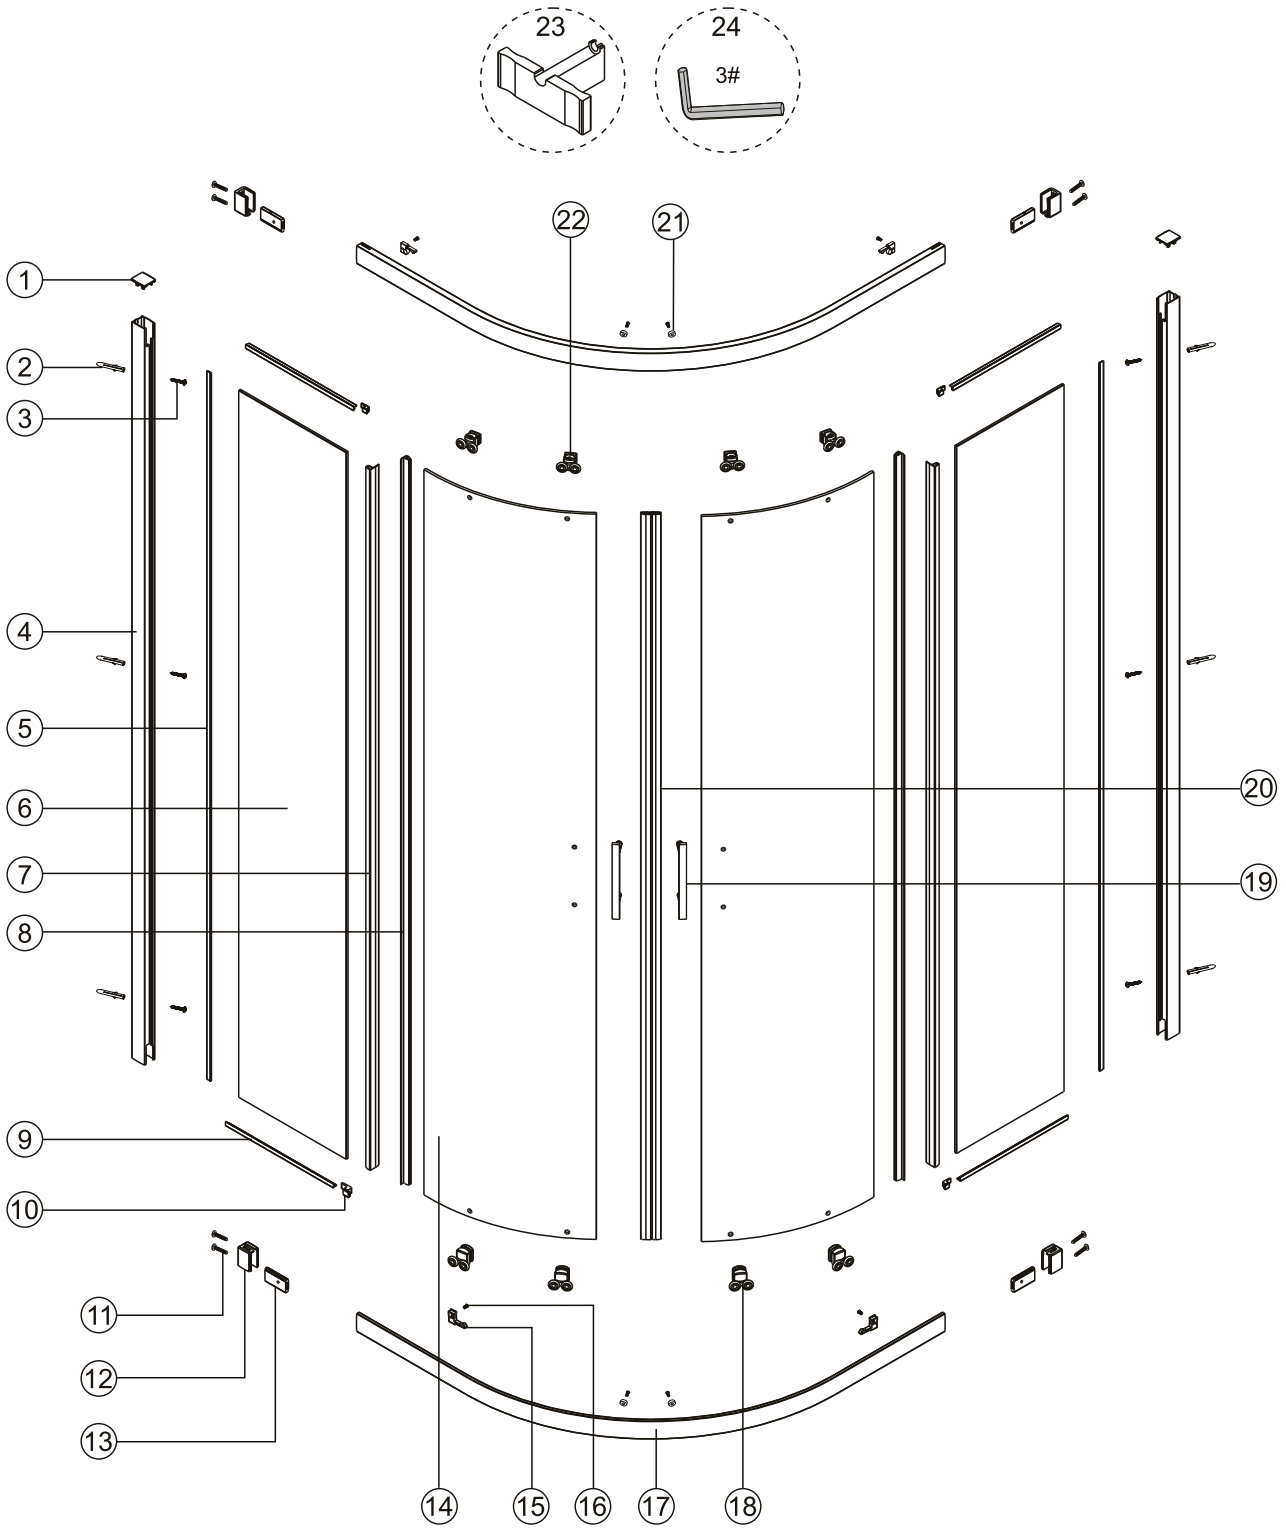

Item No.	Part List Description	Part Code	2 Door Quad Size Variations				
			800×800	900×900	1000×800	1200×800	1200×900
1	Wall profile cover cap	K010	2	2	2	2	2
2	Wall plug	2SP12	6	6	6	6	6
3	4 x 30 frame fixing round screw	2SY51	6	6	6	6	6
4	Slider wall profile Q	K073	2	2	2	2	2
5	Wedge gasket 2.5mm	K165	2	2	2	2	2
6	Fixed panel - various sizes	N/A	2	2	2	2	2
7	Upright seal with 9mm soft fin H1810mm	K120	2	2	2	2	2
8	Upright seal with 15mm soft fin H1872mm	K124	2	2	2	2	2
9	Top/bottom rail seal	K114	4	4	4	4	4
10	glass clip left / right	K143 / K144	2	2	2	2	2
11	Countersunk head screw	K145	8	8	8	8	8
12	Sleeve for fixed panel. Type A / Type B	K001 / K002	4	4	4	4	4
13	Nylon adjusting block Left / Right	K008 / K009	4	4	4	4	4
14	Movingpanel - various sizes	N/A	2	2	2	2	2
15	Roller stop Left / Right	K005 / K006	4	4	4	4	4
16	Panhead screw 4x10	K158	8	8	8	8	8
17	Top/bottom profile(800*800)	K054	2				
17	Top/bottom profile(900*900)	K058		2			
17	Top/bottom profile(1000*800)	K057			2		
17	Top/bottom profile(1200*800)	K059				2	
17	Top/bottom profile(1200*900)	K060					2
18	Bottom double roller	K049	4	4	4	4	4
19	Single handle with inside knob	Z001	2	2	2	2	2
20	Magnetic seal set	K126	2	2	2	2	2
21	Round bump stop	K156	4	4	4	4	4
22	Top double roller	K048	4	4	4	4	4
23	Screw fixing jig	K023	1	1	1	1	1
24	3mm Hex key	MG3MMALKEY	1	1	1	1	1