

## Troubleshooting

### Leaks:

#### ...Between head and cartridge

- (1) Turn off the water supply to the filter and dispense water from drinking water tap until water and airflow stops.
- (2) Remove cartridge and inspect o-rings to make sure they are in place and clean.
- (3) Install cartridge and turn on water supply. If it still leaks, contact Technical Support.

#### ...From pushfits

Turn off saddle valve and turn on drinking water tap. Remove tubing from the pushfit inserts on the filter head and ensure the tube is cut squarely. If so insert the tube back into the pushfits ensuring the tube is pushed fully home. Open the water supply valve, then close tap and check for leaks. If the leaks persist, or if there are other leaks on the unit, turn off the water supply then call Technical Support.

#### ...On saddle valve connection

Call Technical Support.

#### ...On tap/tubing connection

Call Technical Support.

NOTE: If leaks persist, or if there are other leaks on system, turn off water supply. Call our technical support department.

## Performance Data

### Model: Taste Fresh Protection

Important Notice: Read this performance data and compare the capabilities of this system with your actual water treatment needs.

#### Test Conditions:

Flow Rate	= 0.5 gpm
Inlet Pressure	= 60 psi (4.1 bar)
pH	= 7.5 ± 1
Temperature	= 68° F ± 5° F (20° C ± 2.5° C)

#### Operating Requirements:

Pressure	= 30-125 psi (2.1-8.62 bar)
Temperature	= 40°-100° F (4.4°-37.7° C)
Turbidity	= 5 NTU Max

Do not use with water that is microbiologically unsafe or unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

### 1000R Cartridge

	U.S. EPA MCL*	Avg. Influent Concentration	Avg.(Max) Effluent Concentration	Avg.(Min) Reduction
<b>Standard 42</b>				
Chlorine—Class I	—**	2.1 ppm	0.02 ppm	99%
Particulates (0.5 to <5 µm) —Class I	—**	7,108,826 #/ml	15,896 #/ml	99.8%
<b>Standard 53</b>				
Cysts†	99.95 % Reduction	130,750 #/ml	0 #/ml (0 #/ml)	99.99% (99.99%)
Turbidity	0.5 NTU*	37.4 NTU	0.08 NTU (0.08 NTU)	99.96% (99.95%)
Lead (6.5 pH)	0.010 ppb‡	0.15 mg/L	0.001 mg/L (0.001 mg/L)	99.3% (99.3%)
Lead (8.5 pH)	0.010 ppb‡	0.15 mg/L	0.002 mg/L (0.003 mg/L)	98.6% (98%)
Atrazine	0.003 mg/L	0.0088 mg/L	0.0002 mg/L (0.0002 mg/L)	97.7% (97.7%)
Lindane	0.0002 mg/L	0.002 mg/L	0.00005 mg/L (0.00005 mg/L)	97.5% (97.5%)

Flow Rate = 1.89 Lpm Capacity = 1892L or 6 Months

\* US EPA Maximum Contaminant Level

\*\* No maximum contaminant level

† NSF test requirement of at least 50,000 3-4 micron particles per milliliter. The 3-4 micron size particle is a surrogate particle for Cryptosporidium and Giardia cysts.

‡ US EPA Action Level for lead

NOTE: Substances reduced are not necessarily in your water. Filter must be maintained according to manufacturer's instructions, including replacement of filter cartridges.

### Guarantee

This product is guaranteed for the period of one year from the date of purchase against any manufacturing fault. The guarantee is only valid if the product has been installed and used in accordance with the manufacturer's instructions and has not been dismantled or interfered with in any way. Damage caused to the product or by the product as a result of failure to use the product in accordance with the manufacturer's instructions is not covered by this guarantee. Under this guarantee we undertake at our discretion to repair or replace free of charge the product or any part thereof that is found to be faulty. Costs associated with the fitting of a replacement product or part or the removal of the product are not covered by this guarantee. Loss or damage caused by the product (including consequential loss) is not covered by this guarantee. This guarantee does not affect your statutory rights.

## Customer Help Line:

01376 334 200

Monday to Friday 08.30 – 17.00 UK Only.

BWT UK Limited,  
BWT House,  
Coronation Road,  
High Wycombe,  
Buckinghamshire,  
HP12 3SU

Tel: 01376 334 200  
Fax: 01376 334 201  
Email: sales@bwt-uk.co.uk

All trademarks are protected under European law and must not be reproduced by third parties without express permission of BWT UK Limited in writing. As part of BWT's policy of constant product development, BWT reserves the right to alter product specifications without prior notice.



## Taste Fresh Protection Drinking Water Filter System Installation and Operating Instructions Model: TFPKIT

### Specifications

Pressure Range:	30-125 psi (2.1-8.62 bar)
Temperature Range:	40-100°F (4.4-37.7°C)
Rated Service Flow:	1.9 Lpm
Filter Capacity:	1893 L

### Parts Included:

- Filter head with built-in mounting bracket, and compression fittings
- 1000R filter cartridge
- Screws for mounting bracket
- Saddle tapping valve with tube attached
- Drinking water tap with tube attached
- 6.35 mm (1/4") plastic tubing

### Tools Required

- Phillips Screwdriver
- Towel
- Drill
- Tape Measure
- File or Sandpaper
- Pencil
- 3.2 mm (1/8") Drill Bit
- Adjustable Wrench

### Optional Materials

- 6.3 & 12.7 mm (1/4" & 1/2") Drill Bit
- Cone-shaped grinding wheel

### Precautions

- WARNING:** Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.
- CAUTION:** This filter must be protected from freezing, which can cause cracking of the filter and water leakage.
- CAUTION:** Because of the product's limited service life and to prevent costly repairs or possible water damage, we strongly recommend that the head of the filter be replaced every ten years. If the head of your filter has been in use for longer than this period, it should be replaced immediately. Date the top of any new head to indicate the next recommended replacement date.
- CAUTION:** Turn off water supply to head without cartridge if it must be left unattended for an extended period of time.



- For cold water use only.
- Make certain that installation complies with all local bylaws and regulations.
- The contaminants or other substances removed or reduced by the selected cartridge are not necessarily in your water. Ask your local water supplier for a copy of their water analysis.
- After prolonged periods of non-use (such as during a holiday) it is recommended that the system be flushed thoroughly. Let water run for 2-3 minutes before using.
- The filter cartridge used with this system has a limited service life. Changes in taste, odour, colour, and/or flow of the water being filtered indicate that the cartridge should be replaced.

## Installation

- For standard installation on 15mm copper, steel, brass or PVC cold water pipe.
- Please read all instructions and precautions before installing and using your under-sink drinking water system.
- Numbered diagrams correspond with numbered steps.

### 1. Selecting the Tap Location

NOTE: The drinking water tap should be positioned with function, convenience, and appearance in mind. An adequate flat area is required to allow tap base to rest securely. The tap fits through a 12mm hole.

CAUTION: Do not attempt to drill through an all-porcelain sink. If you have an all-porcelain sink, drill through countertop next to sink. The following instructions apply to porcelain-coated cast iron and stainless steel sinks only. Consult a professional plumber about installation on an all-porcelain sink.

(continued overleaf)

Customer Help Line: 01376 334 200


Monday to Friday 08.30 – 17.00 UK Only.

## 1. Selecting the Tap Location (cont)

- (A) Line bottom of sink with newspaper to prevent metal shavings, parts, or tools from falling down drain and damaging sink disposal unit if fitted.
- (B) If sink is porcelain-coated, place masking tape over area to be drilled to prevent excess chipping of enamel. Use a cone-shaped grinding wheel to grind away a 3/4-inch diameter circle of porcelain before drilling.


**WARNING:** Wear safety glasses to prevent eye injury.

- (C) Mark hole with center punch. Use a 6mm drill bit for a pilot hole, then using a 12mm diameter bit, drill a hole completely through the sink or work top. Smooth rough edges with a file.

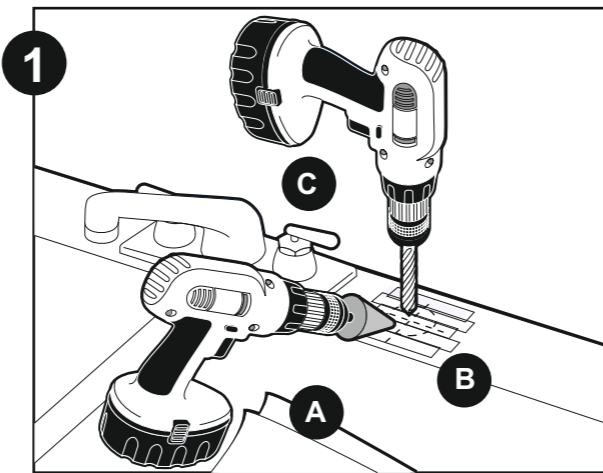

## 2. Mounting the Tap


- (A) The tap should be positioned on a work surface adjacent to a sink where the spout can properly discharge water into the basin.
- (B) Using a pencil, mark the work surface to indicate the centre of the tap.
- (C) Drill a 1/2" hole where marked on the work surface.
- (D) Insert the black rubber washer into the base of the tap.
- (E) Insert the threaded section of the tap body into the 1/2" hole.
- (F) Assemble the washers and lock nut on the threaded section as over.
- (G) Tighten the lock nut to prevent the tap moving. Do not over tighten.

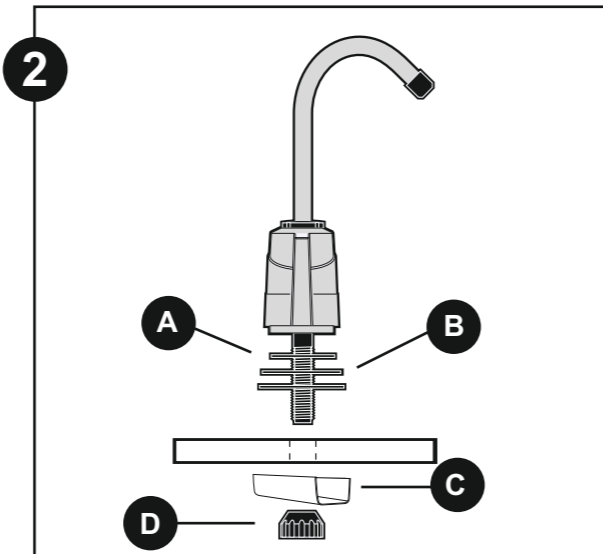

## 3. Installing the Saddle Valve

**NOTE:** Saddle valve must be installed on a 50 mm (2") long, straight-walled section of 10 mm (3/8") to 23 mm (7/8") steel, brass, copper, or PVC pipe.

- (A) Select a straight section of the water supply line.
- (B) Clamp around water line using two clamping screws (A). Tighten evenly.   
Note: Use saddles (B) & (C) for 10 mm (3/8") O.D. pipe, only saddle (C) for 13 mm (1/2") O.D. pipe, or no saddles for 16 mm (5/8") pipe.
- (C) Connect the end of the tubing to the filter system water input.
- (D) Turn adjustment knob (D) clockwise as far as it will go to pierce the water line.
- (E) Back out knob counter clockwise as far as it will go for full flow. Adjust down for desired flow.

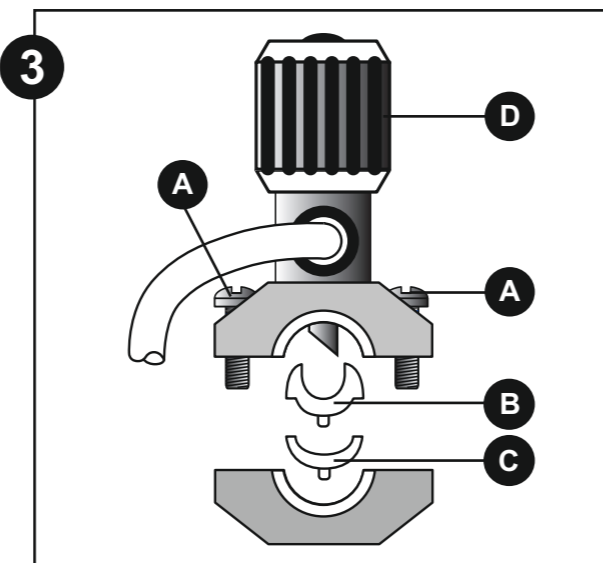


## 4. Mounting the Filter System

- (A) Select location under sink where filter is to be mounted.

**NOTE:** Allow 50mm clearance below housing or 280mm below filter head to enable filter cartridge changes.


**CAUTION:** Filter head should be mounted on stud or firm surface. The mounting bracket will support the weight of the filter and help prevent strain on the cold water line.

- (B) Filter head should be mounted in vertical position, use mounting bracket as a template to mark screw locations. Mount filter head in marked location using screws.

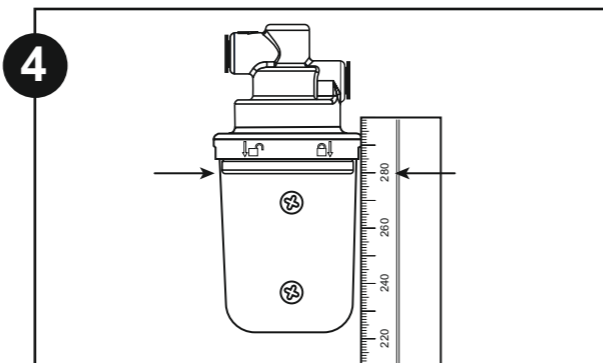

## 5. Connecting the Saddle Valve Tube to the Filter Inlet

Attach saddle valve inlet and tap outlet tubing to the inlet and outlet port on the cartridge housing using the push-fit fittings. Ensure each tube is pushed fully home to achieve secure fitting.

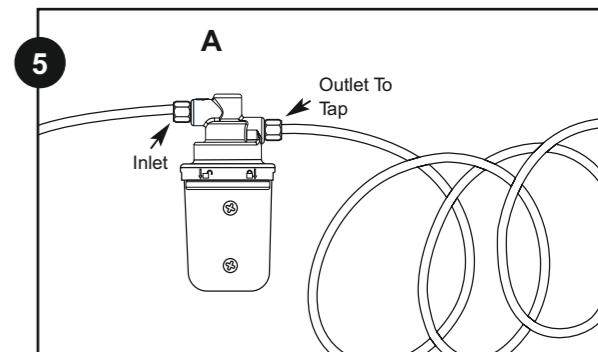

## 6. Installing the Cartridge

Hold cartridge from the bottom when installing or changing the cartridge. Use caution not to scrape knuckles on bracket when locking the cartridge into place. Line up the arrow on the cartridge with unlocked padlock on head. Insert cartridge and turn arrow to locked padlock. (See Diagram R4)

## 7. Putting the Filter into Operation

- (A) Turn on water supply and saddle tapping valve by turning counter-clockwise until it comes to a stop to allow filter to fill with water. Check for leaks. If it leaks, see Troubleshooting.
- (B) Allow water to run for 5 minutes to flush air and carbon fines (very fine black powder) through the system.
- (C) Check for leaks before leaving installation. If it leaks, see Troubleshooting.

## R. Filter Cartridge Replacement

**NOTE:** It is recommended that the filter be replaced every six months, or when you notice a change in taste, odour, or flow of the water being filtered.

- (1) Turn off water supply to the filter and dispense water from drinking water tap until water flow stops to relieve pressure.
- (2) Place towel under the system to catch any water drips.
- (3) (a) Turn arrow from locked to unlocked position.   
(b) Remove cartridge.
- (4) (a) Line up arrow with unlocked position on head and insert cartridge.   
(b) Turn to locked position.
- (5) Turn on water and check for leaks. If it leaks, see Troubleshooting.
- (6) Flush water through drinking water tap for 5 minutes to remove carbon fines. Check for leaks before leaving installation. If it leaks, see Troubleshooting.

