



Fire-Safe® / Water Resistant Safe Quick Connect Guide

- ◀ Model No.
Modèle N°
Modelo No.
- ◀ Serial No.
N° de série
No. de serie
- ◀ Dial Combination (Not All Models)
Combinaison du cadran
(pas tous les modèles)
Combinación del disco
(No todos los modelos)
- ◀ Key No. (Not All Models)
Clé N° (pas tous les modèles)
Llave No. (No todos los modelos)
- ◀ Factory Code
Code d'usine
Código de fábrica

If you experience any problems or challenges with your safe, please contact us at www.sentrysafe.com. Many issues can be resolved quickly without the product being returned.

Si vous rencontrez des problèmes ou des difficultés avec votre coffre-fort, veuillez nous contacter à www.sentrysafe.com. De nombreux problèmes peuvent être résolus rapidement sans avoir à retourner le produit.

Si llega a tener algún problema o dificultad con su caja fuerte, favor de contactarnos en www.sentrysafe.com. Muchos asuntos se pueden resolver rápidamente sin tener que hacer una devolución del producto.

Getting started

Congratulations on your purchase of a Sentry®Safe product. SentrySafe is the world's leader in fire/water-resistant and security storage. This guide describes how to easily set up and troubleshoot your safe to protect vital electronic data.

Contents:

- A** Safe with 2 keys
- B** (2) cables
 - (1) 1' (30 cm) USB compatible cable (internal)
 - (1) External USB Y-cable (for computer connection)
- C** Magnetic clips to hold cable
- D** Bolt-down hardware:
 - (2) lag screws, (2) washers, (2) masonry anchors

Warranty



**CDs, DVDs and storage devices sold separately.*

Protects and Connects[†]:

- 2-1/2" USB hard drives
- Flash drives
- Memory sticks
- MP3 players
- Small digital cameras

†devices sold separately

Only usable with USB 2.0 powered devices.
A longer cable than provided is not recommended unless a USB powered hub is purchased.

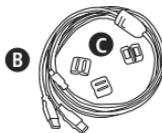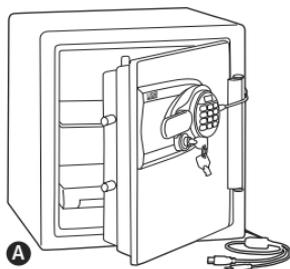

Important information about your safe:

You will need four alkaline AA batteries, equaling voltage: 6Vdc to proceed with accessing your safe. Non-alkaline or rechargeable batteries are not recommended.

Registration:

To be eligible for warranty coverage, the original purchaser must register the product online at www.sentrysafe.com or complete and return to Sentry Group the enclosed registration card.


1

Accessing your safe

Opening your safe for the first time (keep door open during setup):

See lock-out screw and tag instructions on the inside of the safe door, if equipped.

1. Remove and discard the screw at the base of the lock case (fig. A).
2. Turn the electronic lock case to the right (clockwise) (fig. B), from 12 o'clock to 2 o'clock, and remove. Insert four new batteries to power the lock (four alkaline AA batteries, equaling voltage: 6Vdc, are required and are not included in this kit). Replace the electronic lock case and turn to the left (to 12 o'clock) to reassemble.
3. Turn the key to the right so that the lock cylinder pops out.
4. Enter the factory code (printed on the first page of this guide), then press the Prog/Enter key. When the unlocked padlock icon (🔓) appears, you have four seconds to turn the handle down to open. Try this several times before proceeding to the next step.

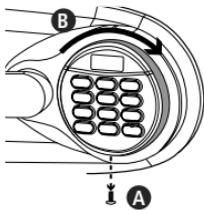

To lock safe:

Close the door and return the handle to the horizontal position.

NOTE: This unit is equipped with a water-resistant gasket. Additional pressure to the left corner of the door may be required before the handle can be returned to the horizontal position.

Battery replacement

The battery icon (🔋) will light when the batteries need to be replaced. No codes are erased when old batteries are removed for replacement. See "Opening your safe for the first time".

NOTE: If your safe does not appear to be working, please check batteries before calling Sentry Customer Care.

2

Installing cable to connect your safe

A Take the external Y-cable and connect the smaller end into the USB port on the outside of the safe.


B Plug the red USB power and data connector into your computer.

Should you need additional power, plug the "power only" labeled connector into another USB port on the computer.

C To manage the cable position, attach magnetic clips to the side of the safe to secure the cable to your desired position.

WARNING

NEVER place or store magnetic clips (or anything magnetic) near electronic storage devices. Loss of data and permanent damage to your electronic device(s) may occur.

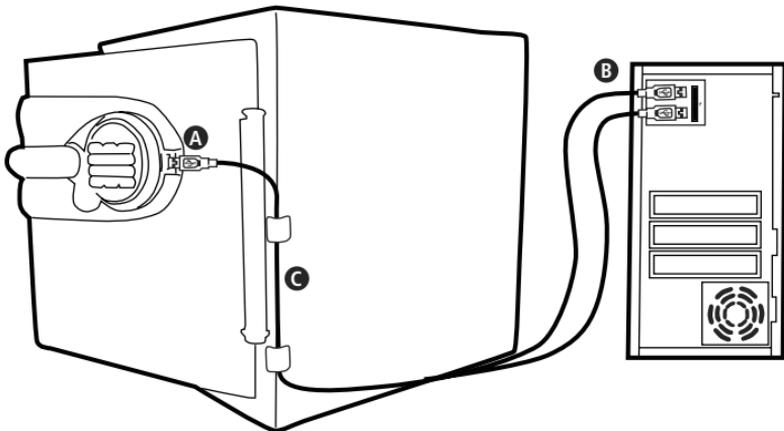


3

Installing storage devices


External Hard Drive Installation

- Take the 1' long cable provided and insert appropriate end into your hard drive.
- Insert your hard drive into the pocket on the inside of the safe door.
- Connect the other end of the cable to the interior USB port.

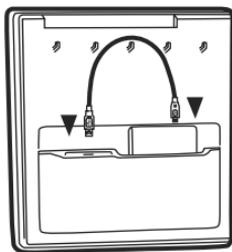

Flash Drives and Miscellaneous

- Plug your flash drive directly into the internal USB port on the inside of the safe door.
- For other installations, use the cable provided with your device and connect it to the USB port inside the safe.

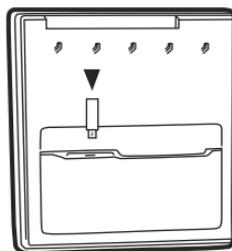

If you have completed the following...

- Successfully accessed your safe
- Installed cable connections
- Installed hard drive and/or flash drive

...you are ready to move on to optional items:

- Programming additional codes
- Floor mounting

4

Programming additional codes

NOTE: Maintain a record of the factory code, user, and manager codes, and store them in a secure location other than in this safe.

Icon Identification

 (Error) indicates one of the following:

1. You have pressed Program key out of sequence.
2. You have entered an invalid code.
3. You have let 5 seconds or more elapse between key presses.

 (Program) Lights after pressing the Program key and stays lit while programming a manager or user code.

 Lights after three consecutive invalid codes are input and stays lit during the 2-minute delay mode.

NOTE: Remember, once you have decided on your access codes, open the unit first then test it with the door open. All zeros is an invalid code.

There are 3 possible ways to unlock and access the safe:

1. Factory Code

(Found on the first page of this guide)

You can always open the safe by entering the pre-set 5-digit factory code. This code cannot be deleted.

2. Manager Code

If you prefer to employ your own code, you can program the safe to open to a 4-8 digit manager code of your choice.

Programming the manager code

NOTE: One (1) manager code is allowed.

To add:

1. Press the Prog/Enter key , then enter the 5-digit factory code and then press the Prog/Enter key .
2. An empty lit box icon () means no manager code is programmed. A boxed lighted * icon () means a manager code is programmed.
3. Enter a 4 to 8 digit code and press the Prog/Enter key to finish programming the code into the unit.

Programming additional codes continued

To delete:

1. Press the Prog/Enter key, then enter the 5-digit factory code and then press the Prog/Enter key.
2. A boxed lighted * icon (☒) indicates there is a code programmed and can be deleted.
3. Press 0, 0, 0, 0, then the Prog/Enter key to delete the manager code. (0, 0, 0, 0, Prog/Enter)

NOTE: To return to the beginning when programming a manager or user code, wait 5 seconds and the lock will time-out. You may then start over.

3. User Code

If you wish to give someone else temporary access to the safe, you can program a 4-8 digit user code that can later be erased.

Programming user codes

NOTE: Six (6) user codes are allowed.

To add:

1. Press the Prog/Enter key 2 times, enter the manager code and then press the Prog/Enter key.
2. Use the << or >> to scroll between the lighted boxes. An empty box icon (□) means it is available for a code entry; a boxed lighted * icon (☒) means it is being used.

3. Enter a 4 to 8 digit code in the selected position and press the Prog/Enter key to finish.

To delete:

1. Press the Prog/Enter key 2 times, enter the manager code and then press the Prog/Enter key.
2. Use the << or >> to scroll to the boxed lighted * icon (☒) to be removed.
3. Press 0, 0, 0, 0, then the Prog/Enter key to delete the selected user. (0, 0, 0, 0, Prog/Enter)

Floor Mount (optional)

Tools needed for floor mounting:

- Drill
- Wrench
- 7/16" (11.0 mm) drill bit

Wood anchoring:


9/32" (7.2 mm) drill bit

Masonry anchoring:


3/8" (9.50 mm) drill bit

Instructions:


1. Tip the safe onto its right side. (Door hinges horizontal with the floor.)
2. Unlock the safe and open the door.
3. Look on the bottom of the safe for two indentations in opposite corners. Using the 7/16" (11.0 mm) bit, drill a hole through each indentation perpendicular to the bottom of the safe. (Fig. A)
4. Close the door and tip the safe upright. Place it where desired and reopen the door.
5. Use a screw or drill bit to mark the floor through both holes. (Fig. B)
6. Move the safe aside to clear both marked spots for drilling.
7. Drill into the floor:
 - A. For wood: Using the wood drill bit, drill a hole 2-1/2" (64 mm) deep in each marked spot. (Fig. C)
 - B. For masonry: Using the masonry bit, drill a hole 2-1/2" (64 mm) deep in each marked spot. (Fig. C)
8. Replace the safe in the desired position, with the holes in the safe aligned with those in the floor.
9. Securing the safe:
 - A. For wood: Pass each lag screw through a washer, then through the safe and into a hole. Tighten with the wrench. (Fig. D)
 - B. For masonry: Pass each lag screw through a washer, then through the safe and into a masonry anchor. Tighten with the wrench. (Fig. E)

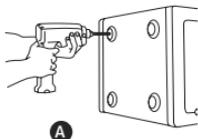


A

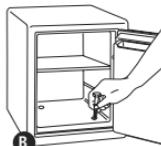


B

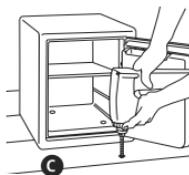

C

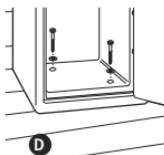


D

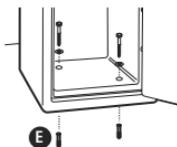

E

Sentry® Group First-Class Customer Care

If you lose your keys or need accessories, we can help!
Visit our website at www.sentrysafe.com

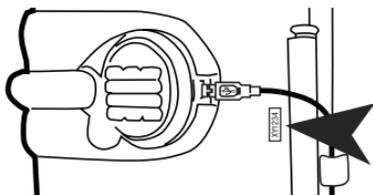

Please note: Your safe's serial number is required to obtain replacement keys. The serial number can be found near the door hinge as shown or at the beginning of this guide.

Safe Usage

- If electronics are not functioning, replace batteries first (behind electronic lock case) as described in step one of this guide.
- If electronics are functioning and you cannot get into safe:
 - Pull handle up
 - Enter code
 - Prog/Enter
 - Push handle down when "unlocked padlock" icon appears.
- You must use both the key and the electronic code to open the safe if the key lock cylinder is pushed in.

Tips for using the keypad

Lightly touch any button. The keypad lights up and a single beep will indicate that the keypad "felt" your touch. If there is no key press within 5 seconds, the unit "times out" indicating you should start over.

Storage Device Usage

- Operates with most USB 2.0 powered devices and operating systems.
- Should you need additional power, plug both cables connectors into the computer.

- If the device still does not operate, a powered hub may be needed (sold separately).

Compatibility may vary depending on user's hard drive configuration and operating system.

Troubleshooting

- If your storage device does not work
 - Ensure your computer is turned on
 - Restart computer to see if your device is recognized.
 - Plug in both cables to the USB ports on the back of the computer.
 - Check your device by plugging it into your computer directly to see if it is working. If it is not working, call your device manufacturer directly.

Delay mode

Usually enters a two-minute delay mode after an invalid code has been entered three consecutive times. In this mode, the lock can not be activated and any key entry will generate an ERROR signal.

NOTE: To turn the beeper on or off, press the 0 key and then the Prog/Enter key. (0, Prog/Enter)

Rigorous testing ensures this product meets our specifications



UL-Classified Fire Protection with Impact

Your SentrySafe Fire-Safe product is classified by Underwriters Laboratories, an independent testing organization, to pass the following rigorous standards of fire endurance protection:

- **UL Fire Endurance Test**
Subjected to temperatures up to 1850°F (1010°C) for 2 hours, the safe interior will remain below 350°F (177°C) to protect documents. (This enables your safe to withstand even high temperature exposure, as the hottest part of a fire moves through a building.)
- **UL Explosion Hazard Test**
Subjected to flash fire in a 2000°F (1093°C) furnace for 30 minutes, the unit will not explode or rupture.



ETL Verified for Digital Media

ETL verified for 2 hour fire protection of CDs, DVDs, memory sticks and USB drives up to 1850°F (1010°C).



ETL Verified Water-Resistance Protection

Tested up to 8 inches of water for up to 24 hours.

NOTE: For the gasket to work effectively, the safe door must be closed with the handle fully horizontal. When you move the handle, the compression of the gasket will require slightly more force than you would use with a safe that does not have a gasket.



www.sentrysafe.com

900 Linden Avenue
Rochester, New York 14625
14625-2784 USA

Telephone: 585-381-4900
Customer Service: 1-800-828-1438
(8 am - 6 pm, E.S.T., Monday – Friday*)
Fax: 585-381-2940

**Hours subject to change*

505462