

# Compact Palm Planer 420W

## TCMPL

The TCMPL Compact Palm Planer is powerful, easy to handle, and includes all the features of a conventional-sized planer and more. Utilising twin 60mm solid TCT blades, the TCMPL offers the perfect combination of power and balance with excellent grip for safe, one-handed operation. The 420W / 3.5A motor and 60mm planing width make this planer ideal for fast material removal on small to medium-sized workpieces. Up to 1.5mm of material can be removed in one pass, and the adjustable planing depth with 3 bevelling grooves ensures flatness and improves cutting accuracy. A power lock-off switch prevents accidental operation, and the foldaway blade protection foot prevents damage to the blades when the planer is resting on a surface.

- 60mm planing width and 0-1.5mm / 1/16" adjustable planing depth is ideal for fast material removal on small to medium sized tasks
- Twin V groove increases range of edge bevelling depths



## Technical Specification

Product Height	130mm
Product Length	310mm
Product Width	111mm
Product Weight	2.4kg
Power	420W
No Load Speed	13,000rpm
Sound Pressure LP	87dB
Sound Power LW	99dB
Blade Type	2 x Reversible 60mm
Dust Extraction	Yes
Material - Primary Construction	Rubber over-mould
Planing Depth	0 - 1.5mm
Planing Width	60mm
PSE Approved	Yes

## Compatible With

**TCM** PLB60      60mm Planer Blades for TCMPL

## What's in the Box

- 1 x Spare drive belt
- 1 x Dust extraction adaptor
- 1 x Hex key
- 1 x Blade removal hex spanner

## **GB** Operating and Safety Instructions

**NL** Bedienings- en veiligheidsvoorschriften

**FR** Instructions d'utilisation et consignes de sécurité

**DE** Gebrauchs- und Sicherheitsanweisung

**IT** Istruzioni per l'uso e la sicurezza

**ES** Instrucciones de uso y de seguridad

**PT** Instruções de Operação e Segurança

**PL** Instrukcja obsługi i bezpieczeństwa


**RU** Инструкции по эксплуатации и правила техники безопасности

**HU** Kezelési és biztonsági utasítások

**CZ** Provozní a bezpečnostní pokyny



**SK** Prevádzkové a bezpečnostné pokyny

**TR** Çalima ve Güvenlik Talimatları

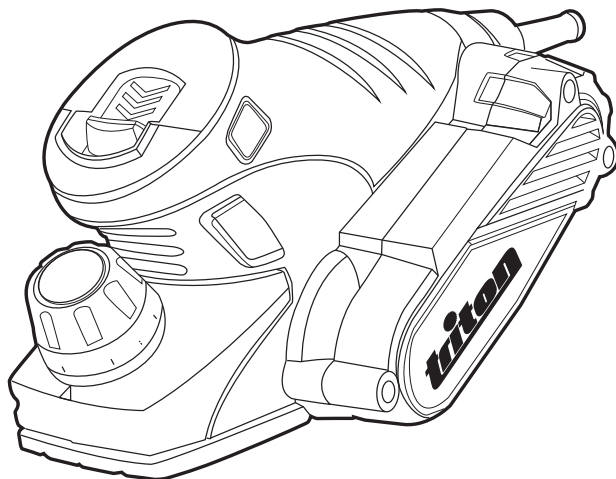


Version date: 07.12.15




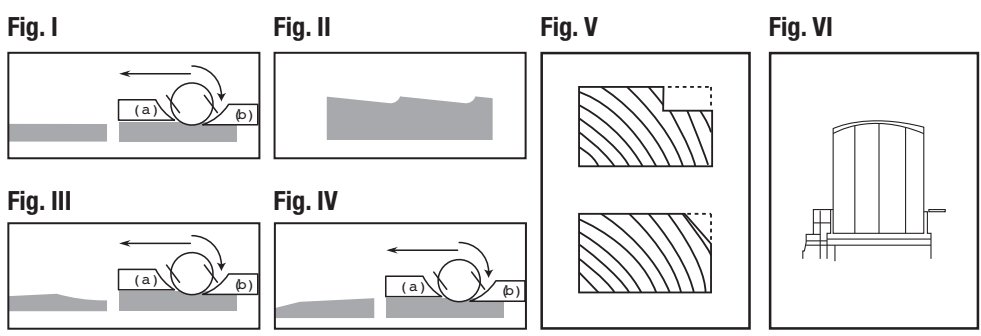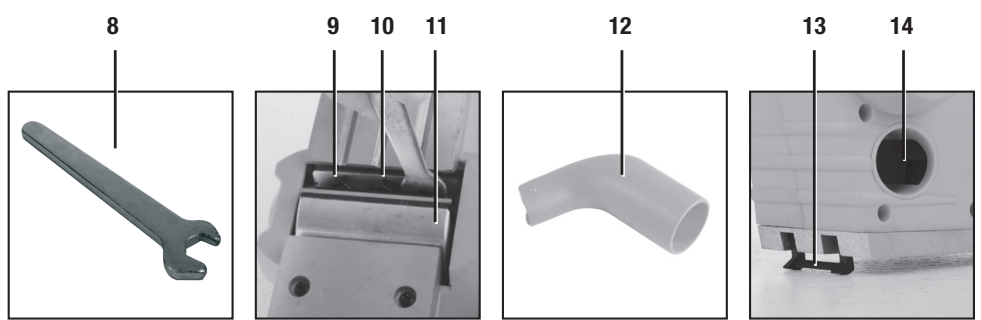


**A**

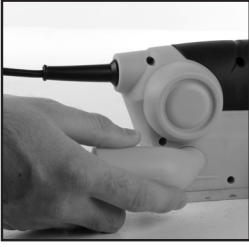


**B**

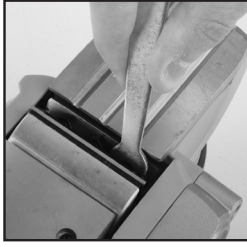


**C**

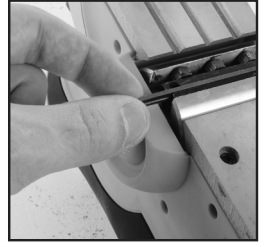

**D**

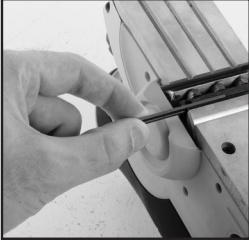


**E**

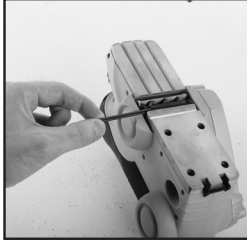


**F**



**G**

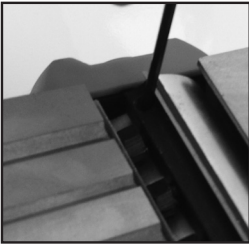


**H**

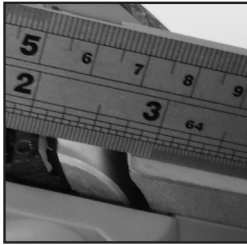


**I**



**J**

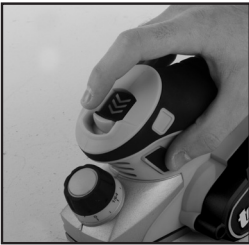

**K**

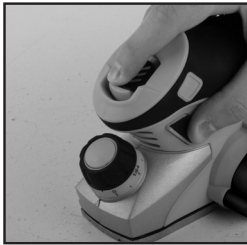

**L**



**M**



# Original Instructions

## Introduction

Thank you for purchasing this Triton tool. This manual contains information necessary for safe and effective operation of this product. This product has unique features and, even if you are familiar with similar products, it is necessary to read this manual carefully to ensure you fully understand the instructions. Ensure all users of the tool read and fully understand this manual.

## Description of Symbols

The rating plate on your tool may show symbols. These represent important information about the product or instructions on its use.



Wear hearing protection  
Wear eye protection  
Wear breathing protection  
Wear head protection



Read instruction manual



Wear hand protection



Caution!



**WARNING:** Moving parts can cause crush and cut injuries



Indoors use only!



Class II construction (double insulated for additional protection)



Conforms to relevant legislation and safety standards.



### Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

## Specification

Model No:	TCMPL
Voltage:	220-240V ~ 50Hz
Power:	420W
No load speed:	13,000rpm
Planing width:	60mm
Planing depth:	0-1.5mm
Insulation class:	
Dimensions (L x W x H):	310 x 130 x 111 mm
Weight:	2.4kg
Sound and vibration information:	
Sound pressure $L_{pa}$ :	87dB(A)
Sound power $L_{WA}$ :	99dB(A)
Uncertainty K:	3dB
Typical weighted vibration $a_v$ :	7.47m/s <sup>2</sup>
Uncertainty K:	1.5m/s <sup>2</sup>
As part of our ongoing product development, specifications of Triton products may alter without notice.	

The sound intensity level for the operator may exceed 85dB(A) and sound protection measures are necessary.

**WARNING:** Always wear ear protection where the sound level exceeds 85dB(A) and limit the time of exposure if necessary. If sound levels are uncomfortable, even with ear protection, stop using the tool immediately and check the ear protection is correctly fitted and provides the correct level of sound attenuation for the level of sound produced by your tool.

**WARNING:** User exposure to tool vibration can result in loss of sense of touch, numbness, tingling and reduced ability to grip. Long term exposure can lead to a chronic condition. If necessary, limit the length of time exposed to vibration and use anti-vibration gloves. Do not operate the tool with hands below a normal comfortable temperature, as vibration will have a greater effect. Use the figures provided in the specification relating to vibration to calculate the duration and frequency of operating the tool.

Sound and vibration levels in the specification are determined according to EN60745 or similar international standards. The figures represent normal use for the tool in normal working conditions. A poorly maintained, incorrectly assembled, or misused tool, may produce increased levels of noise and vibration. [www.osha.europa.eu](http://www.osha.europa.eu) provides information on sound and vibration levels in the workplace that may be useful to domestic users who use tools for long periods of time.

# General Safety

**WARNING:** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

**WARNING:** This appliance is not intended for use by persons (including children) with reduced, physical or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

## 1) Work area safety

- Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

## 2) Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

## 3) Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on.**  
*A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

## 4) Power tool use and care

- Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

## 5) Service

- Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

# Additional Safety for Electric Planers



- Wait for the cutter to stop before setting the tool down.** An exposed rotating cutter may engage the surface leading to possible loss of control and serious injury.
- Hold the power tool by insulated handles or gripping surfaces only, because the sanding belt/sheet may contact its own cord.** Cutting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- Use clamps or another practical way to secure the workpiece to a stable platform.** Holding the workpiece by hand or against the body makes it unstable and may lead to loss of control.
- If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.**
- It is strongly recommended that the tool always be supplied via a residual current device with a rated residual current of 30 mA or less.**



**Use appropriate respiratory protection:** Use of this tool can generate dust containing chemicals known to cause cancer, birth defects or other reproductive harm. Some wood contains preservatives such as copper chromium arsenate (CCA) which can be toxic. When sanding, drilling, or cutting these materials extra care should be taken to avoid inhalation and minimise skin contact.



- Use suitable detectors to determine if utility lines are hidden in the work area or call the local utility company for assistance.** Contact with electric lines can lead to fire and electric shock. Damaging a gas line can lead to explosion. Penetrating a water line causes property damage or may cause an electric shock.
- Do not reach into the chip ejector with your hands.** They could be injured by rotating parts.
- A dust mask and dust extraction system are strongly recommended during usage to protect the operator against dust.** Electric planers generate a large quantity of dust and some materials will produce toxic dust.
- Use only sharp blades. Handle the blades very carefully.**

- a) Check the voltage of the tool rating label matches the voltage of the mains supply
- b) Ensure all nails, screws etc are removed from the workpiece before commencing the task. Otherwise, damage to the blade or planer could occur, causing a safety hazard
- c) Ensure all cloth, cord, rags, string and similar items are removed from the work area. To prevent entanglement in the planer mechanism
- d) Ensure that the blade installation bolts are securely tightened before operation
- e) Before using the planer on a workpiece, switch on and allow it to run for a while. Check for vibration or wobbling that could indicate a badly installed, or a poorly balanced blade
- f) Allow the machine to reach full speed before making contact with the workpiece and starting cutting
- g) Operate the planer only when controlled by both hands and is correctly held before switching on
- h) Ensure the planer is at least 200mm away from your face and body
- i) Wait until the blades reach full speed before cutting
- j) Shavings may jam in the chute when cutting damp wood. Switch off, disconnect from the power supply and clean out the chips with a stick. Never put your finger into the chip chute
- k) ALWAYS switch off and allow the blades to come to a complete standstill before attempting any adjustments, cleaning or carrying out maintenance
- l) ALWAYS disconnect from the power supply when leaving the machine unattended
- m) When not in use, disconnect from the power source and place the front base on a wooden block so that the blades are not in contact with anything
- n) Replace all blades at the same time, otherwise the resulting imbalance will cause vibration and shorten the service life of planer and blades

## Cutting tool safety

**WARNING.** Before connecting a tool to a power source (mains switch power point receptacle, outlet, etc.) be sure that the voltage supply is the same as that specified on the nameplate of the tool. A power source with a voltage greater than that specified for the tool can result in serious injury to the user, and damage to the tool. If in doubt, do not plug in the tool. Using a power source with a voltage less than the nameplate rating is harmful to the motor.

### Use the correct cutting tool

- Ensure the cutting tool is suitable for the job. Do not assume a tool is suitable without checking the product literature before use

### Protect your eyes

- Always wear appropriate eye protection when using cutting tools
- Spectacles are not designed to offer any protection when using this product; normal lenses are not impact resistant and could shatter

### Protect your hearing

- Always wear suitable hearing protection when tool noise exceeds 85dB

### Protect your breathing

- Ensure that yourself, and others around you, wear suitable dust masks

### Protect your hands

- Do not allow hands to get close to the cutting wheel or blades. Use a suitable push stick for shorter workpieces with appropriate power tools

### Be aware of others around you

- It is the responsibility of the user to ensure that other people in the vicinity of the work area are not exposed to dangerous noise or dust and are also provided with suitable protective equipment

### Hidden objects

- Inspect the workpiece and remove all nails and other embedded objects before cutting
- Do not attempt to cut material that contains embedded objects unless you know that the cutting tool fitted to your machine is suitable for the job
- Walls may conceal wiring and piping, car body panels may conceal fuel lines, and long grass may conceal stones and glass. Always check the work area thoroughly before proceeding

### Beware of projected waste

- In some situations, waste material may be projected at speed from the cutting tool. It is the user's responsibility to ensure that other people in the work area are protected from the possibility of projected waste

### Fitting cutting tools

- Ensure cutting tools are correctly and securely fitted and check that wrenches / adjusters are removed prior to use
- Only use cutting tools recommended for your machine
- Do not attempt to modify cutting tools
- Ensure blades are sharp, in good condition and correctly fitted
- Do not attempt to resharpen blades that are not suitable for resharpening, these may include specially hardened blades or blades made from hardened alloys typically containing tungsten
- Blades that can be resharpened should be resharpened only according to the blade manufacturer's instructions. These may include a limited number of times the blade can be resharpened
- Sharpened blades should be more thoroughly inspected before use and replaced immediately if there is any doubt about their condition and suitability for use
- In the event blades encounter an embedded object in use that the blades are not suitable for, blades should be replaced immediately

### Direction of feed

- Always feed work into the blade or cutter against the direction of movement of the blade or cutter

### Beware of heat

- Cutting tools and workpieces may become hot in use. Do not attempt to change tools until they have been allowed to cool completely

### Control dust / swarf

- Do not allow dust or swarf to build up. Sawdust is a fire hazard, and some metal swarf is explosive
- Be especially careful when cutting wood and metal. Sparks from metal cutting are a common cause of wood dust fires
- Where possible, use a dust extraction system to ensure a safer working environment

## Product Familiarisation

1. On/Off Switch
2. Main Handle
3. Fixed Rear Base
4. Moveable Front Base
5. Depth Adjustment Knob
6. Secondary Handle
7. Lock-Off Button
8. Spanner
9. Planer Blades
10. Clamping Screw
11. Blade Barrel
12. Shavings Adaptor Tube
13. Blade Protection Foot
14. Dust/Chip Extraction Port

## Intended Use

Compact hand planer used for light and medium-duty planing of hard wood, soft wood and some composite wood materials, with adjustable depth of cut.

## Before Use

### Shavings extraction

1. Connect the Shavings Adaptor Tube (12) to the Dust/Chip Extraction Port (14)
2. The Shavings Adaptor Tube (12) can be installed to allow shavings to flow either to the left or to the right of the workpiece
3. A workshop dust extraction system or a household vacuum cleaner can be connected to the Shavings Adaptor Tube (12), (Image A) for the efficient removal of dust and shavings permitting a safer and cleaner working environment



## Removing or installing planer blades

**Caution:** Always ensure that the tool is switched off and unplugged from the power supply before installing or removing blades.

Your planer is fitted with reversible blades.

Blades can be reversed when blunt. After both sides of the blades have been used they should be discarded.

**NOTE:** These blades cannot be re-sharpened.

### Removing a planer blade

1. Using Spanner (8), loosen the three Clamping Screws (10) (Image B)
2. Slide the Planer Blade (9) from the slot in the Blade Barrel (11) (Image C)

### Installing a planer blade

1. Either turn over the Planer Blade (9) or replace it if required
2. Slide the good blade face up into the blade support block of the Blade Barrel (11)

**NOTE:** The ridge along the blade should be on the blade face on the opposite side to the Clamping Screws (10) (Image D)

3. Tighten the Clamping Screws (10), ensuring they are tightened evenly
4. Repeat for the second blade (Image E)

**NOTE:** Always change both blades at the same time, otherwise the resulting imbalance can cause vibration and shorten the blade and tool life.

**CAUTION:** When installing blades, first clean out all chips or foreign matter adhering to the Blade Barrel (11) and the blades themselves. Use blades of the same dimensions and weight, or the barrel will oscillate and vibrate, causing poor planing action and possibly a machine breakdown.

Tighten the Clamping Screws (10) carefully when attaching the blades to the planer. A loose clamping screw could be extremely dangerous. Regularly check to see they are tightened securely.

**NOTE:** Your planing surface will be rough and uneven if the blades are not correctly set. The blades must be mounted so that the cutting edge is absolutely level, i.e. parallel to the surface of the Fixed Rear Base (3).

The examples below show correct and incorrect settings:

**Clean smooth cut** - see (Fig. I).

**Nicks in surface** - caused by the edge of one or all blades not being parallel to the rear base line, (Fig. II).

**Gouging at start** - caused by the edge of one or all blades not protruding enough in relation to the rear base line, (Fig. III).

**Gouging at end** - caused by the edge of one or all blades protruding too far in relation to the rear base line, (Fig. IV).

### Adjusting the blade height and level

The blade height and level is adjusted by two grub screws in the block that secures the planer blade.

Note: this is pre-set at the factory to the correct height and level. In normal use the blades can be replaced without needing to adjust the screws. However, adjustment may be required.

To adjust:

1. Ensure the tool is disconnected from the mains
2. Double check adjustment is required
3. Set the depth adjustment knob (5) to the '0' position, (Image F)
4. Loosen the clamping screws (10) to allow the block to move. Do not over-loosen the screws
5. Make minor adjustments to the left and right grub screws to correct the height and level, (Image G)
6. Check the height and level of the blade by using a completely flat object like a metal ruler (upright) across the Moveable Front Base (4) and Fixed Rear Base (3) to ensure the level and height of the blade is level with the ruler across the whole width of the two bases (Image H)
7. Repeat steps 5 and 6 until the correct blade height and level is achieved
8. Retighten the Clamping Screws carefully, tightening each bolt in multiple steps instead of tightening each bolt fully in one step
9. Check the other blade is also at the correct height and level and adjust if necessary

Notes:

- When checking the height and level of the blade make sure the Blade Barrel (11) is rotated so the blade is at the maximum height
- When adjusting blade height only, both left and right screws must be equally adjusted
- Check clamping screws are secure after adjusting before using the planer

## Operation

### Adjusting the depth of cut

**CAUTION:** always ensure that the tool is switched off and unplugged from the power supply before making adjustments or installing or removing blades.

- Rotate the depth adjustment knob (5) clockwise for a deeper cut and anti-clockwise for a shallower cut, (Image I)
- The numbers on the ring under the depth adjustment knob indicate the depth of cut
- Example, when '1' is next to the pointer on the front of the planer, the depth of cut is approximately 1mm. If it is necessary to accurately determine the depth of cut, plane a scrap piece of wood, measure the difference in thickness and adjust the setting if necessary

### Switching on and off

**CAUTION:** before plugging the machine into the power socket always check that the on/off switch (1) and lock-off button (7) work properly.

1. Plug in the machine and grip the tool with your thumb on the on/off switch (1), (Image J)
2. Push lock-off button (7) forward and press in the on/off switch (1) with the thumb of the hand gripping the tool. You can release the finger hold on the lock-off button (7) once the planer has started, (Image K)
3. To stop the tool, release the thumb hold on the on/off switch (1)
4. In order to restart the machine, it is necessary to operate both the lock-off button (7) and the on/off switch (1)  
This is an important safety feature that helps prevent accidental operation of the planer. Only when you release the thumb hold on the on/off switch (1) will the planer stop.

### Planing

1. Rest the moveable front base (4) flat on the workpiece surface without the blades making any contact with the workpiece
  2. Switch on the tool and wait for the blades to reach full speed, (Image L)
  3. Move the tool gently forward by applying pressure on the front of the tool at the start of the planing action using the secondary handle (6). Towards the end of the planing stroke, apply pressure, with your hand on the main handle (2), at the rear of the tool
  4. Push the planer beyond the edge of the workpiece without tilting it downwards
- NOTE:** planing is easier if you incline the workpiece slightly away from you so that you plane 'downhill'.
5. The rate of planing and the depth of cut determine the quality of the finish.  
For rough cutting, you can increase the depth of cut, however to achieve a good finish you will need to reduce the depth of cut and advance the tool more slowly

**Caution:** moving the machine too fast may cause a poor quality of cut and can damage the blades or the motor. Moving the machine too slowly may burn or mar the cut. The proper feed rate will depend on the type of material being cut and the depth of the cut. Practice first on a scrap piece of material to gauge the correct feed rate and the cut dimensions.

**Caution:** always use two hands to hold the planer.

**Caution:** where possible, clamp the workpiece to the bench.

6. Between operations, the planer can be placed on a flat surface with the blade protection foot (13) hinged down to support the planer, keeping the blades clear of the surface, (Image M)

### Chamfering and rebating

1. To make a chamfered or rebate cut as shown in (Fig. V), first align one of the three 'v' grooves (Fig. VI) in the moveable front base (4) of the planer with the corner edge of the workpiece
2. Choose the 'v' groove to suit the required depth of chamfer/rebate
3. Run the planer along the corner edge



# Maintenance

**WARNING:** Always disconnect from the power supply before carrying out any maintenance/cleaning.

- Inspect the supply cord of the tool, prior to each use, for damage or wear. This advice also applies to extension cords used with this tool
- if the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard

## Cleaning

1. Keep the tool's air vents unclogged and clean at all times
2. Regularly check to see if any dust or foreign matter has entered the grilles near the motor and around the On/Off switch. Use a soft brush to remove any accumulated dust. Wear safety glasses to protect your eyes whilst cleaning
3. Re-lubricate all moving parts at regular intervals
4. If the body of the planer needs cleaning, wipe it with a soft damp cloth. A mild detergent can be used but do not use alcohol, petrol or other cleaning agent
5. Never use caustic agents to clean plastic parts

**CAUTION:** Water must never come into contact with the planer.

## Drive belt replacement

**CAUTION:** Always ensure that the tool is switched off and unplugged from the power supply before making adjustments or installing or removing blades. Also ensure planer is in park and during belt replacement keep hands well away from the blade barrel area. It is also suggested that you wear leather gloves to change the belt in case you make contact with the blades.

1. To replace the drive belt first take out the three cross-head screws that secure the drive belt cover on the left-hand side of the planer as viewed from the rear
2. Remove the damaged belt and use a soft brush to clean the pulleys and the surrounding area

**NOTE:** Wear eye protection when cleaning

3. With the three continuous 'v' profiles on the inside, place the new belt over the bottom pulley. Half fit the other end of the belt on the top pulley then roll the belt in place whilst turning the pulley
4. Check that the belt runs evenly by manually turning the belt
5. Replace the cover and the three fixing screws
6. Replace the electrical plug and run the planer for a minute or two to make sure that the motor and belt are operating correctly

## General Inspection

Regularly check that all the fixing screws are tight. They may vibrate loose

## Storage

- Store this tool and its accessories after use in its case, in a dry, secure place out of the reach of children

## Disposal

Always adhere to national regulations when disposing of power tools that are no longer functional and are not viable for repair.

- Do not dispose of power tools, or other waste electrical and electronic equipment (WEEE), with household waste
- Contact your local waste disposal authority for information on the correct way to dispose of power tools

## Guarantee

To register your guarantee visit our web site at [www.tritontools.com](http://www.tritontools.com)\* and enter your details.

Your details will be included on our mailing list (unless indicated otherwise) for information on future releases. Details provided will not be made available to any third party.

## Purchase Record

Date of Purchase: \_\_\_/\_\_\_/\_\_\_

Model: TC MPL Retain your receipt as proof of purchase

Triton Precision Power Tools guarantees to the purchaser of this

product that if any part proves to be defective due to faulty materials or workmanship within 3 YEARS from the date of original purchase, Triton will repair, or at its discretion replace, the faulty part free of charge.

This guarantee does not apply to commercial use nor does it extend to normal wear and tear or damage as a result of accident, abuse or misuse.

\* Register online within 30 days.

Terms & conditions apply.

This does not affect your statutory rights

## CE Declaration of Conformity

**The undersigned:** Mr Darrell Morris

**as authorised by:** Triton Tools

Declares that

**Identification code:** TC MPL

**Description:** Planer/Thicknesser

**Conforms to the following directives and standards:**


- Machinery Directive 2006/42/EC
- Low Voltage Directive 2006/95/EC
- EMC Directive 2004/108/EC
- RoHS Directive 2011/65/EU
- EN 60745-1:2006
- EN 60745-2-14:2003+A1:2006+A2:2010
- EN 55014-1:2006+A1:2009+A2:2011
- EN55014-2: 1997+A2:2008
- EN61000-3-2:2006+A2:2009
- EN61000-3-3:2008

**Notified body:** TÜV SÜD Product Service

**The technical documentation is kept by:** Triton Tools

**Date:** 01/12/15

**Signed:**



Mr Darrell Morris

Managing Director

**Name and address of the manufacturer:**

Powerbox International Limited, Company No. 06897059. Registered address: Central House, Church Street, Yeovil, Somerset BA20 1HH, United Kingdom.

