

FILTERSPEC® PRO™

FMP2 ODOUR VALVED - GW5 LENS

TECHNICAL SPECIFICATION

EFFORTLESSLY COMBINES EYE & RESPIRATORY PROTECTION WITH FMP2 ODOUR VALVED FILTRATION OFFERING 94% EFFICIENCY

RESPIRATORY PROTECTION

INSTRUCTIONS FOR USE

Fitting the Filterspec® Pro™:

Firstly, ensure that the mask element is in sound working order and is securely located in the Filter Holder

Pull the un-fastened elastic strap over the head and locate on the neck

Place the Filterspec® Pro™ onto the face, ensuring the mask element is covering the nose and mouth and the goggle element covers the eyes. The goggles strap can be adjusted to suit the users head

Pull the plastic clips around the rear of the head and attach them together

Tension the elastic straps by pulling on the free ends, through the plastic clips, until a secure seal is achieved

To check the fit, place both hands completely over the mask element and inhale vigorously

If air leaks at the edge, readjust the mask, manipulating the position of the mask and headband to affect an acceptable seal

If a proper seal cannot be achieved do not enter the contaminated area

CLICK HERE

To view how to correctly fit the Filterspec® Pro™



CLEANING & MAINTENANCE

The mask element is for single use only

The mask element should not be used for more than 8 hours continuously and should be discarded after use

The carrier can be reused for all the mask elements supplied and should then be disposed of

The Filterspec™ should not be removed from its packaging until it is required for use

Use only when a concentration of contaminants are not immediately dangerous to health or life, and only in accordance with the applicable health and safety standards

When not in use or during transportation the Filterspec® Pro™ should be stored in a container such that it is out of direct sunlight, away from chemicals and abrasive substances and cannot be damaged by physical contact with hard surfaces/items

The mask element is single use and should be disposed off after use, the filter holder and goggle element can be cleaned

To clean/disinfect, rinse in 1% solution of mild detergent and dry with a soft cloth - do not use abrasive cleaners

If lens becomes scratched or damaged the goggle element should be replaced. Under normal circumstances the goggle element should offer adequate protection for 2-3 years

GOGGLE FRAME:

PVC

GOGGLE LENS:

Polycarbonate




FILTER HOLDER:

Polyethylene



FILTER:

Man Made Fibres

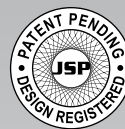

FILTERSPEC

SPECTACLE MASK COMBO



CONFORMITY

Eye Protection: Meets the requirements of EN166:2001 and EN169 with Class 1 optics, medium energy protection at elevated temperatures (BT), liquid droplet protection (3), large dust particle protection (4) and anti-fogging properties (N)

Respiratory Protection: Meets the requirements of: EN1827:1999 + A1:2009

Carbon layer neutralises nuisance odours

FMP2 masks have an assigned protection factor (APF) of 10 x Workplace Exposure Limit (WEL) for fine dusts, fibres, fumes, and mists

The Filter has EC Certificate Number 550926 issued by BSI product Services and the Goggle has EC Certificate Number 0726 issued by Inspec



MANUFACTURING FOR SAFETY
WWW.JSP.CO.UK



UKSALES@JSP.CO.UK
TEL: +44 (0)1993 826050



Issued 05/03/14, V3

FILTERSPEC® PRO™

FMP2 ODOUR VALVED - GW5 LENS

EFFORTLESSLY COMBINES EYE & RESPIRATORY PROTECTION WITH FMP2 ODOUR VALVED FILTRATION OFFERING 94% EFFICIENCY

TECHNICAL SPECIFICATION

RESPIRATORY PROTECTION

DIMENSIONS OF OUTER PACKAGING

Quantity: 10
 Weight: 1.5 Kg (Approx.)

DIMENSIONS OF PRODUCT

Height: 162mm
 Width: 185mm
 Depth: 84mm
 Weight: 130g (Approx.)



WIDTH:
380mm

LENGTH:
570mm

HEIGHT:
182mm

LIMITATIONS OF USE

The user should be trained in the fitting and should be aware of the instructions for use prior to donning Filterspec® Pro™

This eye protector element is suitable for use to the lowest marking on the lens or frame

This eye protector is not intended for furnace/welding use

The mask element is suitable for use against solid, water and liquid based aerosols

Prior to use check the integrity of the mask and goggle, the 'use by' date and ensure that the mask classification is suitable for the application

Use in well ventilated areas only, which are not deficient in oxygen and do not contain explosive atmospheres

Ensure good seal around the face is created before entering the hazard area

The working life of the mask is nominally one day (this is based on a working day shift of 8 hours); however it may be affected by many factors, including work rate, airflow and concentration of any contaminant in the atmosphere. The mask should be changed immediately if

- Breathing difficulties due to clogging are experienced
- Breakthrough of a contaminant is detected by smell, taste or any other means
- The mask becomes damaged

This mask is not designed to be worn by people with facial hair or other facial features that may affect seal performance



EXHALATION VALVE CAGE:
Polystyrene

EXHALE VALVE:
Latex Free Rubber

