


## USER INSTRUCTION

3M x 25mm


Item No. 13224

---

### INSTRUCTIONS FOR USE :

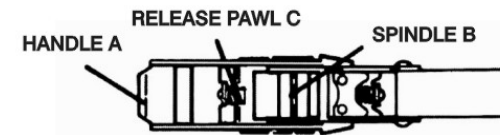

1. With Handle (A) in “closed” position, take end of long strap and slip through slot in Spindle (B). Take up excess slack between hooks by hand.
2. Tighten strap by ratcheting Handle (A) back and forth until load is secure. **CAUTION !** To avoid damage, Do not over tighten.
3. To lock ratchet always leave Handle in the “ closed” position.

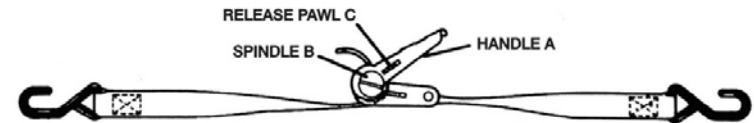

1. Hold ratchet cupped in one hand. With other hand pull back on Release Pawl ( C ) located on Handle (A). This will allow Handle (A) to be opened without tightening.

While holding Release Pawl ( C ) back, open Handle (A) to “wide open” position until load releases. **CAUTION!** Load will release at this point.

2. To loosen strap, pull on ratchet and side strap out of Spindle (B).