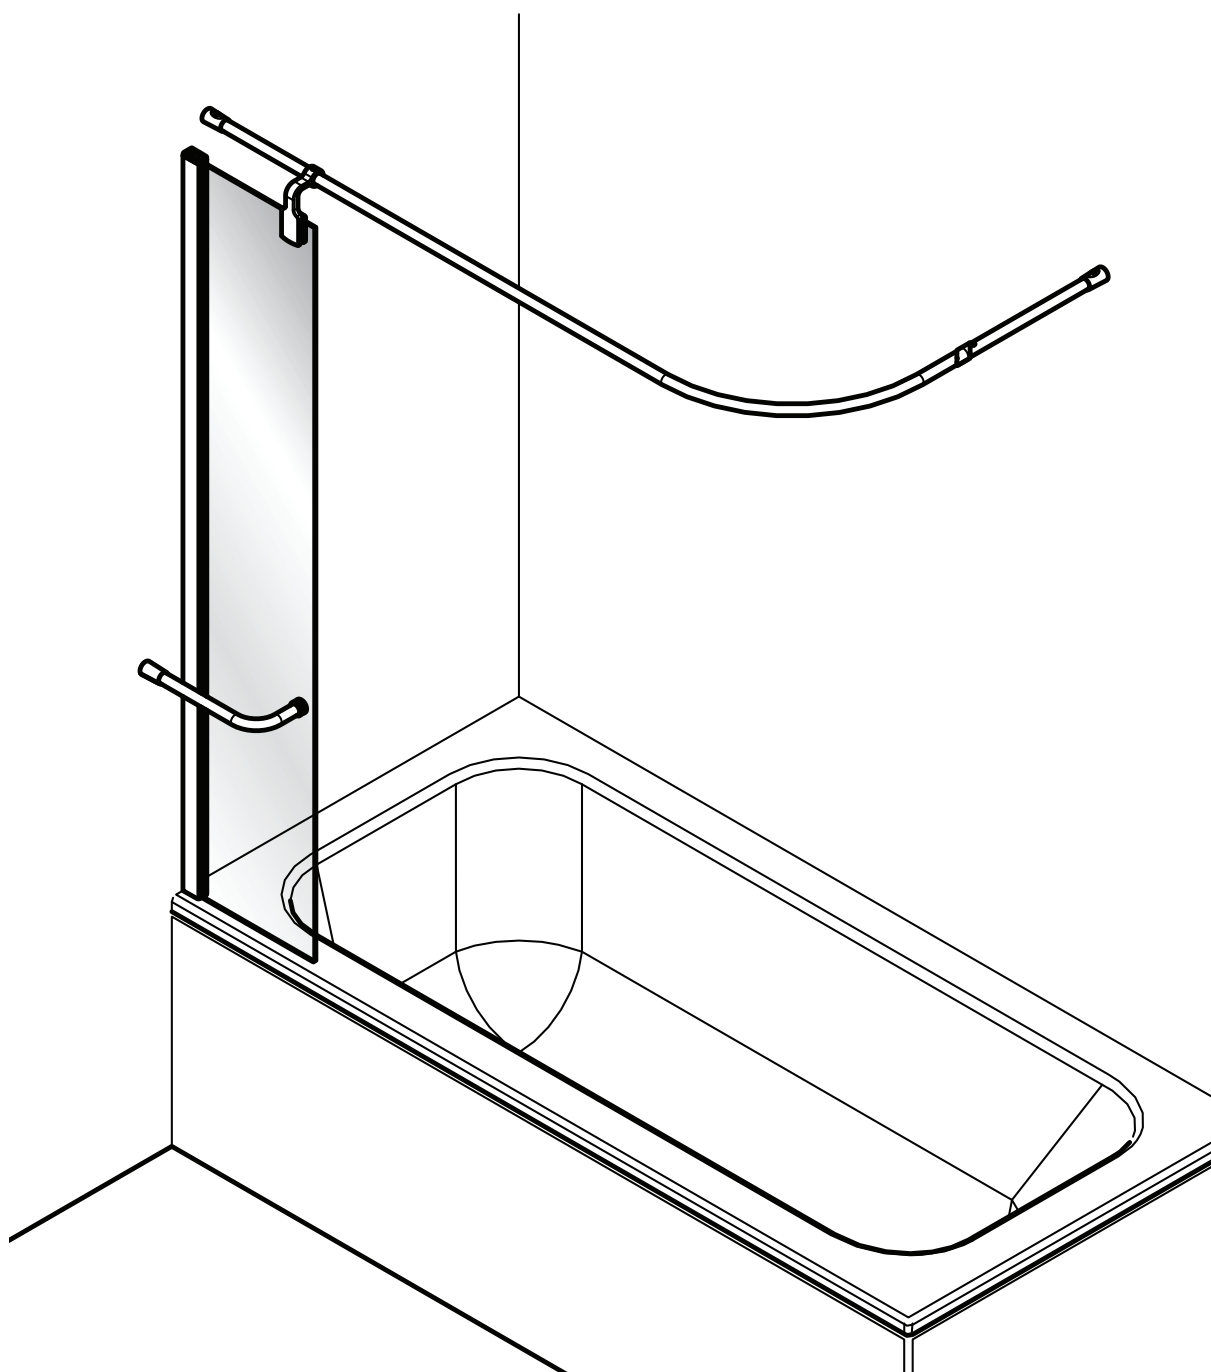# Assembly Instructions
Bath Screen with Rail
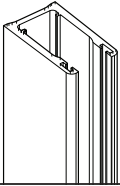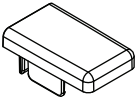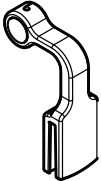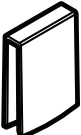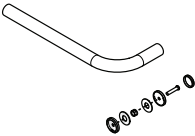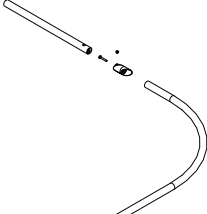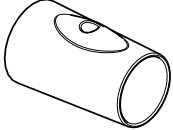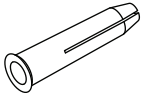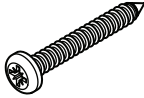
Parts Supplied

Ref	Description	Illustration	Qty
A	Wall Channel		1
B	Glass Screen		1
C	Wall Channel Cap		1
D	Glass Protector Moulding		3
E	Wall Channel Seal Strip		2
F	Curtain Rail Support Bracket		1
G	Support Bracket Glass Protection Pad		1

Parts Supplied

Ref	Description	Illustration	Qty
H	Support Bar		1
I	Curtain Rail		1
J	Wall Bracket		3

Fittings Supplied

Ref	Description	Illustration	Qty
K	Wall Plug		6
L	No.8 x 1¾" Pan Head Screws		6
M	M5 Grub Screw		4
N	M8 Grub Screw		1

Tools Required (not supplied)

Pencil
Spirit level
Tape Measure
Cross Head Screwdriver
Power Drill
Suitable 6mm Drill Bit
Silicone Gun & Sealant
Junior Hacksaw
Stanley Knife

Before You Start

Before starting we recommend the following checks:

- Check that the bath has been installed correctly and that it is level, tiled down onto and sealed to the manufacturer's guidelines.
- Check that there is sufficient space on the bath for the product and that the screen movement does not foul other items such as sinks and taps.
- Ensure the product is fitted to a non-porous surface i.e. tiled.
- Unpack and check the product is complete and undamaged.
- Ensure the area is clean, dry and dust free.
- Have the correct tools available.
- Read the instructions in full.
- When drilling walls check first for hidden pipes and cables.
- Note: Wall plugs supplied are for solid walls only; ensure correct wall plugs for wall types are used. If in doubt seek professional advice.
- Ensure curtain rail will span the bath adequately.
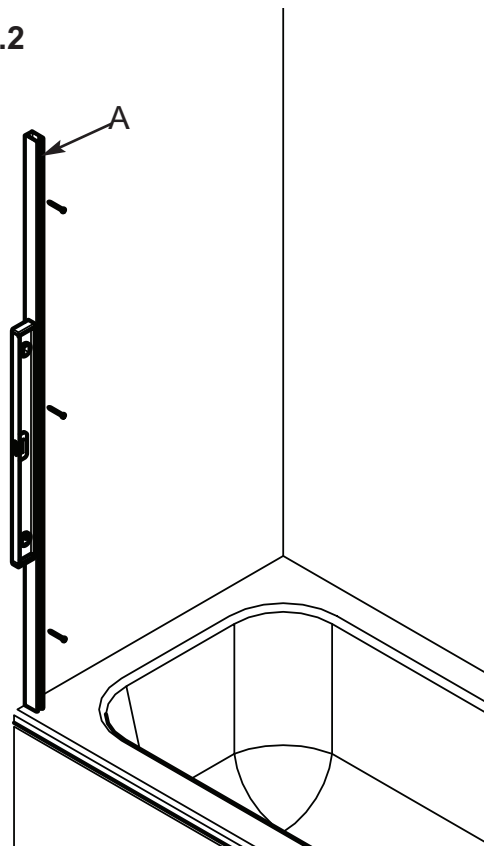
Assembly

1. Ensure that the bath is level. (see **Fig.1**)

Fig.1
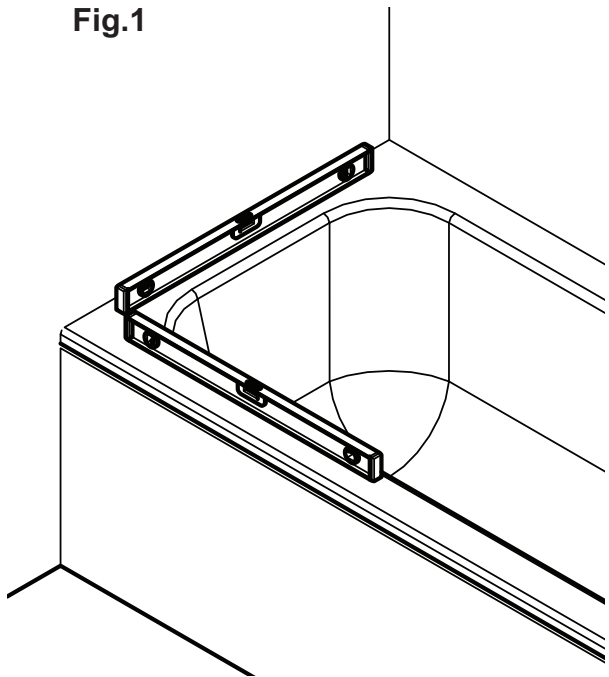
2. Position the wall channel (A). (see **Fig.2**)

Fig.2

A

2. Mark wall channel (A) hole positions.(see **Fig.2.1**)

   Drill 6mm dia. holes with drill bit suitable for wall surface. Insert wall plugs (K). (see **Fig.2.2**)
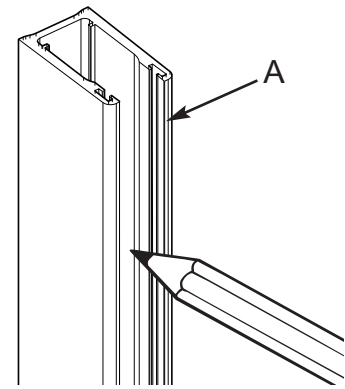
   Note; Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type are used. If in doubt seek professional advice.

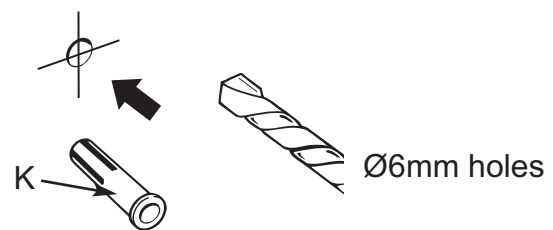   Insert wall channel seal strips (E) into wall channel (A). (see **Fig.2.3**)

   Insert No.8 x 1¾" screws (L) into glass protector mouldings (D).
   Use a cross head screw driver to fix wall channel (A). (see **Fig.2.4**)

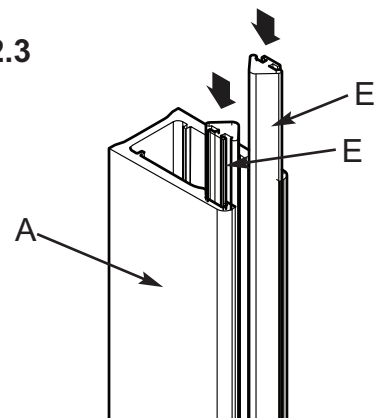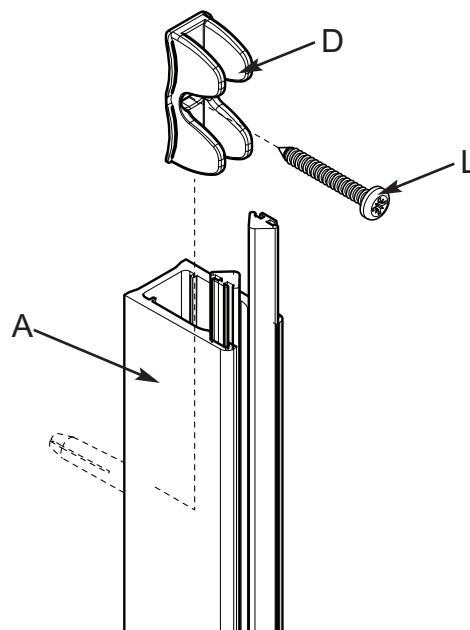   Use spirit level to ensure wall channel is level. (see **Fig.2**)

Fig.2.1

A

Fig.2.2

K

Ø6mm holes

Fig.2.3

E
E
A

Fig.2.4

D
L
A

3. Push glass screen (B) into position in wall channel (A). (see **Fig.3**)

Note; Ensure that glass screen is positioned with hole at the outer end towards the bottom.
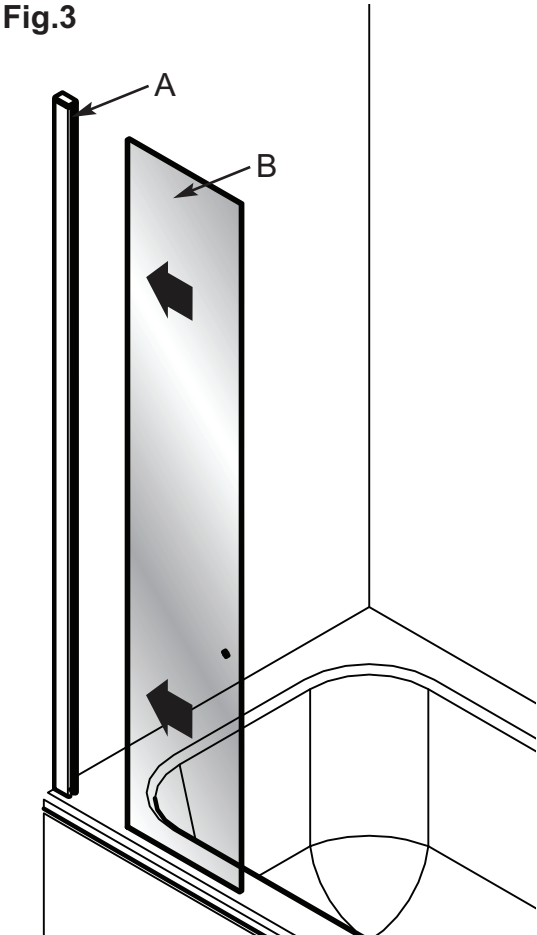
Fig.3

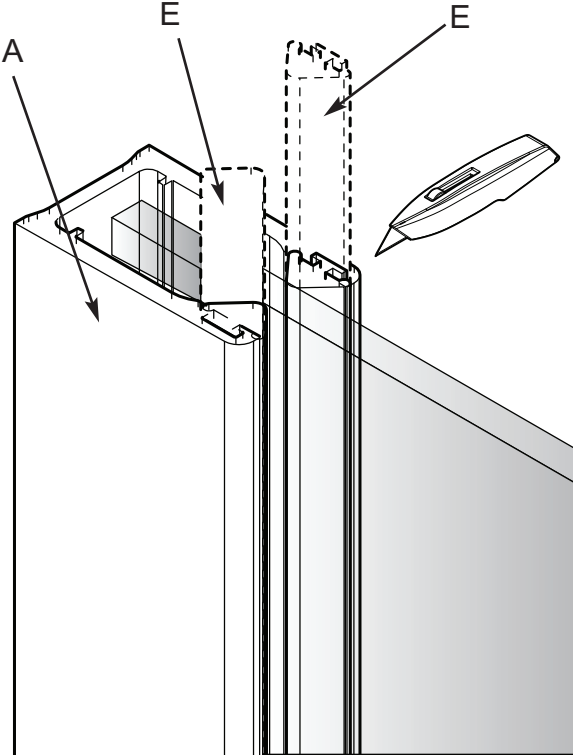4. Cut wall channel infill strips (E) to correct length to suit wall channel. (see **Fig.4**)

Fig.4

5. Mark wall bracket position as shown. (see **Fig.5**)

   Drill 6mm dia. hole with drill bit suitable for wall surface. Insert wall plugs (K). (see **Fig.5.1**)

   Note; Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type are used. If in doubt seek professional advice.

   Position wall bracket (J) with grub screw fixing hole facing downwards and fix No.8 x 1 ¾" screws (L) using a cross head screw driver. (see **Fig.5.2**)

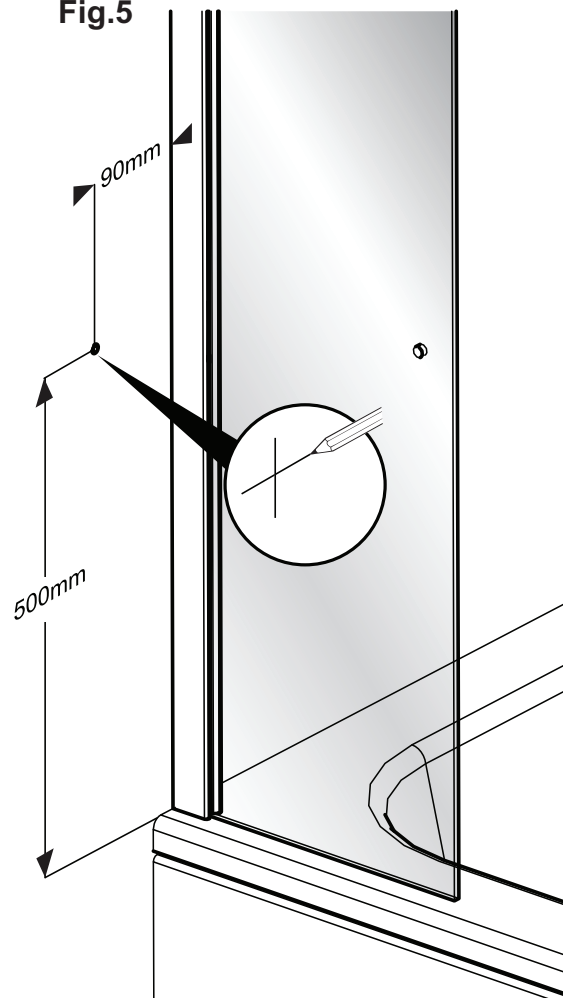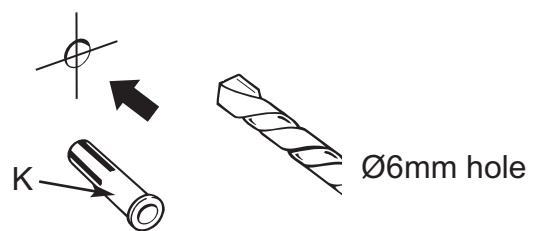**Fig.5**
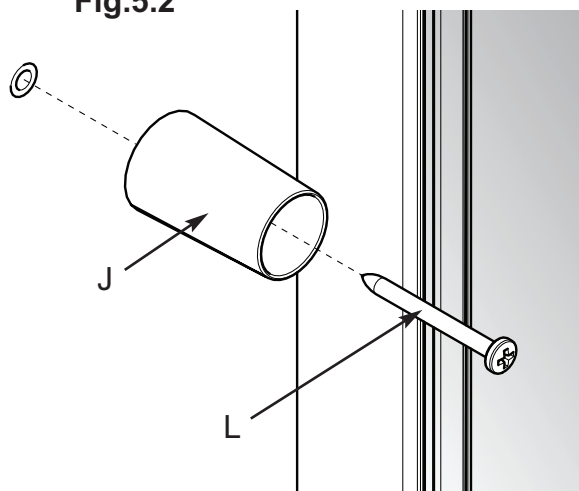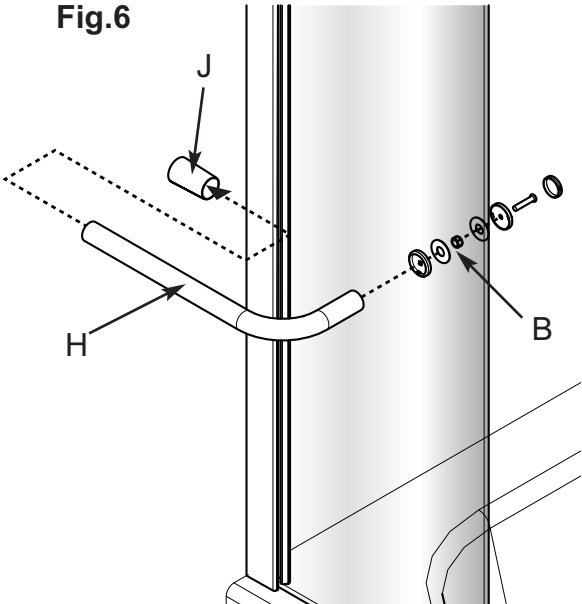
90mm

500mm

Fig.5.1
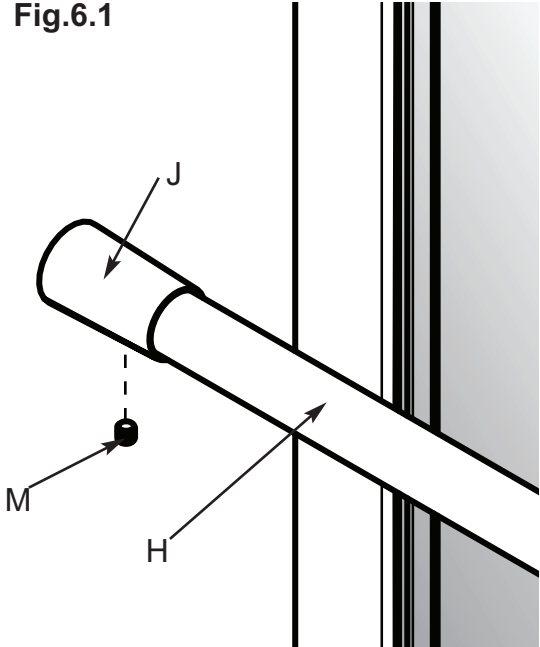
K

Ø6mm hole

Fig.5.2

J

L

6. Assemble support bar (H) and position into pre-drilled hole in glass screen (B) and wall bracket (J). (see **Fig.6**)

    Use allen key to fix M5 grub screw (M) into underside of wall bracket (J). (see **Fig.6.1**)

Fig.6

J

H

B

Fig.6.1

J

M

H

7. Mark first wall bracket position above wall channel (A) and glass screen (B) as shown. (see **Fig.7**)

Mark second wall bracket position as shown. Ensure both wall bracket positions are level with each other. (see **Fig.7.1**)

Note; *Dimension recommended only. May be reduced if required by cutting down rail.

Drill 6mm dia. holes with drill bit suitable for wall surface. Insert wall plugs (K). (see **Fig.7.2**)
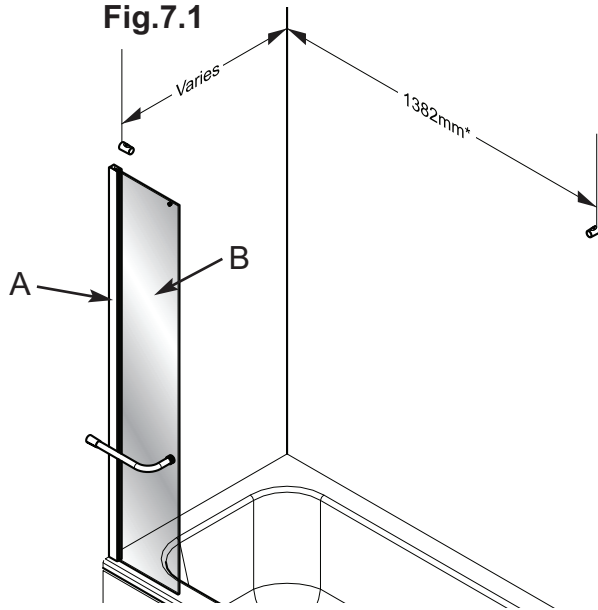
Note; Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type are used. If in doubt seek professional advice.

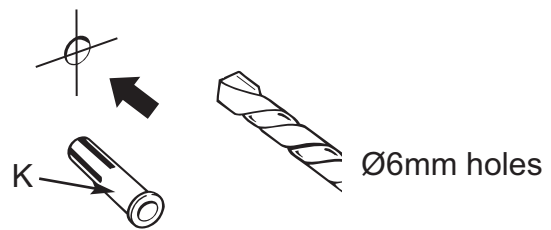Position wall bracket and fix No.8 x 1¾" screws (L) using a cross head screw driver. (see **Fig.7.3**)
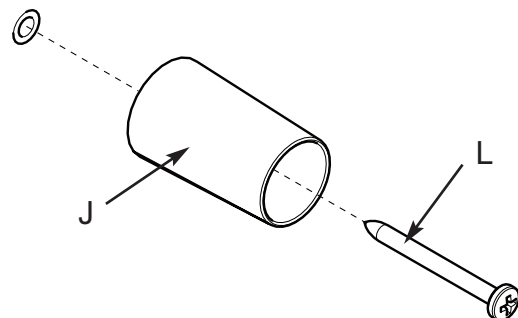
Fig.7

46mm

55mm

A

B

Fig.7.1

Varies

1382mm*

A

B

Fig.7.2

K

Ø6mm holes

Fig.7.2

J

L
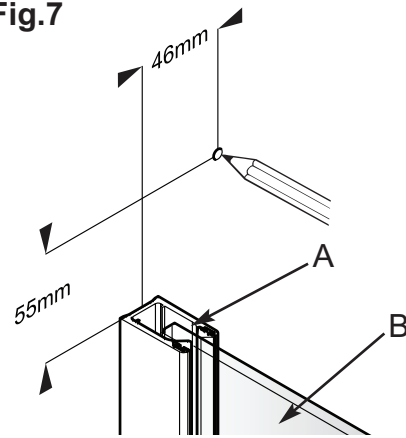
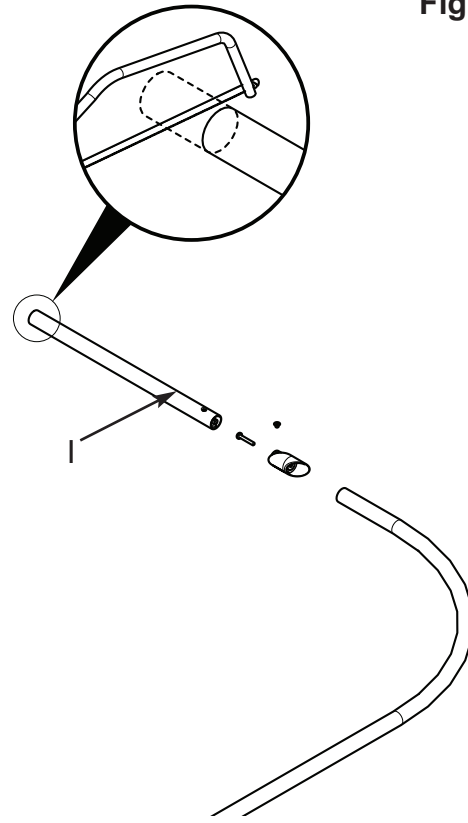8. Assemble curtain rail (I) as shown. (see **Fig.8**)

Note; Bar may be cut down at short end to suit different baths.

Locate curtain rail support bracket (F) onto curtain rail (I) and insert bracket glass protector pad (G). (see **Fig.8.1**)
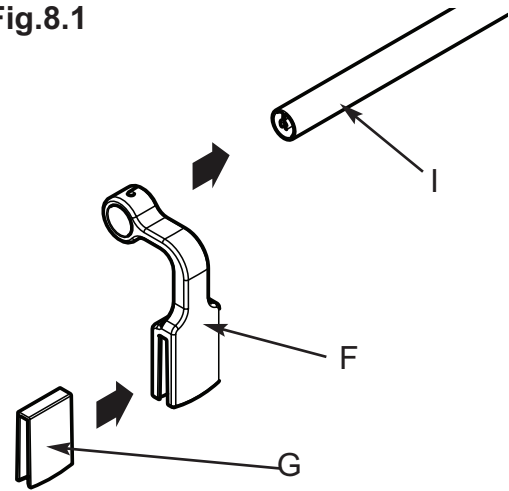
Note; Attach any curtain rings at this point.

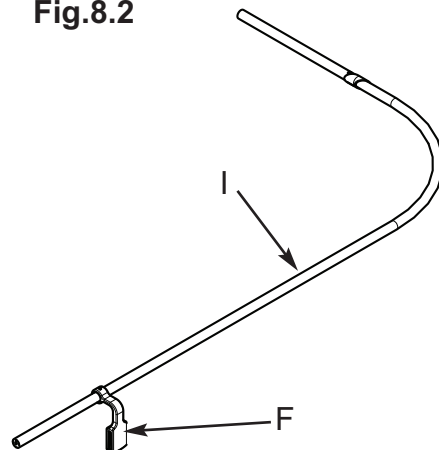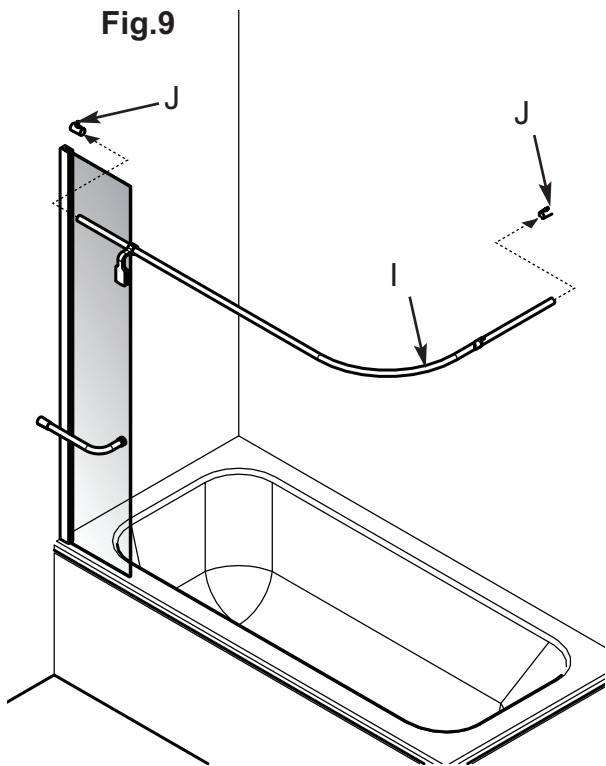Observe assembled curtain rail. (see **Fig.8.2**)
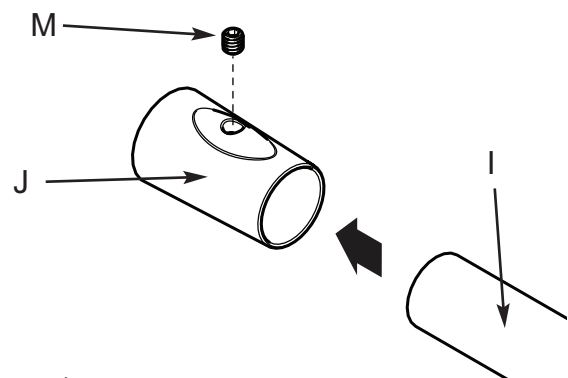
Fig.8

Fig.8.1

Fig.8.2

9. Position assembled cutain rail (I) into wall brackets (J). (see **Fig.9**)

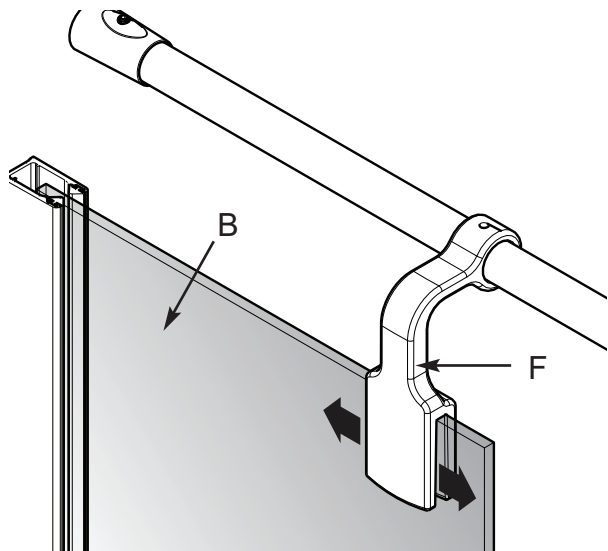   Use allen key to fix M5 grub screws (N) into top of wall brackets (J). (see **Fig.9.1**)

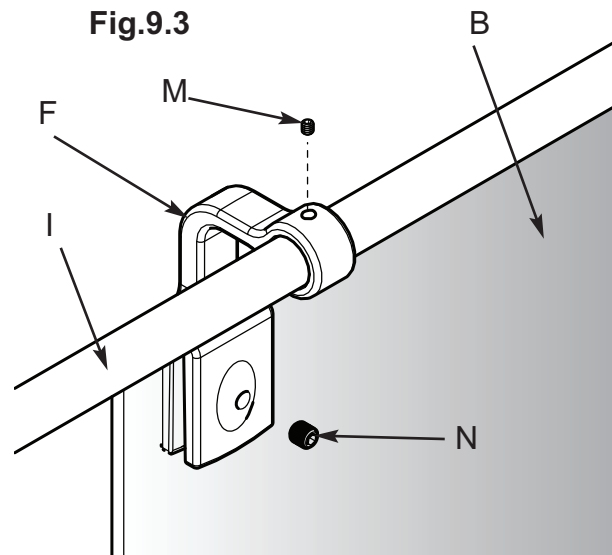   Adjust rail support bracket (F) into position on glass screen (B). (see **Fig.9.2**)

Fig.9

J

J

I

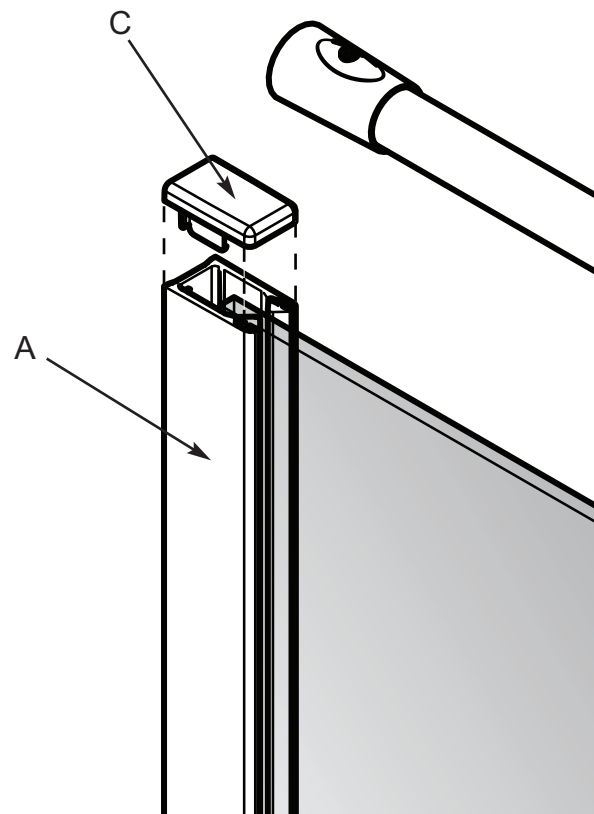**Fig.9.1**

M

J

I

Fig.9.2

B

F

9. Fix support bracket (F) using allen key to secure M5 grub screw (M) into curtain rail (I) and M8 grub screw (N) glass screen (B). (see **Fig.9.3**)

Note; When fixing grub screw to glass screen do not over tighten.

Fig.9.3

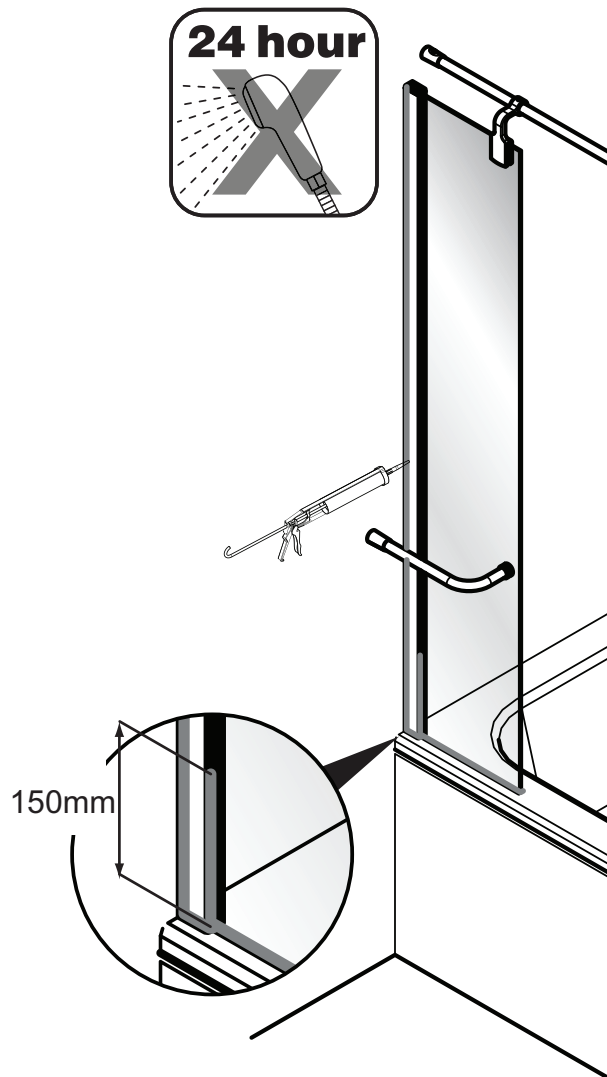10. Push fit wall channel cap (C) onto wall channel (A). (see **Fig.10**)

Fig.10

11. Apply silicone sealant along areas
shown using silicone gun. (see **Fig.11**)

DO NOT use for 24 hours.

Fig.11

150mm

Care & Use

- Handle unframed glass panels with care - support on cardboard to avoid risk of breakage.
- Use a non abrasive cleaner. Water marks may be removed with a proprietary lime scale remover or household vinegar.
- This product contains glass toughened that conforms to EN 12150-1 and if damaged should not be replaced with any other type of glass.