

Erbauer®



ERB382SDR

2Year
Guarantee

450W 150MM ROTARY SANDER

Original Instructions
(Version 2.0)

Erbauer®

Congratulations on your purchase of a quality power tool from Erbauer (UK) Ltd. This product should give you reliable service but for your peace of mind this **Erbauer** power tool does carry a 2 year guarantee, the terms of which are detailed below.

If this product develops a fault within the guarantee period contact your retailer.

Please retain this handbook in case you need to refer to safety, care or guarantee information in the future.

GUARANTEE

This **Erbauer** product carries a 2 year guarantee. If your product develops a fault within this period, you should in the first instance contact the retailer where the item was purchased.

This guarantee specifically excludes losses caused due to:

- Fair wear and tear
- Misuse or abuse
- Lack of routine maintenance
- Failure of consumable items (such as batteries)
- Accidental damage
- Cosmetic damage
- Failure to follow manufacturer's guidelines
- Loss of use of the goods


This guarantee does not affect your statutory rights. This guarantee is only valid in the UK.

For further technical advice, spare parts or repair service (outside of guarantee) please contact the customer helpline number on 0345 607 6380.

450W 150MM ROTARY SANDER

GENERAL SAFETY INSTRUCTIONS

WARNING! Read all safety warnings and all instructions.

 Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. Work area safety

- a. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. Electrical safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3. Personal safety

a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d. Remove any adjusting key or wrench before turning the power tool on.

A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

4. Power tool use and care

a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

450W 150MM ROTARY SANDER

c. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

5. Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

b) If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.


ADDITIONAL SAFETY POINTS FOR YOUR ROTARY SANDER

1. Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.
2. Fully unwind cable drum extensions to avoid potential overheating.
3. When an extension cable is required you must ensure it has the correct ampere rating for your power tool and is in a safe electrical condition.
4. Ensure your mains supply voltage is same as indicated on the rating plate.
5. Your tool is double insulated for additional protection against a possible electrical insulation failure within the tool.
6. Always check walls, floors and ceilings to avoid hidden power cables and pipes.
7. After long working periods external metal parts and accessories could be hot.
8. If possible, ensure the workpiece is firmly clamped to prevent movement.
9. Your rotary sander is a hand held tool, do not clamp your rotary sander.
10. Before sanding, check the area is free of nails, screws, etc.
11. Never stop the rotary sander by applying a force to the baseplate.
12. Only use paper in good condition. Do not use torn or worn paper.
13. Do not sand material containing asbestos due to a health risk.
14. Do not sand lead based paint due to the risk of lead poisoning.
15. Do not eat or drink in the working area of the sander.
16. Do not allow people to enter the working area without wearing a dust mask.
17. Where possible, seal off the working area to contain the dust for later removal.
18. Your tool is designed for dry sanding only, not wet sanding.
19. Your tool is designed for general purpose light polishing of wood and metals.
20. Do not sand magnesium material due to the risk of fire.
21. **Always wear safety glasses or eye shields when using the sander. Everyday eyeglasses have only impact-resistant**

450W 150MM ROTARY SANDER

lenses; they are not safety glasses. Following this rule will reduce the risk of serious personal injury.

22. Hearing protection should be worn when using the sander.
23. Harmful/toxic dusts will arise from sanding e.g. lead painted surfaces, woods and metals. Contact with or inhalation of these dusts can endanger the health of operator and bystanders. Always use eye glasses and dust mask.

 **Warning: Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm.** Some examples of these chemicals are:

- Lead from lead-based paint.
- Crystalline silica from bricks and cement and other masonry products.
- Arsenic and chromium from chemically-treated timber.

Your risk from these exposures varies, depending upon how often you do this type of work. To reduce your exposure to these chemicals:

- Work in a well-ventilated area.
- Work with approved safety equipment, such as those dust masks that are specially designed to filter microscopic particles.

VIBRATION

The European Physical Agents (Vibration) Directive has been brought in to help reduce hand arm vibration syndrome injuries to power tool users. The directive requires power tool manufacturers and suppliers to provide indicative vibration test results to enable users to make informed decisions as to the period of time a power tool can be used safely on a daily basis and the choice of tool.

Further Advice can be found at www.hse.gov.uk

Vibration total values (triax cover sum) determined according to EN 60745:	
Typical weighted vibration	Vibration emission value $a_h = 9.38 \text{ m/s}^2$
	Uncertainty $K = 1.5 \text{ m/s}^2$

The declared vibration emission value should be used as a minimum level and should be used with the current guidance on vibration.

Calculating the actual period of the actual period off use can be difficult and the HSE website has further information.

The declared vibration emission has been measured in accordance with a standardised test stated above and may be used to compare one tool with another tool.

The declared vibration emission value may also be used in a preliminary assessment of exposure.

Warning: The vibration emission value during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used dependant on the following examples and other variations on how the tool is used:-
How the tool is used and the materials being cut or drilled.
The tool being in good condition and well maintained.
The use of the correct accessory for the tool and ensuring it is sharp and in good condition.
The tightness of the grip on the handles.
And the tool is being used as intended by its design and these instructions.

While working with this power tool, hand/arm vibrations occur. Adopt the correct working practices in order to reduce the exposure to vibration.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.

Warning: Identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).Note The use of other tools will reduce the users' total working period on this tool.
Helping to minimise your vibration exposure risk.
ALWAYS use good quality accessories.
Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate)
Avoid using tools in temperatures of 10°C or less.
Plan your work schedule to spread any high vibration tool use across a number of days.

Health Surveillance

All employees should be part of an employer's health surveillance scheme to help identify any vibration related diseases at an early stage, prevent disease progression and help employees stay in work.

Double insulation

The tool is double insulated. This means that all the external metal parts are electrically insulated from the mains power supply. This is done by placing insulation barriers between the electrical and mechanical components making it unnecessary for the tool to be earthed.

Important note

Be sure the supply is the same as the voltage given on the rating plate. The tool is fitted with a two-core cable and plug.
Remove the mains plug from socket before carrying out, any adjustment or servicing.

450W 150MM ROTARY SANDER

SYMBOLS



To reduce the risk of injury, user must read instruction manual



Double insulation



Warning



Wear ear protection



Wear eye protection




Wear dust mask



Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist. Check with your Local Authority
or retailer for recycling advice.

yyWxx Manufacturing date code; Year of manufacturing (20yy) and week of manufacturing (Wxx);

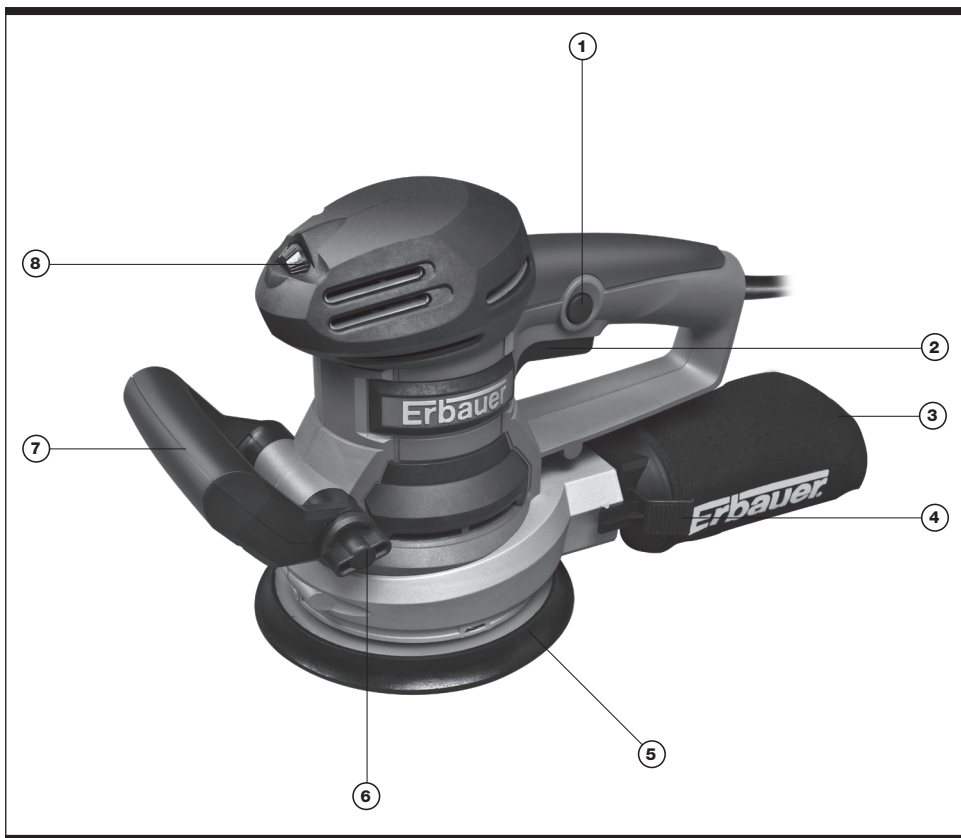

1. LOCK-ON BUTTON

2. ON-OFF SWITCH

3. DUST BAG WITH ADAPTOR

4. LATCHING LEVER

5. SANDING PLATE

6. WINGED SCREW FOR AUXILIARY HANDLE ADJUSTMENT

7. AUXILIARY HANDLE

8. VARIABLE SPEED CONTROL

9. SANDING PAPER (See Fig.1)

450W 150MM ROTARY SANDER

TECHNICAL DATA

Rated voltage	230-240V~50Hz
Rated input power	450W
Rated no-load speed	5000-12000/min
Base size	Ø150mm
Orbital diameter	5mm
Protection class	□/II
Machine weight	2.3kg

NOISE INFORMATION

A weighted sound pressure	L_{PA} :89.4dB(A)	K_{PA} =3.0dB(A)
A weighted sound power	L_{WA} :100.4dB(A)	K_{WA} =3.0dB(A)
Wear ear protection when sound pressure is over	80dB (A)	



ACCESSORIES

Dust bag with adaptor	1pc
Spare dust bag	1pc
Hook&loop sanding paper	6pcs

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

Intended Use

The machine is intended for dry sanding of wood, plastic, metal and filler material as well as painted surfaces.

Machines with electronic control are also suitable for polishing.

1. REPLACING THE SAND PAPER/SANDING PLATE

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

1) Selecting The Sand Paper

Depending on the material to be worked and the desired material removal, various Sand paper qualities are to be used:

- Use coarse grits to sand down rough finishes medium grit to smooth the work and fine grit to finish off.
- The higher the grade number, the finer the grit. For rough work, start with a low grade of grit. (e.g. 60grit) and change to a higher, finer grade (e.g. 120grit) for finishing.

2) Replacing The Sand Paper

Lift the Sand paper at the side and pull it off the sanding plate. Clean the sanding plate, if required. Press the new Sand paper against the bottom of the sanding plate. To ensure optimum dust extraction, the holes of the Sand paper must match with those of the sanding plate.

3) Replacing The Sanding Plate (See Fig. 1)

To replace the sanding plate, pull off the Sand paper. Loosen and remove the screw.

Replace damaged sanding plates without delay.



Fig. 1

450W 150MM ROTARY SANDER

2. DUST COLLECTION/EXTRACTION

- Dust produced while working can be detrimental to health, inflammable or explosive. Suitable protection measures are required. Examples: Some dusts are considered to be carcinogenic. Use suitable dust/chip extraction and wear a dust protection mask.
- Light metal dust can burn or explode. Always keep the work place clean since material mixtures are especially dangerous.

⚠ Caution: Fire hazard! For unfavorable conditions such as flying sparks when sanding metals, sanding dust in the dust bag, micro filter or paper sack (or in the filter sack or filter of the wet/dry vacuum cleaner) can self-ignite, especially when mixed with remainders of varnish, polyurethane or other chemical materials and when the sanded work piece is hot after long periods of working. Avoid overheating the object being sanded as well as the machine and always empty the dust container before pauses in the work.

1). Internal vacuuming with dust bag (See Fig. 2)

Attaching The Dust Bag

Place the dust bag on the outlet piece and allow the latching lever to latch.

Empty The Dust Bag

Always operate your sander with the dust bag fitted. For the best performance, always empty the dust bag in time. Open the zip and empty the dust from the bag.

2). External vacuuming

Use The Extraction Adapter (See Fig. 3)

Slide the extraction adapter onto the outlet piece and take care that the latching lever engages. For removal, press the latching lever in at the rear and pull off the extraction adapter.

External Vacuuming

When sanding vertical surfaces, hold the machine so that the extraction hose points downwards. The vacuum cleaner must be suitable for the material to be worked. When vacuuming dry dust that is especially detrimental to health or carcinogenic, use a special vacuum cleaner.



Fig. 2



Fig. 3

3. SWITCHING ON/OFF (See Fig.4)

On /Off Switch

Depress to start and release to stop your tool.

Lock-On Switch

Depress on/off switch (2) then lock-on button (1), release on/off switch first and lock-on button second. Your switch is now locked on for continuous use. To switch off your sander just depress and release the on/off switch

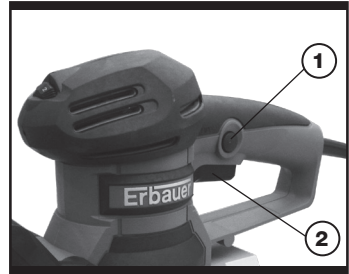


Fig. 4

4. AUXILIARY HANDLE (See Fig.5)

The auxiliary handle makes possible comfortable handling and optimum force application, especially for high material removal. The position of the auxiliary handle can be adjusted using winged screw.



Fig. 5

5. SPEED PRE-SELECTION

The required speed can be pre-selected with the variable speed control (8) (See Fig.6) (whilst running).

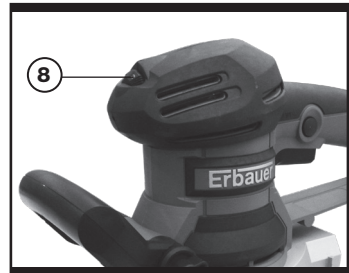


Fig. 6

6. SANDING PLATE BRAKE

An integrated sanding plate brake reduces the speed when running at no load so that scoring is avoided when placing the machine on the work piece. A continuously increasing no-load speed over the course of time indicates that the sanding plate brake is worn and must be replaced by an authorized customer service location.

7. SANDING SURFACES

Place the machine with the complete Sand paper on the surface to be worked. Ensure uniform sanding pressure. Less sanding pressure increases the sanding capacity and protects the machine and the sanding tool. The removal capacity and the sanding pattern are determined mainly by the selection of the Sand paper (grain size), the speed of the sanding plate and the application pressure.

Rough Sanding

Attach a Sand paper with coarse grain. Apply only light sanding pressure to achieve increased material removal.

Fine Sanding

Attach a Sand paper with fine grain. With moderate pressure, move the machine in a circular pattern or alternately in lengthwise and crosswise directions over the work piece. Do not tilt the machine to

450W 150MM ROTARY SANDER

avoid sanding through the work piece (e.g. when sanding veneer). After finishing the work, switch off the machine and lift it from the work piece.

Application table

The following table should be used only as a recommendation.

The most suitable combination for the work to be performed is best determined by practical trial.

Material	Grain Rough sanding/ Fine sanding	Variable speed control	Sanding plate
Paint roughing Paint touch-up Paint removal	180/400	3	Medium
	120/240	5	Hard
	40/80	4	Medium
Soft wood Hardwood Veneer	60/240	5	Soft
	60/180	5	Medium
	240/320	4	Soft
Aluminum Steel Rust removal from steel Stainless steel	80/240	4-5	Medium
	60/240	4	Medium/Hard
	40/120	6	Soft
	120/240	4	Medium

WORKING HINTS FOR YOUR ROTARY SANDER

If your power tool becomes too hot, especially when used at low speed, set the speed to maximum and run it with no load for 2-3 minutes to cool the motor. Avoid prolonged usage at very low speeds. Always use sand paper that is suitable for the material you want to sand.

Always ensure the work-piece is firmly held or clamped to prevent movement.

Any movement of the material may affect the quality of the sanding finish.

Start your sander before sanding and turn it off only after you stop sanding. For the best results, sand wood in the direction of the grain. Do not start sanding without having the sandpaper fitted.

Do not allow the sand paper to wear away it will damage the base-plate. The guarantee does not cover base-plate wear and tear.

Use coarse grit paper to sand rough surfaces, medium grit for smooth surfaces and fine grit for the final surfaces. If necessary, first make a test run on scrap material.

Use only good quality sand paper.

The sand paper controls the sanding efficiency, not the amount of force you apply to the tool. Excessive force will reduce the sanding efficiency and cause motor overload. Replacing the sand paper regularly will maintain optimum sanding efficiency.

MAINTENANCE

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

Your power tool requires no additional lubrication or maintenance. There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ENVIRONMENTAL PROTECTION



Waste electrical products should not be disposed of with household waste. Please  recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. For further information visit www.recycle-more.co.uk

450W 150MM ROTARY SANDER

PLUG REPLACEMENT (UK & IRELAND ONLY)

If you need to replace the fitted plug then follow the instructions below.

IMPORTANT

The wires in the mains lead are colored in accordance with the following code:


BLUE = NEUTRAL

BROWN = LIVE

As the colors of the wires in the mains lead of this appliance may not correspond with the colored markings identifying the terminals in your plug, proceed as follows. The wire which is colored blue must be connected to the terminal which is marked with **N**. The wire which is colored brown must be connected to the terminal which is marked with **L**.

⚠ Warning: Never connect live or neutral wires to the earth terminal of the plug. **Only fit an approved 13AMP BS1363/A plug and the correct rated fuse.**

Note: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

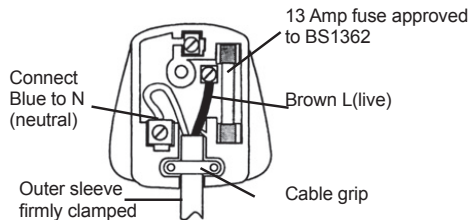

Erbauer®

EC DECLARATION OF CONFORMITY

We, Importer
Erbauer (UK) Ltd BA22 8RT

Declare that the product
Description: **450W 150MM Rotary Sander**
Model: **ERB382SDR**

Complies with the following Directives,
EC Machinery Directive **2006/42/EC**
EC Electromagnetic Compatibility Directive **2004/108/EC**
EC Low Voltage Directive **2006/95/EC**

Restrictions of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment **2011/65/EU**
Waste Electrical and Electronic Equipment (WEEE) **2012/19/EU**

Standards conform to:

EN 55014-1
EN 55014-2
EN 61000-3-2
EN 61000-3-3
EN 60745-1
EN 60745-2-4

Authorised Signatory and technical file holder

Date: 06/03/15

Signature: P. C. Harries

Name / title: Peter Harries / Quality Manager
Erbauer (UK) Ltd. Trade House, Mead Avenue, BA22 8RT



Erbauer®