



Fitting and wiring Instructions –

- 1). Before commencing work switch off the power supply by removing the fuse in the fuse box, or switch off circuit breaker in the consumer unit.
- 2). If unit is to be used as a replacement for an existing product, remove existing unit from its location And disconnect the wiring.
- 3). Certain items in the range will not fit into a 4 lug box. If such a box has been previously installed the North South lugs should be removed or bent back to avoid contact with the interior.
- 4). Remove the metal front plate of the new unit by –
For Flatplate – Unscrew the two small fixing screws.
For Low Profile – By inserting a small screwdriver into the slot/s in the plate and lifting away from the unit.
- 5). Connect the wires as shown in appropriate wiring diagrams below and overleaf. Use green/yellow sleeving on earth conductors not insulated. Ensure terminals are properly tightened and no bare wire is visible. Push back units into mounting box making sure conductors are not trapped.
- 6). For Flatplate – Screw the grid plate to the mounting box so that its front face is flush with the wall.
Assemble the metal front plate using the small fixing screws.
For Low Profile – Screw the grid plate to the mounting box; do not over tighten the fixing screws. Align the 2 studs on the back of the metal plate with the corresponding holes in the grid plate and push firmly into position.
- 7). To reduce the risk of discolouration or tarnishing, avoid installation on wet plaster.
- 8). These products must be installed in accordance with the latest Building and IEE wiring regulations. If in any doubt, please contact a qualified electrician.


1 GANG 1 WAY 10AX SWITCH

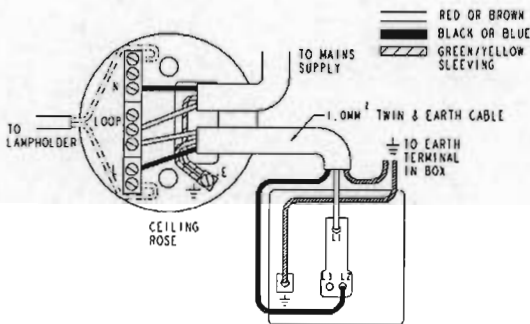


1 GANG 2 WAY 10AX SWITCH

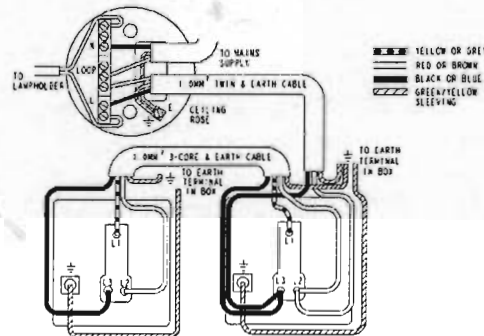


2 GANG 2 WAY 10AX SWITCH

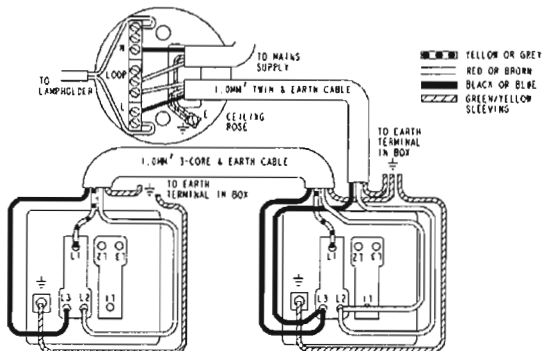


3 GANG 2 WAY 10AX SWITCH

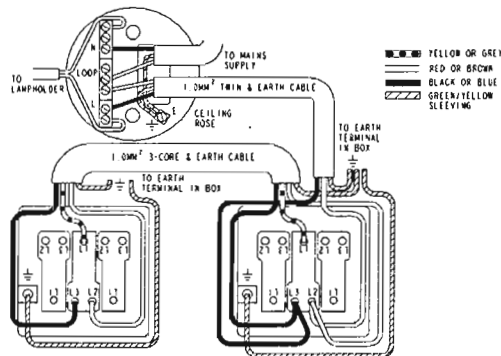

20A D.P. SWITCH

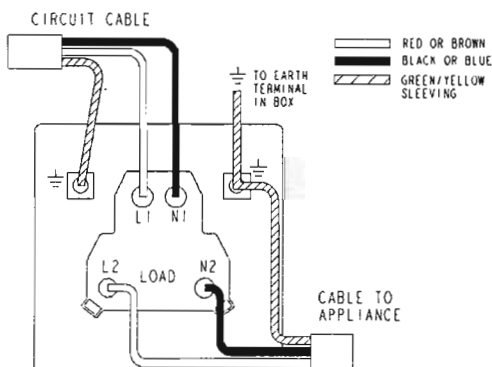


CO-AXIAL SOCKET OUTLET

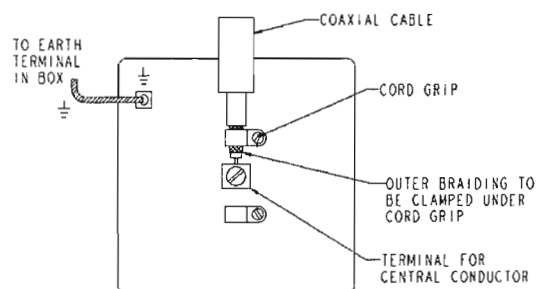

21301
22087
22166
25676

1 GANG 1 WAY AND 2 WAY DIMMER


CHECK TOTAL LOAD IS WITHIN 40W MIN TO 250W MAX FOR 250W DIMMERS
CHECK TOTAL LOAD IS WITHIN 60W MIN TO 400W MAX FOR 400W DIMMERS

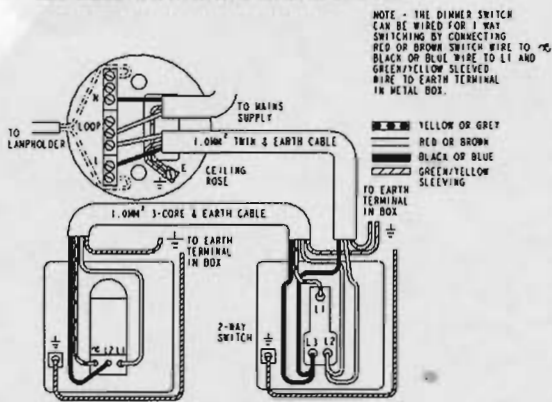


13A 1 GANG SWITCHED SOCKET

2 GANG 1 WAY AND 2 WAY DIMMER


CHECK TOTAL LOAD OF EACH MODULE IS WITHIN 40W MIN TO 250W MAX FOR 250W DIMMERS
CHECK TOTAL LOAD OF EACH MODULE IS WITHIN 60W MIN TO 400W MAX FOR 400W DIMMERS

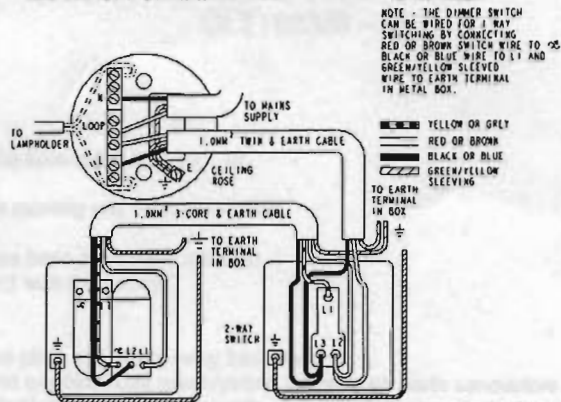


13A 2 GANG SWITCHED SOCKET

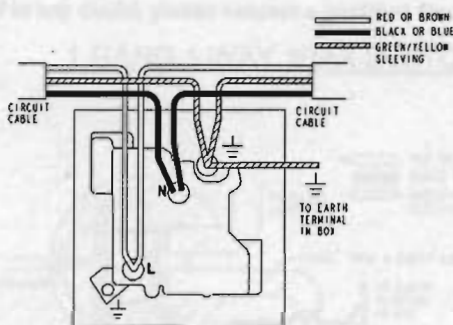

45A COOKER CONTROL SWITCH

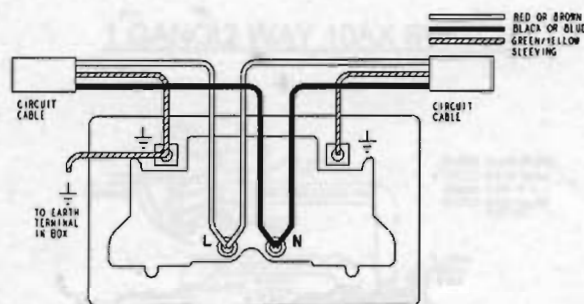

13A SWITCHED CONNECTION UNIT

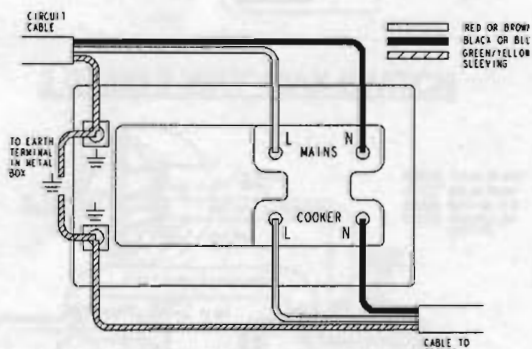


SECONDARY TELEPHONE OUTLET

Secondary sockets are for adding extensions. These may be from a Master socket or from another Secondary socket. The procedure is the same for both arrangements.

On the reverse side of the socket there are two rows of 3 slot/connectors. Connectors 2, 3, 4 and 5 on the Master socket are connected to connectors 2, 3, 4, and 5 on the Secondary socket using 4-core telephone cable. To attach the wires to the connectors, position the wire into the connector 'V' slot leaving approximately 20mm overhang and push downwards then remove excess wire. Ensure the same colour wire is used for the same terminal in each socket

Using a green/yellow sleeved copper wire the grid earth terminal should be connected to the earth terminal in the fixing box.

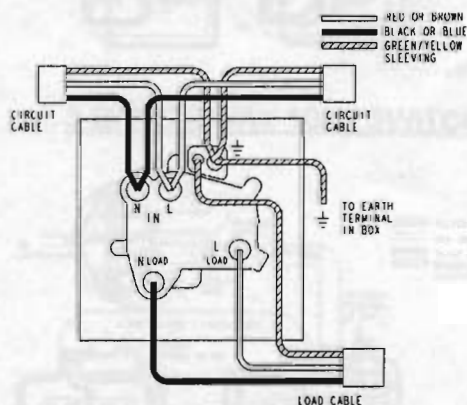

46356
24960
31502
37848